


OPERATING AND SERVICE MANUAL

DISTORTION MEASUREMENT SET

339A **HEWLETT
PACKARD**

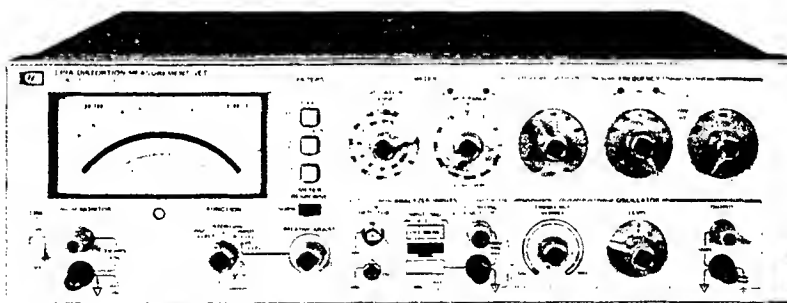

HEWLETT
PACKARD

OPERATING AND SERVICE MANUAL

MODEL 339A

DISTORTION MEASUREMENT SET

Serial Numbers: 1730A01162 and Greater

IMPORTANT NOTICE

This manual applies directly to instruments with serial number shown on this page. If changes have been made in the instrument since this manual was printed, a "Manual Changes" supplement supplied with this manual will define these changes. Be sure to record this information in your manual. Backdating information contained in Section VII adapts this manual to instruments having serial numbers lower than those shown on this page.

WARNING

To help minimize the possibility of electrical fire or shock hazards, do not expose this instrument to rain or excessive moisture.

Manual Part No. 00339-90001

Microfiche Part No. 00339-90051

© Copyright Hewlett-Packard Company 1984
P.O. Box 69, Marysville, Washington 98270 U.S.A.

Reproduced with Permission, Courtesy of Agilent Technologies, Inc.

TABLE OF CONTENTS

Section	Page	Section	Page
I. General Information.....	1-1	III. 3-39. Oscillator Operation	3-5
1-1. Introduction	1-1	3-40. Frequency Selection	3-5
1-4. Specifications	1-1	3-42. Output Level	3-5
1-6. Instrument and Manual		3-44. Operational Verification	
Identification.....	1-1	Checks	3-5
1-10. Description	1-1	3-46. Preliminary Procedure	3-5
1-17. Options	1-2	3-48. Oscillator	3-5
1-19. Recommended Test		3-50. AC Voltmeter	3-5
Equipment	1-2	3-52. Distortion Analyzer	3-6
		3-54. Filters	3-6
		3-56. Operator's Maintenance	3-7
		3-57. Fuse Replacement.....	3-7
		3-59. Adjustment of Meter	
		Mechanical Zero	3-7
Section	Page	Section	Page
II. Installation.....	2-1	IV. Performance Test	4-1
2-1. Introduction	2-1	4-1. Introduction	4-1
2-3. Initial Inspection	2-1	4-3. Equipment Required	4-1
2-5. Preparation For Use	2-1	4-5. Test Record	4-1
2-6. Power Requirements	2-1	4-7. Calibration Cycle	4-1
2-8. Line Voltage Selection	2-1	4-9. Voltmeter Performance Tests	4-1
2-10. Power Cable	2-1	4-11. Full-Scale Accuracy and	
2-12. Grounding Requirements.....	2-1	Frequency Response Test.....	4-1
2-14. Bench Use	2-2	4-12. Meter Tracking and Monitor	
2-16. Rack Mounting.....	2-2	Output Accuracy Test.....	4-2
2-18. Environmental Requirements.....	2-2	4-13. RMS Accuracy	
2-19. Operating and Storage		(crest factor) Test.....	4-4
Temperature	2-2	4-14. Filter Accuracy Test	4-4
2-22. Humidity	2-2	4-15. Oscillator Performance Tests	4-5
2-24. Altitude	2-2	4-16. Output Level and	
2-26. Repackaging For Shipment	2-2	Flatness Test.....	4-5
		4-17. Output Impedance Test	4-5
		4-18. Oscillator Frequency Accuracy Test ..	4-6
		4-19. Oscillator Total Harmonic	
		Distortion Test.....	4-7
		4-20. Distortion Analyzer	
		Performance Tests	4-8
		4-22. Fundamental Rejection and	
		Induced Distortion Test	4-8
		4-24. Distortion Measurement	
		Accuracy Test	4-10
		4-25. Residual Noise Test	4-11
		4-26. Input Impedance Test	4-11
Section	Page	Section	Page
III. Operation	3-1	V. Adjustments.....	5-1
3-1. Introduction	3-1	5-1. Introduction	5-1
3-3. Operating Characteristics	3-1	5-3. Equipment Required	5-1
3-4. General	3-1	5-5. Adjustment Locations	5-1
3-11. True RMS vs Average			
Responding Detection.....	3-1		
3-13. Turn-On and Warm-Up.....	3-2		
3-15. Distortion Measurement	3-2		
3-16. Distortion Measurement Using the			
339A Internal Oscillator	3-2		
3-18. Distortion Measurement of an			
External Source	3-3		
3-20. AM Detector.....	3-3		
3-22. Voltmeter Operation	3-3		
3-24. Normal Voltmeter Operation	3-3		
3-26. Relative Level Operation	3-4		
3-28. Oscillator Level Operation	3-4		
3-31. VU Measurements	3-4		
3-33. Filters	3-4		
3-35. Input Ground Select.....	3-4		
3-37. Monitor Output	3-5		

TABLE OF CONTENTS (Cont'd)

Section	Page
V. 5-7. Factory Selected Components	5-1
5-9. Voltmeter Adjustments	5-1
5-10. Mechanical Meter Zero	5-1
5-12. Gain Adjustments	5-1
5-13. Oscillator Adjustments	5-2
5-14. Amplitude Adjustment	5-2
5-15. Frequency Adjustment	5-2
5-16. Analyzer Adjustments	5-2
5-17. Notch Filter Null Adjust	5-2
5-18. High Frequency Adjustment	5-4

Section	Page
VI. Replaceable Parts	6-1
6-1. Introduction	6-1
6-4. Ordering Information	6-1
6-6. Non-Listed Parts	6-1
6-8. Parts Changes	6-1
6-10. Proprietary Parts	6-2

Section	Page
VII. Manual Changes	7-1/7-2
7-1. Introduction	7-1/7-2
7-3. Manual Changes	7-1/7-2
7-6. Manual Change Instructions	7-1/7-2

Section	Page
VIII. Service	8-1
8-1. Introduction	8-1
8-3. Safety Considerations	8-1
8-8. Recommended Test Equipment	8-1

THEORY OF OPERATION

8-10. General Description	8-1
8-22. Circuit Descriptions	8-2
8-23. Input Circuitry	8-2
8-26. Input Amplifier	8-3
8-28. Input Overload Protection	8-3
8-30. Analyzer Circuitry	8-3
8-31. Notch Filter	8-3
8-33. Capacitance Neutralizer	8-5
8-35. Amplitude Error Detector	8-6
8-37. Phase Error Detector	8-6
8-39. Auto Set - Level Circuit	8-7
8-41. Meter Circuits	8-7
8-43. Oscillator Circuit	8-8

LIST OF TABLES

Table	Page
1-1. Specifications	1-2
1-2. Typical Operating Characteristics	1-4
1-3. Recommended Test Equipments	1-4
4-1. Full-Scale Accuracy and Frequency Response Test Limits	4-2
4-2. Meter Tracking and MONITOR Output Accuracy Tests	4-4
4-3. Oscillator Output Limits (Flatness Test)	4-6
4-4. Oscillator Frequency Accuracy Test	4-7
4-5. Oscillator Total Harmonic Distortion Test	4-8
4-6. Fundamental Rejection and Induced Distortion Test	4-10
4-7. Distortion Measurement Accuracy Test	4-11
5-1. Factory Selected Components	5-7
5-2. Adjustable Components	5-7
6-1. Standard Abbreviations	6-1
6-2. Code List Of Manufacturers	6-2
6-3. Replaceable Parts	6-3
7-1. Manual Changes by Serial Number	7-1/7-2

TABLE OF CONTENTS (Cont'd)

LIST OF ILLUSTRATIONS

Figure	Page	Figure	Page
2-1. Line Voltage Selection	2-1	5-2. Notch Filter High Frequency Adjust ...	5-5/5-6
2-2. Power Cord Configurations	2-1	5-3. Adjustment Locations	5-7
3-2. Distortion Measurement Using 339A Internal Oscillator	3-2	6-1. Mechanical Parts Locator	6-15/6-16
3-3. Distortion Measurement of an External Source	3-3	7-1. Amplitude Control Circuit Change	7-1/7-2
3-1. Control, Connector and Indicator Descriptions	3-0	8-1. Model 339A Simplified Block Diagram	8-2
4-1. Full-Scale Accuracy and Frequency Response Test	4-1	8-2. Simplified Input Amplifier Schematic	8-3
4-2. Meter Tracking and Monitor Output Accuracy Test	4-2	8-3. Simplified Notch Filter Schematic	8-4
4-3. RMS Accuracy Test	4-3	8-4. Effect of Feedback	8-4
4-4. Filter Accuracy Test	4-3	8-5. Simplified Capacitance Neutralizer Schematic	8-5
4-5. Oscillator Output Level and Flatness Test	4-5	8-6. Simplified Amplitude Error Detector Schematic	8-5
4-6. Oscillator Output Impedance Test	4-6	8-7. Simplified Phase Error Detector Schematic	8-6
4-7. Oscillator Frequency Accuracy Test	4-6	8-8. Simplified Auto Set-Level Circuit	8-7
4-8. Oscillator Total Harmonic Distortion Test	4-8	8-9. Simplified Meter Circuit Schematic	8-8
4-9. Logarithmic Addition of Harmonic Components	4-8	8-10. Simplified Oscillator Circuit	8-8
4-10. Fundamental Rejection and Induced Distortion Test	4-9	8-11. Simplified Amplitude Control Circuit	8-9
4-11. Distortion Measurement Accuracy Test	4-10	8-12. AM Detector and Input Switching	8-11/8-12
4-12. Shielded Load Assembly	4-11	8-13. Input Attenuator and Input Amplifier	8-13/8-14
4-13. Input Impedance Test	4-12	8-14. Fundamental Rejection Circuit	8-15/8-16
5-1. Notch Filter Null Adjustments	5-3	8-15. Error Detector Circuits	8-17
		8-16. Auto Set-Level and Meter Circuits	8-19/8-20
		8-17. Oscillator Circuits	8-21/8-22
		8-18. Power Supplies	8-23/8-24

SAFETY SYMBOLS

 
General Definitions of Safety Symbols Used On Equipment or In Manuals.



Instruction manual symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect against damage to the instrument.



Indicates dangerous voltage (terminals fed from the interior by voltage exceeding 1000 volts must be so marked).



Protective conductor terminal. For protection against electrical shock in case of a fault. Used with field wiring terminals to indicate the terminal which must be connected to ground before operating equipment.



Low-noise or noiseless, clean ground (earth) terminal. Used for a signal common, as well as providing protection against electrical shock in case of a fault. A terminal marked with this symbol must be connected to ground in the manner described in the installation (operating) manual, and before operating the equipment.



Frame or chassis terminal. A connection to the frame (chassis) of the equipment which normally includes all exposed metal structures.



Alternating current (power line).



Direct current (power line).



Alternating or direct current (power line).

WARNING

The WARNING sign denotes a hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in injury or death to personnel.

CAUTION

The CAUTION sign denotes a hazard. It calls attention to an operating procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product.

NOTE :

The NOTE sign denotes important information. It calls attention to procedure, practice, condition or the like, which is essential to highlight.

SECTION I GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. This Operating and Service Manual contains information necessary to install, operate, test, adjust, and service the Hewlett-Packard Model 339A Distortion Measurement Set.

1-3. This section of the manual contains the performance specifications and general operating characteristics of the Model 339A. Also listed are available options and accessories, and instrument and manual identification information.

1-4. SPECIFICATIONS.

1-5. Operating Specifications for the Model 339A are listed in Table 1-1. These specifications are the performance standards or limits against which the instrument is tested. Table 1-2 lists general operating characteristics of the instrument. These characteristics are not specifications but are typical operating characteristics included as additional information for the user.

1-6. INSTRUMENT AND MANUAL IDENTIFICATION.

1-7. Instrument identification by serial number is located on the rear panel. Hewlett-Packard uses a two-section serial number consisting of a four-digit prefix and a five-digit suffix separated by a letter designating the country in which the instrument was manufactured. (A = U.S.A.; G = West Germany; J = Japan; U = United Kingdom.) The prefix is the same for all identical instruments and changes only when a major instrument change is made. The suffix, however, is assigned sequentially and is unique to each instrument.

1-8. This manual applies to instruments with serial numbers indicated on the title page. If changes have been made in the instrument since the manual was printed, a yellow "Manual Changes" supplement supplied with the manual will define these changes and explain how to adapt the manual to the newer instruments. In addition, backdating information contained in Section VII adapts the manual to instruments with serial numbers lower than those listed on the title page.

1-9. Part numbers for the manual and the microfiche copy of the manual are also listed on the title page.

1-10. DESCRIPTION.

1-11. The Model 339A Distortion Measurement Set combines a low distortion signal source, a high resolution distortion analyzer, an rms responding voltmeter and a VU (volume units) meter in one unit.

1-12. The signal source used in the Model 339A is a "bridged-T" oscillator which provides a low distortion sine-wave signal from 10 Hz to 110 kHz. The output amplitude is variable from 1 mV rms to 3 V rms into a 600 ohm load and is maintained by an amplitude control circuit which minimizes amplitude variations even when changing frequency ranges.

1-13. The distortion analyzer section of the 339A contains a tracking notch filter which is tuned to the oscillator frequency. The analyzer measures total harmonic distortion (THD) from 100% full-scale to .01% full-scale in nine ranges and features both automatic "Set Level" and automatic "Nulling" to greatly simplify operation. The Auto Set Level feature automatically sets the reference level over a 10 dB range. If the input signal is outside this range, a LED on the front panel indicates whether the INPUT RANGE control setting must be increased or decreased to be within the "pull-in" range of the Auto Set Level. The Auto Nulling feature is fully automatic when the 339A internal oscillator is used as the signal source. When an external oscillator is used as the signal source, an LED on the front panel indicates which direction the FREQUENCY controls must be set to be within the Auto Nulling range. Distortion characteristics of the input signal can be monitored at the MONITOR OUTPUT terminals with external equipment (oscilloscope, voltmeter, spectrum analyzer, etc.) to provide additional analysis of the distortion products.

1-14. The Model 339A is equipped with an amplitude modulation (AM) detector which has a frequency response from 550 kHz to 1.6 MHz. The AM detector permits the measurement of modulation distortion.

1-15. The 339A contains three active filters, one high-pass and two low-pass, which enables the user to eliminate unwanted frequencies and noise to permit higher resolution measurements.

1-16. The ac voltmeter section of the 339A measures the rms value of input voltage from 1 mV full-scale to 300 V full-scale in twelve ranges. In the VU meter mode, the

meter response characteristics are changed to those of a volume units meter.

Option 908: Rack Mounting Kit
 Option 909: Front Handle and Rack Mounting Kit
 Option 910: Additional Operating and Service Manual

1-17. OPTIONS.

1-18. The following options are available for use with the Model 339A:

Option 907: Front Handle Kit

1-19. Recommended Test Equipment

1-20. Equipment required to maintain the Model 339A is listed in Table 1-3. Other equipment may be substituted if it meets the critical requirements listed in the table.

Table 1-1. Specifications.

DISTORTION	
Fundamental Frequency Range:	DC Isolation:
10 Hz to 110 kHz continuous frequency coverage in 4 decade ranges with 2-digit resolution. Distortion analyzer and oscillator are simultaneously tuned.	Input low may be connected to chassis ground or floated 30 V to reduce the effects of ground loops on the measurement.
Distortion Measurement Range:	Auto Set Level:
0.01% full scale to 100% full scale (-80 dB to 0 dB) in 9 ranges.	No set level adjustment required. Distortion measurements are made directly over 10 dB range selected by input range switch. Two LED annunciators provide a fast visual indication to change input range for valid distortion measurement. Correct range is indicated when both annunciators are extinguished.
Detection and Meter Indication:	Auto Null:
True rms detection for waveforms with crest factor ≤ 3 . Meter reads dB and % THD (Total Harmonic Distortion). Meter response can be changed from NORMAL to VU ballistics with a front panel switch.	Using internal oscillators: No manual frequency tuning necessary when using internal oscillator as signal source. Oscillator frequency controls simultaneously tune the analyzer.
Distortion Measurement Accuracy:	Using external frequency source: Two LED annunciators provide a quick visual indication for the operator to increase or decrease the analyzer frequency controls. When the analyzer is rough tuned to within one least significant digit of the fundamental frequency, the indicator lights are extinguished and the 339A auto-null circuitry takes over to provide a fast accurate null without tedious operator tuning.
20 Hz to 20 kHz ± 1 dB 10 Hz to 50 kHz $+1, -2$ dB 50 kHz to 110 kHz $+1.5, -4$ dB	Input Filters (usable on all functions):
NOTE	Low Pass
The above specifications apply for harmonics < 330 kHz.	30 kHz - 3 dB point at 30 kHz, + 2.6 kHz, - 3 kHz. Provides band limiting required by FCC for proof-of-performance broadcast testing.
Fundamental Rejection:	80 kHz - 3 dB point at 80 kHz, + 7 kHz, - 7.9 kHz. Normally used with fundamental frequencies < 20 kHz to reduce the effect of higher frequency noise present in the measured signal.
10 Hz to 20 kHz > 100 dB 20 kHz to 50 kHz > 90 dB 50 kHz to 110 kHz > 86 dB	High Pass
Distortion Introduced by Instrument (Input > 1 V rms)	400 Hz - 3 dB point at 400 Hz, + 35 Hz, - 40 Hz. Normally used with fundamental frequencies > 1 kHz to reduce the effect of hum components in the input signal.
10 Hz to 20 kHz < -95 dB 20 kHz to 30 kHz < -90 dB 30 kHz to 50 kHz < -85 dB 50 kHz to 110 kHz < -70 dB	Monitor Output:
Residual Noise (Fundamental frequency setting < 20 kHz, 80 kHz filter in, source resistance ≤ 1 kΩ shielded):	Provides scaled presentation of input signal after
< -92 dB referenced to 1 V.	
Input Level for Distortion Measurements:	
30 mV to 300 V rms (100 mV range minimum)	
Input Impedance:	
100 k Ω $\pm 1.0\%$ shunted by < 100 pF input High to Low.	

Table 1-1. Specifications (Cont'd).

fundamental is removed for further analysis using oscilloscope or low frequency spectrum analyzer.

Output Voltage: 1 V rms $\pm 5\%$ open circuit for full

scale meter indication, proportional to meter deflection.

Output Resistance: 1 k Ω $\pm 5\%$.

VOLTMETER

Voltage Range:

1 mV rms full scale to 300 V rms full scale
(-60 dB to +50 dB full scale, meter calibrated in dBV and dBm into 600 Ω)

Frequency Range:

10 Hz to 110 kHz

Accuracy (% of range setting)

20 Hz to 20 kHz $\pm 2\%$
10 Hz to 110 kHz $\pm 4\%$

Detection and Meter Indication

True rms detection for waveforms with crest factor ≤ 3 .
Meter reads true rms volts, dB V, and dBm into 600 Ω .

Input Impedance:

100 k Ω $\pm 1.0\%$ shunted by <100 pF Input High to Low.

Monitor Output:

Provides scaled presentation of input signal for further analysis using oscilloscope or low frequency spectrum analyzer.

Output Voltage: 1 V rms $\pm 5\%$ open circuit for full scale meter indication, proportional to meter deflection.

Output Resistance: 1 k Ω $\pm 5\%$.

RELATIVE INPUT LEVEL

Provides a ratio measurement relative to an operator selected reference level with readout directly in dB V or dBm (600 Ω).

Voltage range, frequency range, accuracy specifications, and monitor are the same as in VOLTMETER mode. (Accuracy is relative to 0 dB set level input.)

OSCILLATOR

Frequency Range:

10 Hz to 110 kHz in 4 overlapping decade ranges with 2 digit resolution. Frequency vernier provides continuous frequency tuning between 2nd digit switch settings.

Output Level:

Variable from < 1 mV to > 3 V rms into 600 Ω with 10 dB/step LEVEL control and 10 dB VERNIER adjustment.

OSC LEVEL position on function switch allows a quick check of oscillator level without disconnecting leads to device under test.

OFF position on Oscillator LEVEL control provides fast signal-to-noise measurement capability. Oscillator output terminals remain terminated in 600 Ω .

Frequency Accuracy:

$\pm 2\%$ of selected frequency (with FREQUENCY VERNIER in CAL position).

Level Flatness:

20 Hz to 20 kHz ± 0.1 dB
10 Hz to 110 kHz ± 0.2 dB

Distortion ($\geq 600 \Omega$ load, ≤ 3 V output):

10 Hz to 20 kHz < -95 dB (0.0018%) THD
20 kHz to 30 kHz < -85 dB (0.0056%) THD
30 kHz to 50 kHz < -80 dB (0.01%) THD
50 kHz to 110 kHz < -70 dB (0.032%) THD

Output Resistance:

600 Ω $\pm 5\%$

AM DETECTOR

Frequency Range:

Carrier frequencies: 550 kHz to 1.6 MHz.
Modulation frequencies: 20 Hz to 20 kHz.

Distortion introduced by AM Detector (with 30 kHz filter switched IN):

Up to 85% Modulation: < -36 dB (1.6%) THD
85% to 95% Modulation: < -30 dB (3%) THD

Input Level

Maximum: 60 V peak
Modulation signal level:
2.0 V rms minimum
10 V rms maximum

Monitor Output (with modulated RF carrier applied to AM Detector input):

Table 1-1. Specifications (Cont'd).

Distortion mode: Provides scaled presentation of demodulated input signal after fundamental is removed.

Voltmeter and Relative Input mode: Provides scaled presentation of demodulated input signal.

Output Voltage and Output Resistance are the same as in Distortion mode.

Table 1-2. Typical Operating Characteristics.

GENERAL

Operating Environment:

Temperature: 0°C to 50°C.
Humidity Range: < 95%, 0°C to 40°C.

Weight:

Net 8.2 kg (18 lbs.); shipping 11.3 kg (25 lbs.).

Storage Temperature:

- 40°C to + 65°C.

Dimensions:

426 mm wide x 146 mm high x 442 mm deep (16.75" wide x 5.75" high x 17.4" deep).

Power:

100/120/220/240, +5%, -10%, 40 to 66 Hz, 200 mA max.

Table 1-3. Recommended Test Equipments.

Instrument	Critical Specification	Recommended Model	Use
AC Calibrator	Frequency: 10 Hz - 110 kHz Output Level: 1 mV - 300 V rms Level Accuracy: ± .2% Output Impedance: ≤ 50 Ω	-hp- Model 745A AC Calibrator -hp- Model 746A High Voltage Amplifier	PAT
True RMS Voltmeter	Frequency Range: 10 Hz - 110 kHz Voltage Range: 1 mV - 10 V rms Measurement Accuracy: ± .5% Measurement Resolution: .1% of full-scale Crest Factor: ≥ 4	-hp- Model 3403C True RMS Voltmeter	PT
Pulse Generator	Pulse Output Amplitude: 10 V p-p Pulse Width: Variable, 1 msec - 10 μsec Repetition Rate: 100 Hz - 10 kHz	-hp- Model 8011A Pulse Generator	P
Oscilloscope	Bandwidth: DC - 2 MHz Sweep Time: .1 μs - .5 sec/div Sensitivity: .1 V/div.	-hp- Model 1221A Oscilloscope	PT

Table 1-3. Recommended Test Equipments (Cont'd).

Instrument	Critical Specification	Recommended Model	Use
Frequency Counter	Frequency Range: 10 Hz - 110 kHz Frequency Resolution: .1% of reading	-hp- Model 5300A Counter Mainframe -hp- Model 5302A Counter Module	P
Spectrum Analyzer	Frequency Range: 10 Hz - 330 kHz Frequency Resolution: .1 Hz Input Amplitude: 1 V Dynamic Range: 50 dB Measurement Resolution: $\pm .1$ dB Minimum Bandwidth: 3 Hz	-hp- Model 3044A Spectrum Analyzer	PA
Tuneable Notch Filter	Frequency Range: 10 Hz - 110 kHz Notch Depth: ≥ -80 dB	-hp- Model 339A Distortion Measurement Set	P
Low Distortion Oscillator	Frequency Range: 10 Hz - 110 kHz Output Level: 3 V rms into 600 Ω THD: > -95 dB (10 Hz - 20 kHz) > -85 dB (20 kHz - 30 kHz) > -80 dB (30 kHz - 50 kHz) > -70 dB (50 kHz - 110 kHz)	-hp- Model 239A Oscillator	PAT
DC Digital Voltmeter	Input Range: 4 V dc Measurement Accuracy: $\pm .1\%$ Resolution: .01% of full-scale	-hp- Model 3465A Digital Voltmeter	AT
Resistors	600 Ω Resistive Load	-hp- Accessory No. 11095A	PA
	600 Ω 1% Metal Film	-hp- Part No. 0698-5405	
	60 k Ω 1% Metal Film	-hp- Part No. 0698-5973	P
	100 k Ω .1% Metal Film	-hp- Part No. 0698-4158	
	1 k Ω 1% Metal Film	-hp- Part No. 0757-0280	

P = Performance Test

A = Adjustment Procedures

T = Troubleshooting

SECTION II INSTALLATION

2-1. INTRODUCTION.

2-2. This section of the manual contains information and instructions necessary to install the Model 339A Distortion Measurement Set. Also included are initial inspection procedures, power and grounding requirements, environmental information, and packaging instructions.

2-3. INITIAL INSPECTION.

2-4. This instrument was carefully inspected, both mechanically and electrically, before shipment. It should be free of marks and scratches and in perfect electrical order. The instrument should be inspected upon receipt for damage that might have occurred in transit. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been mechanically and electrically inspected. Procedures for testing the electrical performance of the Model 339A are given in Section IV of this manual. If the contents are incomplete, if there is mechanical damage or defect, or if the instrument does not pass the Performance Tests, notify the nearest Hewlett-Packard Office. (A list of the -hp- Sales and Service Offices is presented at the back of this manual.) If the shipping container is damaged, or the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard Office. Save the shipping materials for the carrier's inspection.

2-5. PREPARATION FOR USE.

2-6. Power Requirements.

2-7. The Model 339A requires a power source of 100, 120, 220, or 240 V ac (+5% - 10%), 48 Hz to 66 Hz single phase. Maximum power consumption is 48 VA.

2-8. Line Voltage Selection.

2-9. Before connecting ac power to the Model 339A make sure the rear panel line selector switches are set to correspond to the available power line voltage and that the proper fuse is installed, as shown in Figure 2-1. The instrument is shipped from the factory with the line voltage and fuse selected for 120 V ac operation.

2-10. Power Cable.

2-11. Figure 2-2 illustrates the standard configurations used for -hp- power cables. The number directly below each drawing is the -hp- part number for a power cable equipped with a connector of that configuration. If the

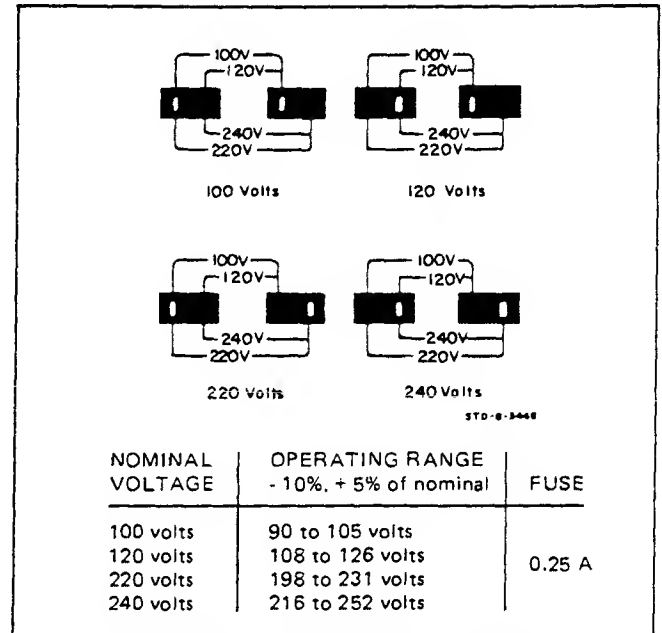


Figure 2-1. Line Voltage Selection.

appropriate power cable is not included with the instrument, notify the nearest -hp- Sales and Service Office and the proper cable will be provided.

2-12. Grounding Requirements.

2-13. To protect operating personnel, the National Electrical Manufacturer's Association (NEMA) recommends that the instrument cabinet and front panel be grounded. The Model 339A is equipped with a three

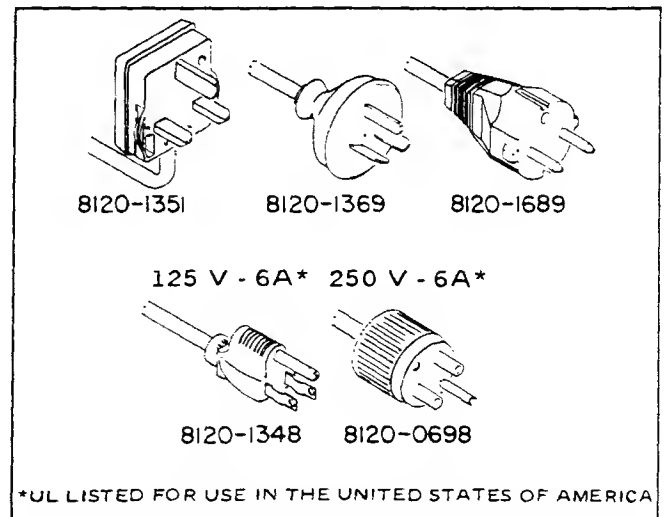


Figure 2-2. Power Cord Configurations.

conductor power cable which, when plugged into an appropriate receptacle, grounds the instrument.

2-14. Bench Use.

2-15. The Model 339A is shipped with plastic feet and tilt stands installed and is ready for use as a bench instrument. The plastic feet are shaped to permit "stacking" with other full-module Hewlett-Packard instruments. The tilt stands permit the operator to elevate the front of the instrument for operating and viewing convenience.

2-16. Rack Mounting.

2-17. The Model 339A may be rack mounted by adding rack mounting kit Option 908 or Option 909. Option 908 contains the basic hardware and instructions for rack mounting; Option 909 adds front handles to the basic rack mount kit. The rack mount kits are designed to permit the instrument to be installed in a standard 19 inch rack.

2-18. ENVIRONMENTAL REQUIREMENTS.

WARNING

To prevent electrical shock or fire hazard, do not expose the instrument to rain or moisture.

2-19. Operating and Storage Temperature.

2-20. In order to meet the specifications listed in Table 1-1, the instrument should be operated within an ambient temperature range of 0°C to +50°C (+32°F to +122°F).

2-21. The instrument may be stored or shipped where the ambient temperature range is within -40°C to +65°C (-40°F to +149°F). However, the instrument should not be stored or shipped where temperature fluctuations cause condensation within the instrument.

2-22. Humidity.

2-23. The instrument may be operated in environments with relative humidity of up to 95%. However, the instrument must be protected from temperature extremes which cause condensation within the instrument.

2-24. Altitude.

2-25. The instrument may be operated at altitudes up to 4572 meters (15,000 feet).



2-26. REPACKAGING FOR SHIPMENT.

NOTE

If the instrument is to be shipped to Hewlett-Packard for service or repair, attach a tag to the instrument identifying the owner and indicating the service or repair to be accomplished. Include the model number and full serial number of the instrument. In any correspondence, identify the instrument by model number and full serial number. If you have any questions, contact your nearest -hp- Sales and Service Office.

2-27. The following is a general guide for repackaging the instrument for shipment. If the original container is available, place the instrument in the container with appropriate packing material and seal well with strong tape or metal bands. If the original container is not available, proceed as follows:

- a. Wrap the instrument in heavy paper or plastic before placing it in an inner container.
- b. Place packing around all sides of the instrument and protect the front panel with cardboard strips or plastic foam.
- c. Place the instrument and inner container in a heavy carton and seal with strong tape or metal bands.
- d. Mark the shipping container "DELICATE INSTRUMENT", "FRAGILE", etc.

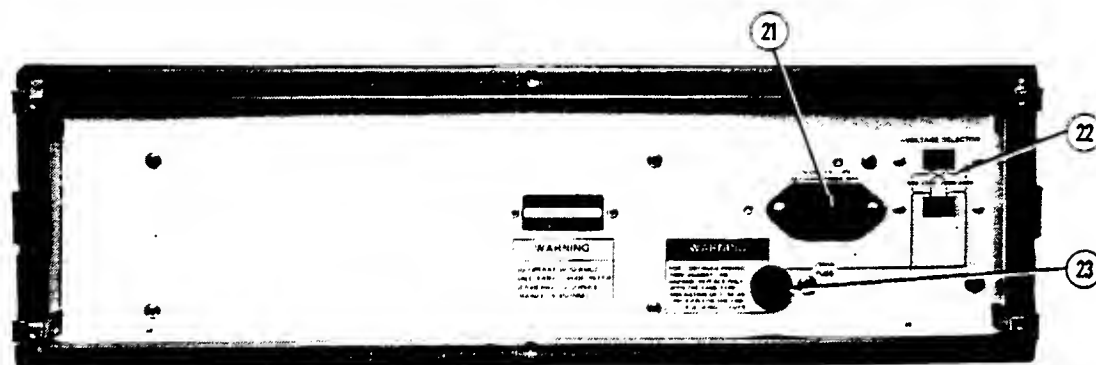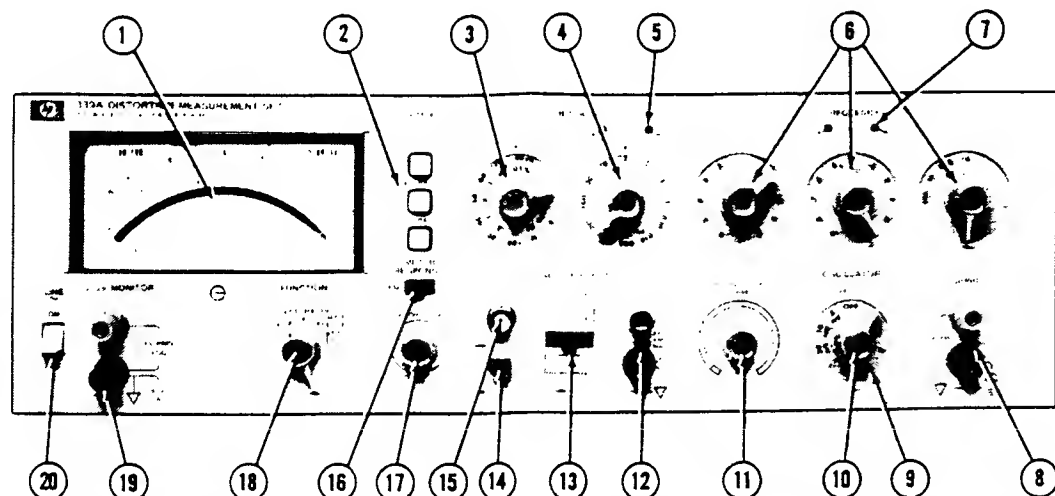

1. Meter indicates voltage level, distortion in dB or percent, or VU (volume units) in dB.

2. Filters permit the user to eliminate unwanted frequencies and noise from the measurement. The filters include a 400 Hz high-pass filter which is normally used to reject power-line related noise, a 30 kHz low-pass filter for use in making "proof of performance" measurements at AM broadcast stations, and an 80 kHz low-pass filter to eliminate high frequency noise.

3. DISTORTION RANGE control selects the gain of the distortion measurement circuits to the proper sensitivity for measuring the applied signal.

4. INPUT RANGE control sets the input range of the distortion and meter circuits to the proper sensitivity for measuring the applied signal.

5. Input Range indicators indicate the direction the INPUT RANGE control must be turned to select the correct range for the signal applied.

6. FREQUENCY controls determine the fundamental rejection frequency of the analyzer and the output frequency of the oscillator.

7. Frequency indicators indicate the direction the FREQUENCY controls must be turned to bring the analyzer circuits within "pull-in range" of the fundamental frequency of the applied signal. This applies only when using an external signal source.

8. OSCILLATOR OUTPUT terminals. Output impedance is 600 Ω .

9. OSCILLATOR LEVEL control changes the output level in 10 dB V steps from 3 mV rms to 3 V rms into 600 Ω . The LEVEL control also includes an OFF position which disconnects the oscillator output and terminates the output terminals with a 600 Ω resistive load.

10. Oscillator LEVEL Vernier permits the output level to be varied below the level selected by the LEVEL control. This makes the oscillator output level continuously variable from less than 1 mV to greater-than 3 rms into 600 Ω .

11. OSCILLATOR FREQUENCY VERNIER. Frequency range of the vernier permits the oscillator output frequency to be increased above the frequency selected by the FREQUENCY controls. Frequency range of the vernier is approximately equal to one step on the center frequency control.

12. DISTORTION ANALYZER (and voltmeter) terminals provide connection for analyzer and voltmeter inputs.

13. ANALYZER (and voltmeter) INPUT/GND SELECT switch selects DISTORTION ANALYZER input with either circuit or chassis ground or AM DETECTOR input with chassis ground only.

14. AM DETECTOR input terminal provides connection for amplitude modulated RF signals.

15. Ground Terminal provides connection to 339A Chassis.

16. METER RESPONSE switch selects normal or VU (volume units) meter response.

17. RELATIVE ADJUST permits the user to set a convenient reference level on the meter when using the voltmeter RELATIVE LEVEL FUNCTION.

18. FUNCTION control selects analyzer or voltmeter functions.

19. MONITOR terminals permit the signal applied to the meter circuitry to be monitored. The MONITOR output is 1 V rms for a full-scale meter deflection.

With an audio signal applied to the DISTORTION ANALYZER input the MONITOR output will be:

DISTORTION FUNCTION - Distortion products of the applied signal after the fundamental has been removed.

INPUT LEVEL - And RELATIVE LEVEL FUNCTIONS. Scaled presentation of the applied signal.

With a modulated RF signal applied to the AM DETECTOR input the MONITOR output will provide:

DISTORTION FUNCTION - Scaled presentation of the demodulated input signal with the fundamental removed.

INPUT LEVEL and RELATIVE LEVEL FUNCTIONS - Scaled presentation of the demodulated input signal.

The MONITOR terminals are disabled when using the OSCILLATOR LEVEL FUNCTION.

20. LINE switch applies ac power to the instrument.

21. AC LINE connector provides connection for ac power.

22. AC VOLTAGE SELECTOR switches set the instrument to operate from 100 V, 120 V, 220 V, or 240 V ac power source.

23. FUSE protects the instrument circuits from excessive current.

Figure 3-1. Control, Connector and Indicator Descriptions.

SECTION III OPERATION

3-1. INTRODUCTION.

3-2. This section contains information and instructions necessary for operation of the Model 339A Distortion Measurement Set. Included is a description of operating characteristics, a description of operating controls and indicators, and functional checks to be performed by the operator.

3-3. OPERATING CHARACTERISTICS.

3-4. General.

3-5. The Model 339A is designed to measure Total Harmonic distortion (THD) of signals having a fundamental frequency between 10 Hz and 110 kHz. the analyzer section of this instrument measures total harmonic distortion levels from 100% (0 dB) full-scale to .01% (-80 dB) full-scale in nine ranges as selected by the DISTORTION RANGE control. to simplify operation, the analyzer section features both automatic "set level" and automatic "nulling".

3-6. The Auto Set Level feature automatically sets the measurement reference level over a 10 dB V range. If the input signal is outside this range, an LED on the front panel indicates whether the INPUT RANGE control setting must be increased or decreased to be within the "pull-in" range of the Auto Set Level.

3-7. The Auto Nulling feature is fully automatic when the 339A internal oscillator is used as the signal source. When using an external signal source, an LED on the front panel indicates which direction the FREQUENCY controls must be rotated to be within the Auto Nulling range.

3-8. The Model 339A includes an AM detector which has a carrier frequency range of 550 kHz to 1.6 MHz. The AM detector permits the measurement of THD of a modulation signal.

3-9. The signal source used in the Model 339A is a "bridged T" oscillator which provides a low distortion sine-wave signal from 10 Hz to 110 kHz. The operating

frequencies of the oscillator and the analyzer notch filter are set simultaneously. The output level of the oscillator is variable from 1 mV rms full-scale to 3 V rms full-scale into a 600 Ω load.

3-10. The ac voltmeter section of the Model 339A measures the true rms value of input voltages from 1 mV full-scale to 300 V full-scale in twelve ranges. Frequency response of the meter section is 10 Hz to 110 kHz.

3-11. True RMS VS Average Responding Detection.

3-12. Since the 339A employs a true rms converter to detect the measurement signal, it is less susceptible to errors than average responding devices. Most average responding meters are calibrated to indicate the rms value of a pure sine-wave. When reading a pure sine-wave, both the true rms and average responding meters will give the correct indication. However, when reading complex signals the average responding meter may be in error. The amount of error depends upon the particular signal being measured.

As an example; when measuring a square-wave, the true rms meter will give the correct indication of the rms value. The average responding meter however, will read 11% high. The average responding meter is also affected by signals with harmonic content. The amount of error introduced by an average responding meter due to harmonics is dependent upon the relative amplitude, phase, and order of the harmonic. The third harmonic usually causes the greatest amount of error. For example, when measuring a signal with third harmonic content, an average responding meter can be in error by +5% to -20% depending upon the amplitude and phase of the harmonic, relative to the fundamental frequency. Due to the errors inherent in average responding meters, a distortion analyzer which employs this type of detector will also be subject to the same measurement errors. These errors can cause indicated distortion readings to be as much as 1.3 dB below the actual rms value for certain combinations of second and third harmonics. The Model 339A is not affected by the errors associated with average responding detectors and will provide more accurate measurement indications.

3-13. Turn-On and Warm-Up.

3-14. Before connecting ac power to the 339A, be certain the rear panel voltage selector switches are set to correspond to the voltage of the available power line and that the proper fuse is installed for the voltage selected. For rated measurement accuracy, the 339A should be allowed to "warm-up" for at least 15 minutes.

3-15. DISTORTION MEASUREMENT.

3-16. Distortion Measurement Using the 339A Internal Oscillator.

3-17. The Model 339A Distortion Measurement Set is designed to provide complete capability for measuring Total Harmonic Distortion by combining an automatic, high resolution distortion analyzer and a low distortion signal source. Figure 3-2 illustrates the fundamental application of the Model 339A. The figure shows the equipment configuration and includes an operating procedure for making THD measurements.

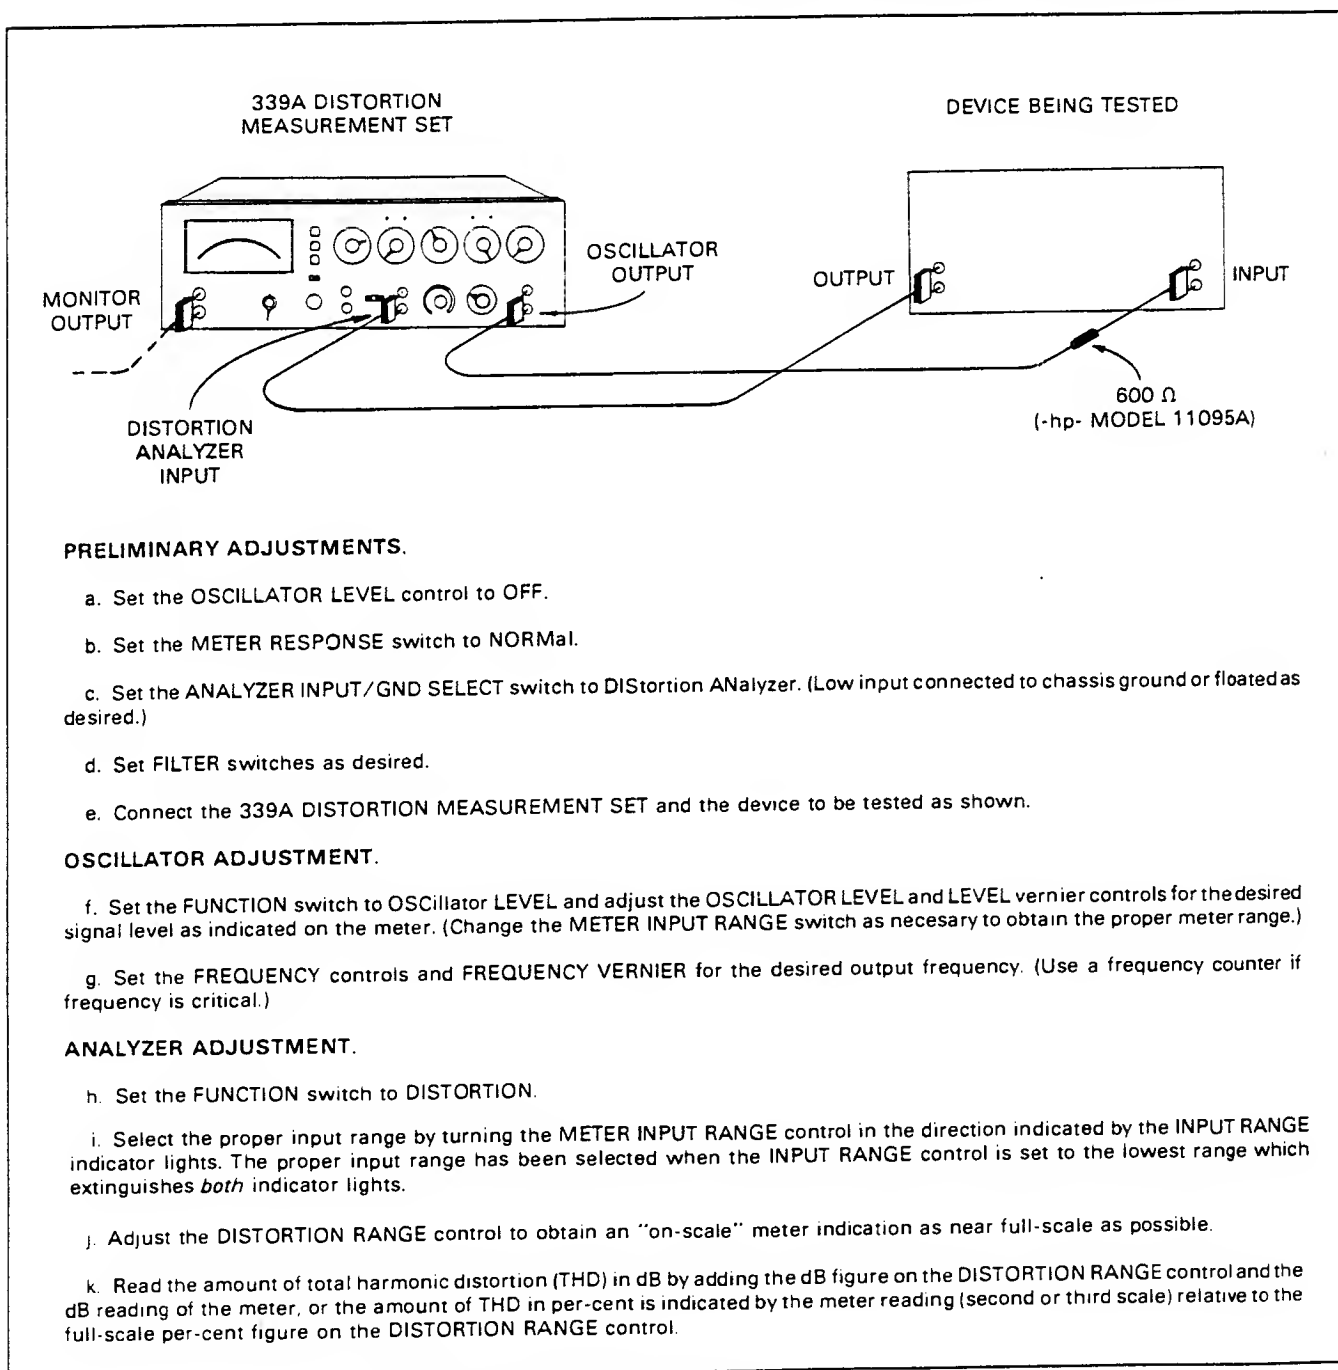


Figure 3-2. Distortion Measurement Using 339A Internal Oscillator.

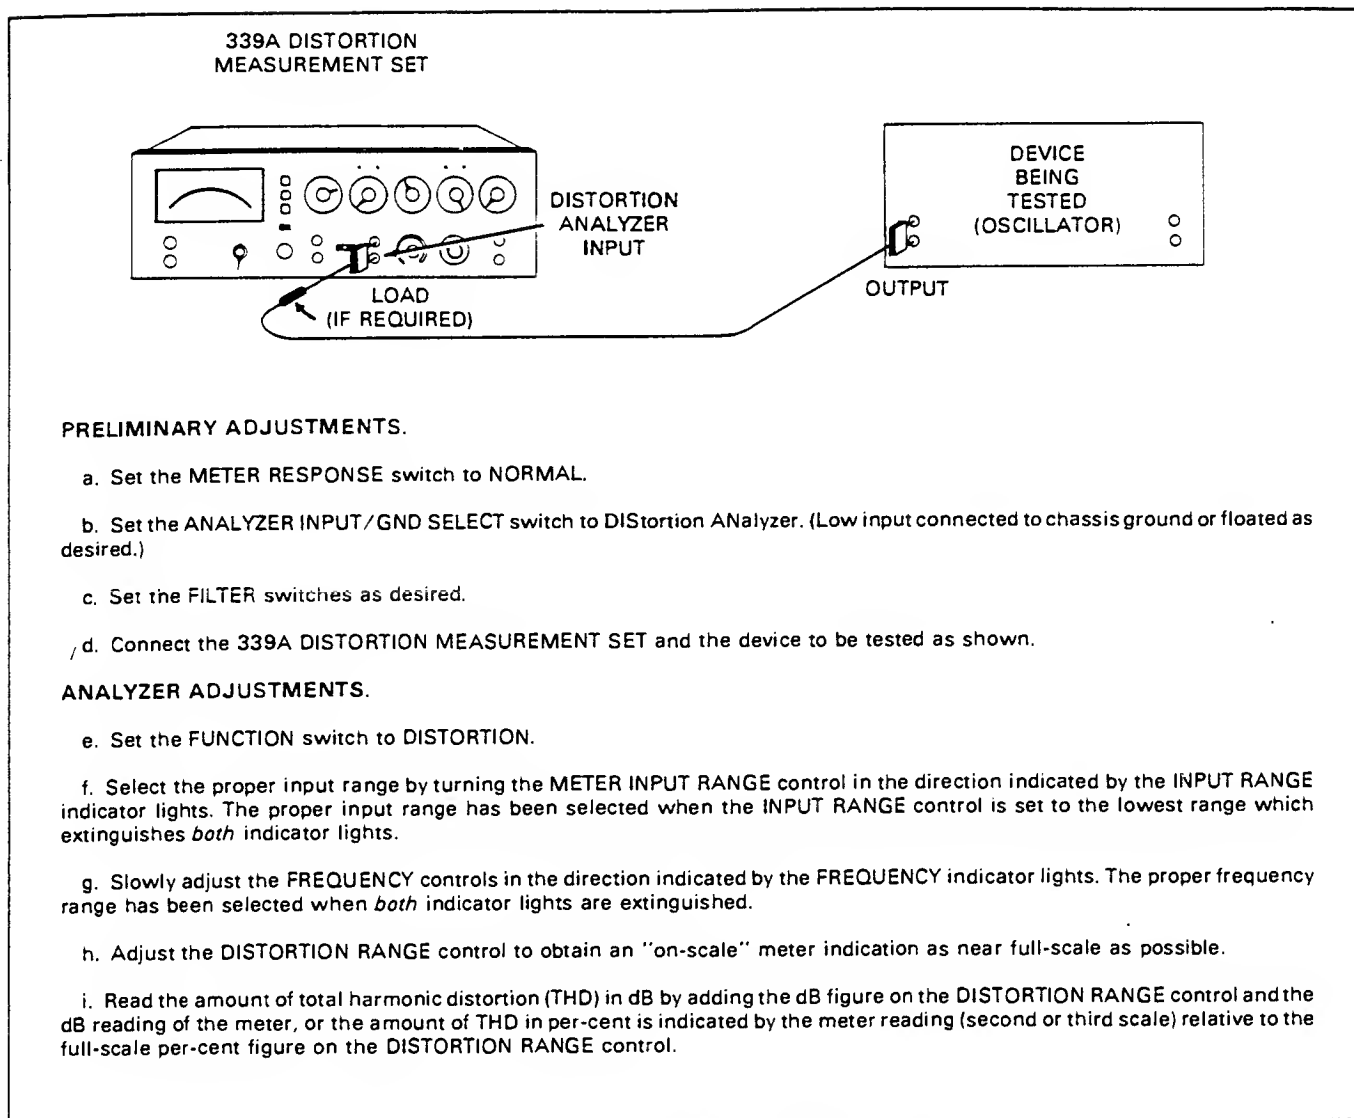


Figure 3-3. Distortion Measurement of an External Source.

3-18. Distortion Measurement of an External Source.

Figure 3-3 shows another measurement application. In this case the Model 339A is used to measure the THD of a signal source. The figure includes an illustration of the necessary equipment connections and an operating procedure for making the measurement.

3-20. AM DETECTOR.

3-21. The Model 339A includes an AM DETECTOR to permit the user to measure the total harmonic distortion of a modulation signal on an RF carrier. Equipment connection and measurement procedures are similar to those outlined in Figure 3-3 except the input is connected to the AM DETECTOR input.

3-22. VOLTMETER OPERATION.

3-23. The following procedures outline the operating procedures for the various voltmeter functions.

3-24. Normal Voltmeter Operation.

3-25. To use the Model 339A as a normal, true rms voltmeter, proceed as follows:

- Set the FUNCTION switch to INPUT LEVEL.
- Set the METER RESPONSE switch to NORMAL.
- Set the INPUT/GND SELECT switch to DISTortion ANalyzer (low input connected to chassis ground or floating as desired).

d. Set the FILTER switches off (out).

e. Connect the signal to be measured to the DISTORTION ANALYZER input connectors.

f. Adjust the INPUT RANGE control in the direction indicated by the INPUT RANGE indicator lights until an "on-scale" meter indication, as near full-scale as possible, is obtained. (Both indicator lights will be off.)

3-26. RELATIVE LEVEL OPERATION.

3-27. The RELATIVE LEVEL FUNCTION permits the user to adjust the meter gain of the 339A to set a convenient reference level on the meter (usually 0 dB). This function is convenient for measuring signal levels relative to a reference level. To use the RELATIVE LEVEL FUNCTION, proceed as follows:

a. Set the FUNCTION switch to RELATIVE LEVEL.

b. Set the METER RESPONSE switch to NORMAL.

c. Set the INPUT/GND SELECT switch to DISTORTION ANALYZER. (Low input connected to chassis ground or floating as desired.)

d. Set the FILTER switches off (out).

e. Connect the reference signal to the DISTORTION ANALYZER input connectors.

f. Adjust the INPUT RANGE control in the direction indicated by the INPUT RANGE indicator lights until an "on-scale" meter indication is obtained.

g. Use the RELATIVE ADJUST control to set the meter to the desired reference level.

h. Measure other input levels relative to the reference just established. Do not change the RELATIVE ADJUST control.

3-28. Oscillator Level Operation.

3-29. In the OSCILLATOR LEVEL function, the analyzer inputs and the MONITOR output is disabled and the 339A meter circuit is used to monitor the output level of the oscillator. To measure the oscillator output level, perform the following:

a. Set the FUNCTION switch to OSCILLATOR LEVEL.

b. Set the METER RESPONSE switch to NORMAL.

c. Set the FILTER switches to off (out).

d. Adjust the INPUT RANGE control as necessary to obtain an "on-scale" meter indication as near full-scale as possible.

e. The meter reading, relative to the meter range selected by the INPUT RANGE control indicates the output level of the oscillator.

3-30. To adjust the oscillator output to a particular level, perform the following:

a. Set the FUNCTION switch to OSCILLATOR LEVEL.

b. Set the METER RESPONSE switch to NORMAL.

c. Set the FILTER switches to off (out).

d. Set the INPUT RANGE control to the appropriate meter range for the oscillator output level desired.

e. Adjust the OSCILLATOR LEVEL control and LEVEL vernier until the desired output level is indicated on the meter.

3-31. VU MEASUREMENTS.

3-32. To measure volume units (VU), the meter response characteristics are changed to those of a VU meter by switching the METER RESPONSE switch to the VU position. VU measurements can be made in the INPUT LEVEL or RELATIVE LEVEL functions. Measurement results are normally read on the dBm 600 ohms meter scale. Operating procedures for making VU measurements are the same as those listed for Normal Voltmeter Operation or Relative Level Operation.

3-33. Filters.

3-34. Three 60 dB/decade active filters, one high-pass and two low-pass, are included to permit the user to eliminate unwanted frequencies and noise. These filters may be selected individually or in any combination by means of the front panel FILTER switch. The frequencies labeled beside each switch indicate the 3 dB "roll-off" point of that particular filter.

3-35. Input Ground Select.

3-36. The ANALYZER Low input reference is selected by the INPUT/GND SELECT switch. When using the DISTORTION ANALYZER input, the input low is connected to chassis ground (center switch position) or allowed to float (right switch position). When using the AM DETECTOR input (left switch position) the input low is connected to chassis ground.



To prevent damage to the analyzer input circuits, do not float the low input terminal more than ± 30 V dc relative to earth ground.

3-37. Monitor Output.

3-38. The MONITOR output provides a means of driving external equipment to permit a more detailed analysis of the signal being measured. Instruments, such as an oscilloscope, wave analyzer, or spectrum analyzer can be used to determine the nature of the total harmonic distortion being measured. The monitor output level is 1 V rms for full-scale meter deflection. The MONITOR output is disabled when using the OSCillator LEVEL FUNCTION.

3-39. OSCILLATOR OPERATION.

3-40. Frequency Selection.

3-41. The oscillator frequency is determined by the setting of the FREQUENCY and FREQUENCY VERNIER controls. The units and tenths controls determine the first and second digits of the desired frequency. These numbers are then multiplied by the range selected on the multiplier control. As an example: to set the oscillator to a frequency of 5.6 kHz; set the units control to 5, the tenths control to .6, and the multiplier to X1K. (The FREQUENCY VERNIER should be set to the CAL position.) The FREQUENCY VERNIER provides continuous frequency tuning between steps of the tenths control to permit continuous frequency selection from 10 Hz to 110 kHz.

3-42. Output Level.

3-43. The oscillator output level is controlled by the OSCILLATOR LEVEL control and LEVEL vernier. The OSCILLATOR LEVEL control selects output levels from 3 mV rms full-scale to 3 V rms full-scale in 10 dB V steps (600 ohm load). The level vernier varies the output level from greater than 3 V rms to less than 1 mV rms (600 ohm load).

3-44. OPERATIONAL VERIFICATION CHECKS.

3-45. The following procedures are designed to test the operational capabilities of the Model 339A. If so desired, these tests can be substituted for the performance tests outlined in Section IV for incoming inspection tests or to check operation after calibration. Keep in mind however, these tests check only the operational capabilities of the Models 339A. They *do not* check the performance accuracy. If the instrument fails any of the following tests, refer service to qualified service personnel.

3-46. Preliminary Procedure.

3-47. Before connecting power to the 339A, perform the following:

- a. Be certain that the rear panel VOLTAGE SELECTOR switches are set to correspond to the

available power line voltage and that the proper fuse is installed.

- b. Connect power to the 339A and turn the LINE switch ON.

- c. Set the FILTER switches off (out).

- d. Set the METER RESPONSE switch to NORMAL.

3-48. OSCILLATOR.

3-49. This procedure checks the output level of the 339A oscillator for all frequency settings. Frequency accuracy is not checked. To check the oscillator proceed as follows:

- a. Set the FUNCTION switch to OSCillator LEVEL.

- b. Set the INPUT RANGE control to the 10 volt range.

- c. Set the FREQUENCY controls fully counterclockwise.

- d. Set the OSCILLATOR LEVEL control and level vernier fully clockwise. The meter should indicate more than 6 volts.

- e. Set the level vernier fully counterclockwise. The meter should indicate less than 2 volts.

- f. Set the INPUT RANGE control to the +10 dBm range and adjust the level vernier for a 0 dBm meter indication (blue scale).

- g. While observing the meter, set the FREQUENCY controls to each dial position. (Allow time for the meter reading to stabilize at each setting.) The meter indication should not vary more than 0.6 dBm from the original setting.

- h. Set the FREQUENCY controls for a frequency of 1 kHz.

- i. Adjust the level vernier for a meter indication 0 dBm.

- j. Simultaneously down-range the OSCILLATOR LEVEL and INPUT RANGE controls to the next lower range. The meter should indicate 0 dBm.

- k. Repeat Steps i and j for each position of the OSCILLATOR LEVEL control.

3-50. AC VOLTMETER.

3-51. The following procedure checks the ac voltmeter functions and ranges. Perform the following steps:

a. Set the FILTER switches off (out), the METER RESPONSE switch to NORMAL, and the INPUT/GND SELECT switch to the center position. (DISTortion Analyzer with input low connected to chassis ground.)

b. Set the FUNCTION switch to INPUT LEVEL.

c. Set the INPUT RANGE control to the 10 volt range.

d. Set the FREQUENCY controls for a frequency of 1 kHz.

e. Set the OSCILLATOR LEVEL control to the 3 volt range.

f. Connect a cable from the OSCILLATOR OUTPUT terminals to the DISTORTION ANALYZER input terminals.

g. Adjust the OSCILLATOR LEVEL vernier for a meter indication of 6 volts.

h. While observing the meter, set the INPUT RANGE control to the 30, 100, and 300 volts ranges. The meter should indicate 6 volts on the respective ranges. The left hand INPUT RANGE indicator light should be lit on all three ranges.

i. Set the INPUT RANGE switch to the 3 volt range. Observe that the right hand INPUT RANGE indicator is lit.

j. Down-range the OSCILLATOR LEVEL control to the next lower range and adjust the level vernier for a meter indication -10 dB V.

k. Down-range the INPUT RANGE control to the next lower range. The meter should indicate $0 \text{ dB V} \pm .2 \text{ dB V}$.

l. Repeat Steps j and k until all input ranges except the .001 V range have been checked.

m. Set the INPUT RANGE control to the 10 volt range and the OSCILLATOR LEVEL control to the 3 volt range.

n. Adjust the level vernier for a meter indication of -12 dB V.

o. Set the FUNCTION switch to the RELATIVE LEVEL position.

p. Vary the RELATIVE ADJUST control to verify an adjustment range of greater-than 10 dB V.

3-52. Distortion Analyzer.

3-53. The following procedure checks the distortion

analyzer ranges and distortion measurement capability. Perform the following steps:

a. Set the FILTER switches off (out), the METER RESPONSE switch to NORMAL, and the INPUT/GND SELECT switch to the center position (DISTortion Analyzer with input low connected to chassis ground).

b. Set the DISTORTION RANGE control to 0 dB.

c. Set the INPUT RANGE control to the 1 volt range.

d. Set the FREQUENCY controls to a frequency of 1 kHz.

e. Set the OSCILLATOR LEVEL control to the 3 volt range.

f. Connect a cable between the OSCILLATOR OUTPUT terminals and the DISTORTION ANALYZER input terminals.

g. Set the FUNCTION switch to the DISTORTION position.

h. Adjust the OSCILLATOR LEVEL vernier for a meter indication of -15 dB V.

i. Down-range the DISTORTION RANGE control to the next lower range. The meter should indicate approximately -5 dB V.

j. Repeat Steps h and i until all distortion ranges have been checked.

3-54. Filters.

3-55. The following procedure checks the "roll-off" of the filters.

a. Set the FUNCTION switch to OSCILLATOR LEVEL.

b. Set the INPUT RANGE control to the 3 volt range.

c. Set the OSCILLATOR LEVEL control to the 3 volt range and adjust the level vernier for a meter indication of 0 dB V.

d. Set the FREQUENCY controls for a frequency of 400 Hz.

e. Set the 400 Hz FILTER switch on (in). The meter should indicate $-3 \text{ dB V} \pm 1 \text{ dB}$. Return the filter switch to off (out).

f. Set the FREQUENCY controls for a frequency of 30 kHz. Readjust the level vernier for a meter indication 0 dB V if necessary.

g. Set the 30 kHz filter switch on (in). The meter

should indicate $-3 \text{ dB V} \pm 2 \text{ dB}$. Return the filter switch to off (out).

h. Set the FREQUENCY controls for a frequency of 80 kHz. Readjust the level vernier for a meter indication of 0 dB V if necessary.

i. Set the 80 kHz filter switch on (in). The meter should indicate $-3 \text{ dB V} \pm 2 \text{ dB}$. Return the filter switch to off (out).

3-56. OPERATOR'S MAINTENANCE.

3-57. Fuse Replacement.

3-58. The ac line fuse is located on the rear panel of the instrument. Before checking or replacing the fuse, disconnect the ac line cord from the instrument. The fuse used in the Model 339A is a 250 mA, normal-blow fuse.

WARNING

For continued protection against fire hazard, replace only with the same type and rating of fuse as specified for the line voltage being used.

3-59. Adjustment of Meter Mechanical Zero.

3-60. The meter is properly zero-set when the pointer rests over the zero calibration mark with the instrument in its normal operating environment and turned off. Zero-set the meter as follows to obtain maximum accuracy and mechanical stability:

a. Turn instrument on and allow it to operate for at least 20 minutes to let meter movement reach normal operating temperature.

b. Turn instrument off and allow 30 seconds for all capacitors to discharge.

c. Rotate zero adjustment screw clockwise until pointer is left of zero and moving upscale.

d. Continue rotating screw clockwise; stop when pointer is exactly at zero.

e. When pointer is exactly over zero, rotate adjustment screw slightly counterclockwise to relieve tension on pointer suspension. If pointer moves off zero, repeat Steps c through e, but make counterclockwise rotation less.

SECTION IV PERFORMANCE TEST

4-1. INTRODUCTION.

4-2. This section contains performance test procedures which can be used to verify that the Model 339A meets the specifications listed in Table 1-1. All tests can be performed without access to the interior of the instrument. A simpler operational verification procedure, included in Section III, may be used to check the operational capability of the 339A. The operational procedures do not, however, check specified accuracy of instrument.

4-3. EQUIPMENT REQUIRED.

4-4. The test equipment required for the performance tests is listed at the beginning of each procedure and in the Recommended Test Equipment Table in Section I. If the recommended equipment is not available, any equipment that meets the critical specifications given in the table may be substituted.

4-5. TEST RECORD.

4-6. A Performance Test Record is included at the end of this section for your convenience in recording performance data. This record may be removed from the manual and used as a permanent record of the incoming

inspection or of a routine performance test. The

Performance Test Record may be reproduced without written permission of Hewlett-Packard.

4-7. CALIBRATION CYCLE.

4-8. The Model 339A requires periodic verification of performance. The performance should be tested as part of the incoming inspection and at 90 day or 6 month intervals, depending upon the environmental conditions and your specific accuracy requirements.

4-9. VOLTMETER PERFORMANCE TESTS.

4-10. The following procedures check the accuracy of the voltmeter section of the 339A. These procedures should be performed and the voltmeter accuracy verified before performing the Distortion Analyzer Performance Tests.

4-11. Full-Scale Accuracy and Frequency Response Test.

Equipment Required:

AC Calibrator (-hp- Model 745A)
High Voltage Amplifier (-hp- Model 746A)

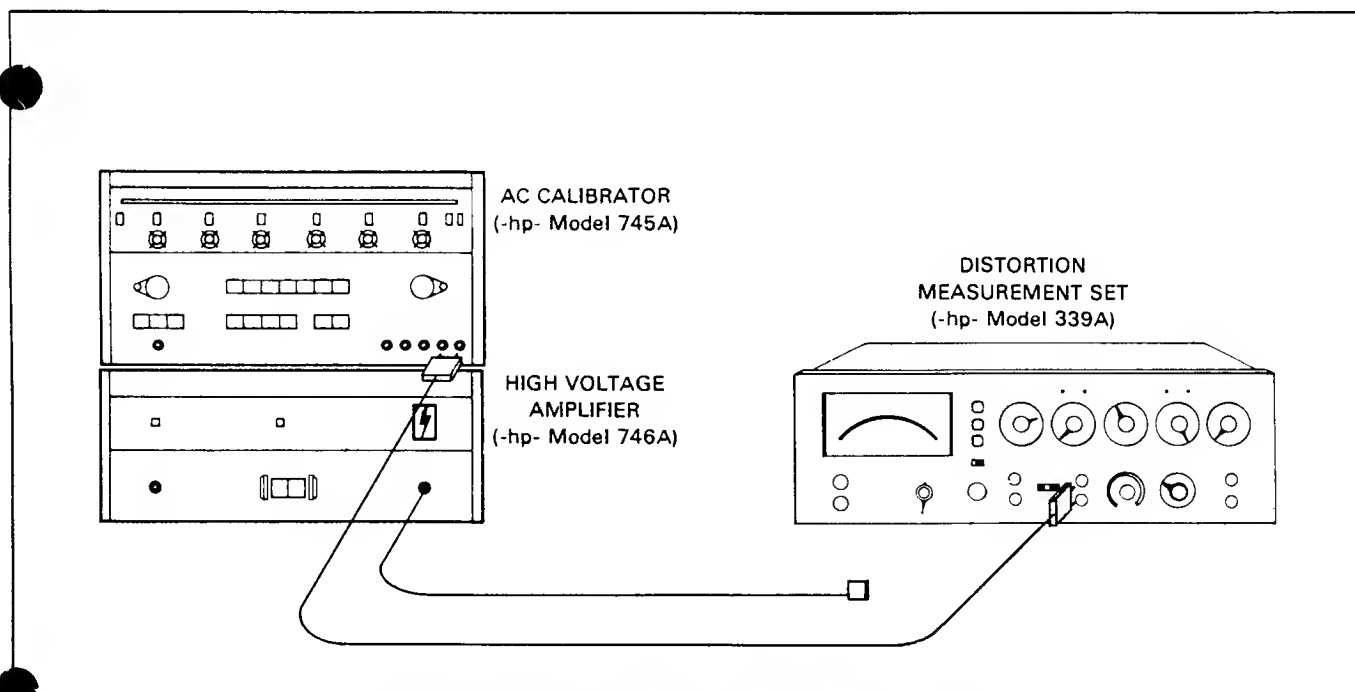


Figure 4-1. Full-Scale Accuracy and Frequency Response Test.

Table 4-1. Full-Scale Accuracy and Frequency Response Test Limits.

Input Range & Input Level	FREQUENCY						
	10 Hz	20 Hz	100 Hz	1 kHz	10 kHz	20 kHz	110 kHz
	TEST LIMITS						
.001 V	.00096 - .00104			.00098 - .00102			.00096 - .00104
.003 V	.00288 - .00312			.00294 - .00306			.00288 - .00312
.01 V	.0096 - .0104			.0098 - .0102			.0096 - .0104
.03 V	.0288 - .0312			.0294 - .0306			.0288 - .0312
.1 V	.096 - .104			.098 - .102			.096 - .104
.3 V	.288 - .312			.294 - .306			.288 - .312
1 V	.96 - 1.04			.98 - 1.02			.96 - 1.04
3 V	2.88 - 3.12			2.94 - 3.06			2.88 - 3.12
10 V	9.6 - 10.4			9.8 - 10.2			9.6 - 10.4
30 V	28.8 - 31.2			29.4 - 30.6			28.8 - 31.2
100 V	96 - 104			98 - 102			96 - 104
300 V	288 - 312			294 - 306			288 - 312

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE001 V
 INPUT/GND SELECT DIS. AN./⊥
 (center position)

b. Set the AC Calibrator controls for an output of 1 mV, 10 Hz.

c. Connect the output of the AC Calibrator to the 9A DISTORTION ANALYZER input.

d. The 339A 1 mV, 10 Hz meter indication should be within the Test Limits listed in Table 4-1.

e. Using the AC Calibrator and High Voltage Amplifier, verify the 339A Voltmeter accuracy for each Test Frequency, Input Level, and 339A Input Range listed in Table 4-1.

4-12. Meter Tracking and Monitor Output Accuracy Test.

Equipment Required:

AC Calibrator (-hp- Model 745A)
 True RMS Voltmeter (-hp- Model 3403C)

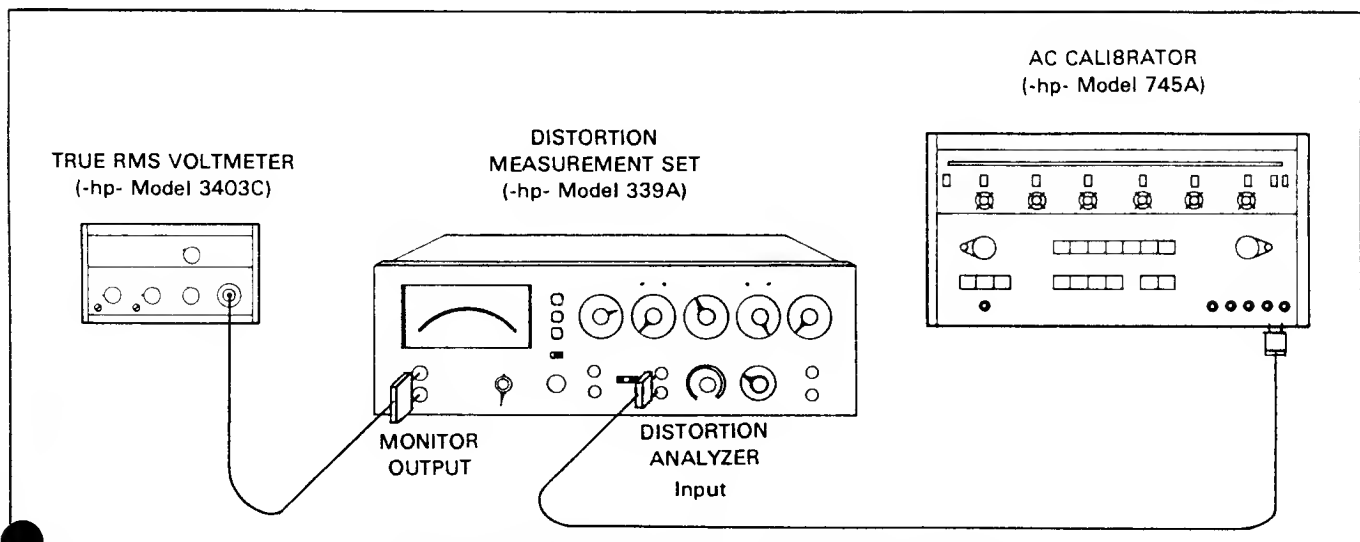


Figure 4-2. Meter Tracking and Monitor Output Accuracy Test.

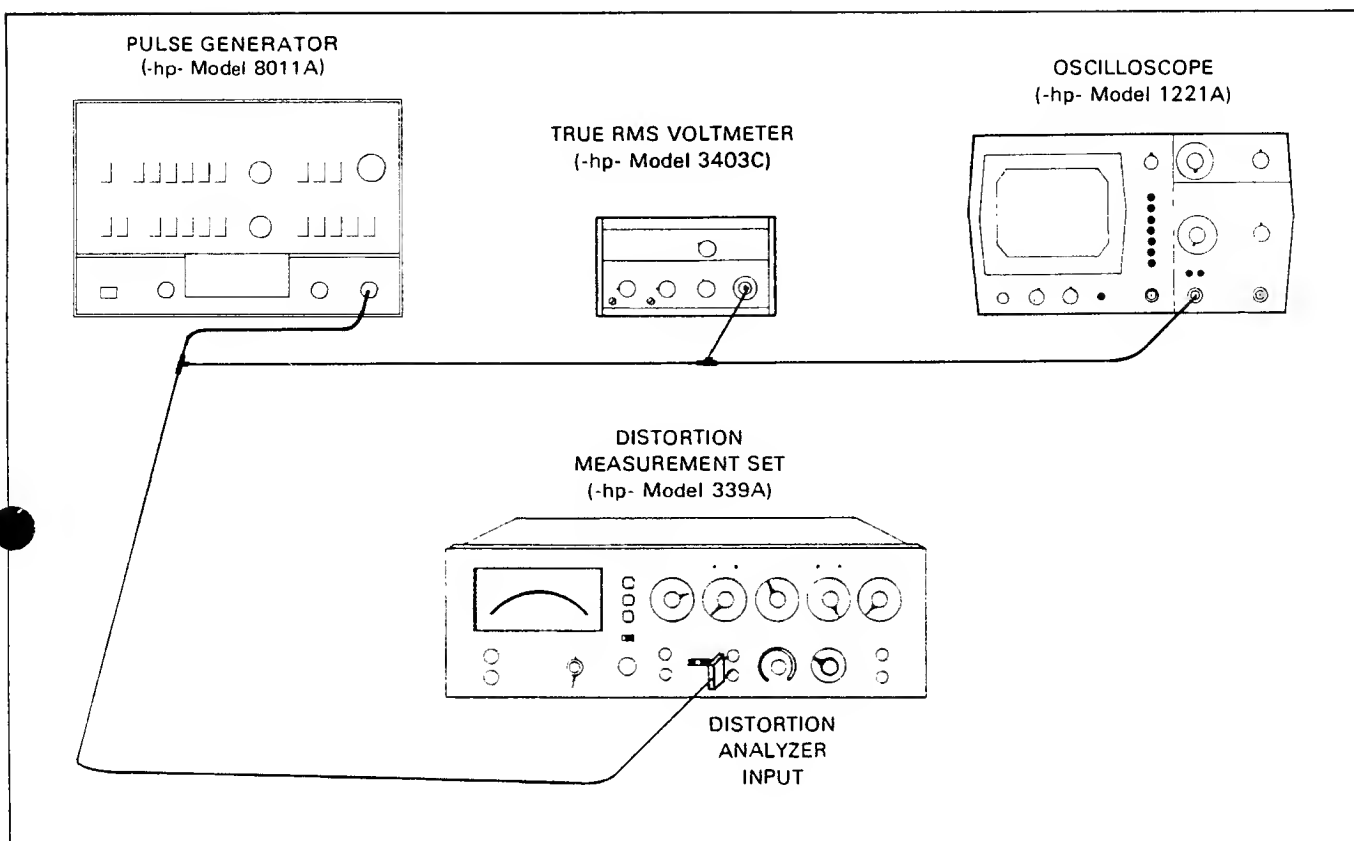


Figure 4-3. RMS Accuracy Test.

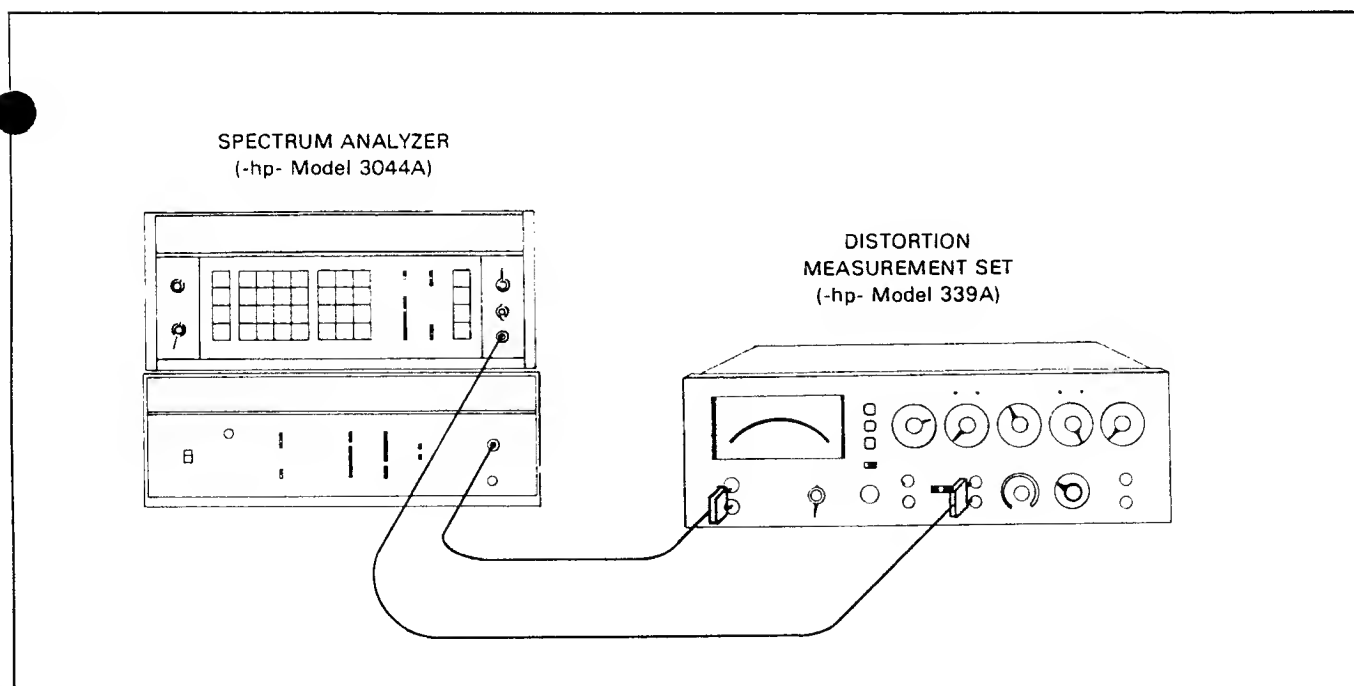


Figure 4-4. Filter Accuracy Test.

- a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN./⊥
 (center position)

- b. Set the AC Calibrator controls for an output of 1 V, 1 kHz.

- c. Set the True RMS Voltmeter to read AC Volts on the 1 V range.

- d. Connect the equipment as shown in Figure 4-2.

The 339A 1 V meter indication and MONITOR output level should be within the Test Limits listed in Table 4-2.

- f. Using the AC Calibrator, verify the 339A meter accuracy and MONITOR output accuracy for each input level listed in Table 4-2.

Table 4-2. Meter Tracking and MONITOR Output Accuracy Tests.

Input Level	Meter Indication	Monitor Output Level
1.0 V	.98 - 1.02	.95 - 1.05
.9 V	.88 - .92	.85 - .95
.8 V	.78 - .82	.75 - .85
.7 V	.68 - .72	.65 - .75
.6 V	.58 - .62	.55 - .65
.5 V	.48 - .52	.45 - .55
.4 V	.38 - .42	.35 - .45
.3 V	.28 - .32	.25 - .35
.2 V	.18 - .22	.15 - .25
.1 V	.08 - .12	.05 - .15

4-13. RMS Accuracy (crest factor) Test.

Equipment Required:

Pulse Generator (-hp- Model 8011A)
 True RMS Voltmeter (-hp- Model 3403C)
 Oscilloscope (-hp- Model 1221A)

- a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE 3 V
 INPUT/GND SELECT DIS. AN./⊥
 (center position)

- b. Connect the equipment as shown in Figure 4-3.

- c. Adjust the pulse generator for a 10 V peak-to-peak positive pulse with a repetition rate of 1 kHz (as observed on the oscilloscope).

- d. Adjust the Pulse Generator symmetry until the true RMS voltmeter indicates 3.00 V rms.

NOTE

The pulse generator amplitude and symmetry controls may interact. Repeat adjustments as necessary to obtain a true rms meter indication of 3 V and an oscilloscope presentation of 10 V peak-to-peak.

- e. The 339A meter indication must be 3 volts \pm .06 volts.

- f. Change the Pulse Generator repetition rate to 100 Hz. Readjust the amplitude and symmetry as necessary to obtain a true RMS meter indication of 3 V and a 10 V peak-to-peak oscilloscope presentation.

- g. The 339A meter indication must be 3 V \pm .06 volts.

- h. Change the Pulse Generator repetition rate to 10 kHz. Readjust the amplitude and symmetry as necessary to obtain a True RMS meter reading of 3 V and a 10 V peak-to-peak oscilloscope presentation.

- i. The 339A meter indication must be 3 V \pm .12 volts.

4-14. Filter Accuracy Test.

Equipment Required:

Spectrum Analyzer (-hp- Model 3044A)

- a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN./⊥
 (center position)

- b. Connect the equipment as shown in Figure 4-4.

- c. Set the Synthesizer (3330B) output frequency to 400 Hz and adjust the output level for a full-scale meter reading on the 339A.

- d. Set the Spectrum Analyzer (3571A) controls for an input impedance of 1 M Ω , an input range of +10 dB V, a bandwidth of 3 Hz and a relative display reference.

- a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN./⊥
 (center position)

- b. Set the AC Calibrator controls for an output of 1 V, 1 kHz.

- c. Set the True RMS Voltmeter to read AC Volts on the 1 V range.

- d. Connect the equipment as shown in Figure 4-2.

The 339A 1 V meter indication and MONITOR output level should be within the Test Limits listed in Table 4-2.

- f. Using the AC Calibrator, verify the 339A meter accuracy and MONITOR output accuracy for each input level listed in Table 4-2.

Table 4-2. Meter Tracking and MONITOR Output Accuracy Tests.

Input Level	Meter Indication	Monitor Output Level
1.0 V	.98 - 1.02	.95 - 1.05
.9 V	.88 - .92	.85 - .95
.8 V	.78 - .82	.75 - .85
.7 V	.68 - .72	.65 - .75
.6 V	.58 - .62	.55 - .65
.5 V	.48 - .52	.45 - .55
.4 V	.38 - .42	.35 - .45
.3 V	.28 - .32	.25 - .35
.2 V	.18 - .22	.15 - .25
.1 V	.08 - .12	.05 - .15

4-13. RMS Accuracy (crest factor) Test.

Equipment Required:

Pulse Generator (-hp- Model 8011A)
 True RMS Voltmeter (-hp- Model 3403C)
 Oscilloscope (-hp- Model 1221A)

- a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE 3 V
 INPUT/GND SELECT DIS. AN./⊥
 (center position)

- b. Connect the equipment as shown in Figure 4-3.

- c. Adjust the pulse generator for a 10 V peak-to-peak positive pulse with a repetition rate of 1 kHz (as observed on the oscilloscope).

- d. Adjust the Pulse Generator symmetry until the true RMS voltmeter indicates 3.00 V rms.

NOTE

The pulse generator amplitude and symmetry controls may interact. Repeat adjustments as necessary to obtain a true rms meter indication of 3 V and an oscilloscope presentation of 10 V peak-to-peak.

- e. The 339A meter indication must be 3 volts \pm .06 volts.

- f. Change the Pulse Generator repetition rate to 100 Hz. Readjust the amplitude and symmetry as necessary to obtain a true RMS meter indication of 3 V and a 10 V peak-to-peak oscilloscope presentation.

- g. The 339A meter indication must be 3 V \pm .06 volts.

- h. Change the Pulse Generator repetition rate to 10 kHz. Readjust the amplitude and symmetry as necessary to obtain a True RMS meter reading of 3 V and a 10 V peak-to-peak oscilloscope presentation.

- i. The 339A meter indication must be 3 V \pm .12 volts.

4-14. Filter Accuracy Test.

Equipment Required:

Spectrum Analyzer (-hp- Model 3044A)

- a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN./⊥
 (center position)

- b. Connect the equipment as shown in Figure 4-4.

- c. Set the Synthesizer (3330B) output frequency to 400 Hz and adjust the output level for a full-scale meter reading on the 339A.

- d. Set the Spectrum Analyzer (3571A) controls for an input impedance of 1 M Ω , an input range of +10 dBV, a bandwidth of 3 Hz and a relative display reference.

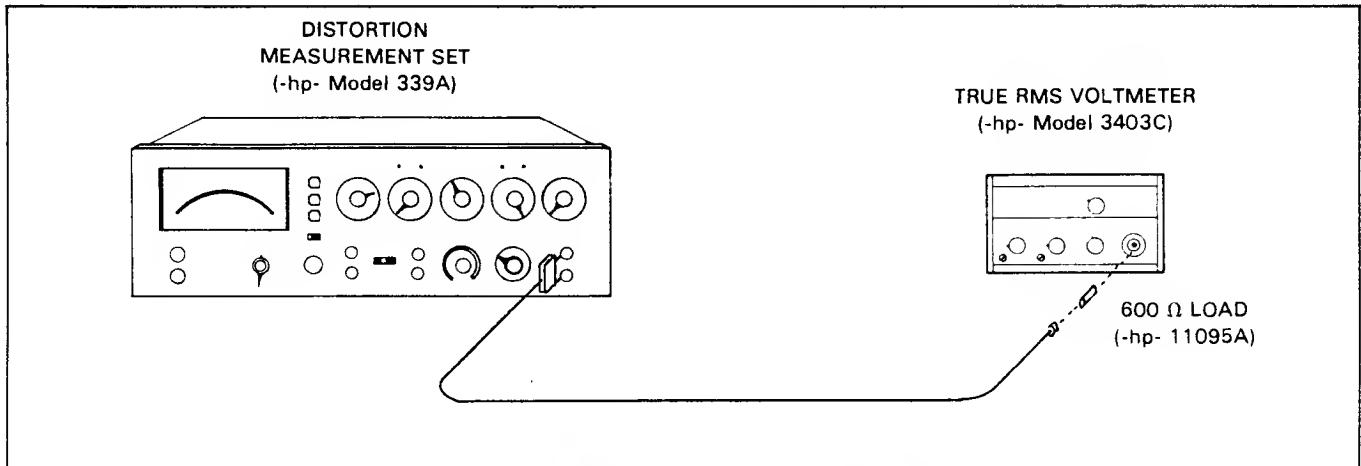


Figure 4-6. Oscillator Output Impedance Test.

FREQUENCY VERNIER CAL
OSCILLATOR 3 V

Frequency Counter (-hp- Model 5300A Mainframe,
5302A Frequency Module)
600 ohm Resistive Load (-hp- 11095A)

b. Connect the equipment as shown in Figure 4-6 (without the 600 ohm load).

a. Set the 339A controls as follows:

c. Adjust the True RMS Voltmeter controls to measure AC volts on the 10 V range.

FREQUENCY 10 Hz (1.0 x 10)
FREQUENCY VERNIER CAL
OSCILLATOR LEVEL 3 V

d. Adjust the 339A LEVEL vernier control to obtain a reading of 6.00 V on the True RMS voltmeter.

e. Disconnect the cable from the True RMS Voltmeter and install the 600 ohm load as shown in Figure 4-6.

f. The True RMS Voltmeter reading must be between 2.927 and 3.077 V rms.

Table 4-3. Oscillator Output Limits (Flatness Test).

Output Frequency	Output Level
10 Hz	2.930 - 3.070
20 Hz	2.965 - 3.035
100 Hz	2.965 - 3.035
10 kHz	2.965 - 3.035
20 kHz	2.965 - 3.035
110 kHz	2.930 - 3.070

4-18. Oscillator Frequency Accuracy Test.

Equipment Required:

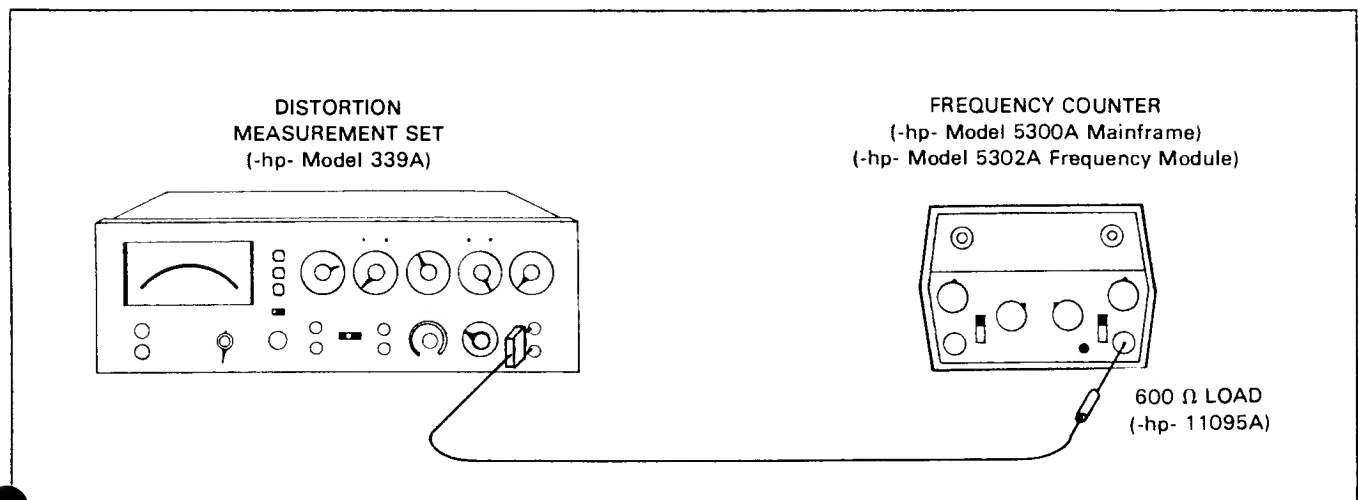


Figure 4-7. Oscillator Frequency Accuracy Test.

Table 4-4. Oscillator Frequency Accuracy Test.

Frequency	339A Frequency Range Setting	Frequency Counter Indication (Period)
10 Hz 20 Hz 50 Hz 100 Hz	X 10	102.04 mSec. - 98.04 mSec. 51.020 mSec. - 49.019 mSec. 20.408 mSec. - 19.608 mSec. 10.204 mSec. - 9.803 mSec.
100 Hz 200 Hz 500 Hz 1 kHz	X 100	10.204 mSec. - 9.803 mSec. 5.1020 mSec. - 4.9019 mSec. 2.0408 mSec. - 1.9608 mSec. 1.0204 mSec. - .9803 mSec.
1 kHz 1.2 kHz 1.3 kHz 1.4 kHz 1.5 kHz 1.6 kHz 1.7 kHz 1.8 kHz 1.9 kHz 2.0 kHz 3.0 kHz 4.0 kHz 5.0 kHz 6.0 kHz 7.0 kHz 8.0 kHz 9.0 kHz 10.0 kHz	X 1K	1020.4 μSec. - 980.3 μSec. 927.64 μSec. - 891.26 μSec. 850.34 μSec. - 816.99 μSec. 784.93 μSec. - 754.14 μSec. 728.86 μSec. - 700.28 μSec. 680.27 μSec. - 653.59 μSec. 637.75 μSec. - 612.74 μSec. 600.24 μSec. - 576.70 μSec. 566.89 μSec. - 544.66 μSec. 537.05 μSec. - 515.99 μSec. 510.20 μSec. - 490.19 μSec. 340.13 μSec. - 326.79 μSec. 255.10 μSec. - 245.09 μSec. 204.08 μSec. - 196.08 μSec. 170.06 μSec. - 163.39 μSec. 145.77 μSec. - 140.05 μSec. 127.55 μSec. - 122.54 μSec. 113.37 μSec. - 108.93 μSec. 102.04 μSec. - 98.039 μSec.
10 kHz 20 kHz 50 kHz 100 kHz 159 kHz	X 10 K	102.04 μSec. - 98.039 μSec. 51.020 μSec. - 49.019 μSec. 20.408 μSec. - 19.608 μSec. 10.204 μSec. - 9.8039 μSec. 9.3615 μSec. - 8.9944 μSec.

b. Connect the equipment as shown in Figure 4-7.

c. Adjust the Frequency Counter controls to measure period.

d. The 339A 10 Hz frequency should be within the limits listed in Table 4-4.

e. Verify the 339A Oscillator Frequency Accuracy for each frequency listed in Table 4-4.

4-19. Oscillator Total Harmonic Distortion Test.

Equipment Required:

- Spectrum Analyzer (-hp- Model 3044A)
- Tuneable Notch Filter (-hp- Model 339A)
- 600 ohm Resistive Load (-hp- 11095A)

a. Set the 339A controls as follows:

FUNCTION OSCillator LEVEL
FREQUENCY 10 Hz (1.0 x 10)
FREQUENCY VERNIER CAL
OSCILLATOR LEVEL 3 V

b. Connect the equipment as shown in Figure 4-8.

c. Adjust the 339A OSCILLATOR LEVEL vernier for an output level of 3 V rms as indicated on the 339A meter.

d. Set the Tuneable Notch Filter (339A) Frequency to 10 Hz and set the Function to Input Level. Adjust the Input Range control as necessary to obtain an on-scale meter indication as near full-scale as possible.

e. Set the Spectrum Analyzer (3571A) controls for an input impedance of 1 MΩ, an input range of -10 dB V, a bandwidth of 3 Hz, and a relative display reference.

f. Tune the Spectrum Analyzer to the exact frequency of the 339A under test by varying the Synthesizer (3330B) frequency until the Spectrum Analyzer indicates maximum level. Enter this frequency as both the output frequency and step frequency of the Synthesizer.

g. Reference the Spectrum Analyzer to the amplitude of the 339A fundamental frequency by pressing the Enter Offset button. (Observe a Spectrum Analyzer display of 00.00 dB.)

h. Adjust the Tuneable Notch Filter controls as necessary to make a distortion measurement. (The purpose of this step is to null the fundamental frequency of the 339A Oscillator output. This puts the distortion products within the dynamic range of the Spectrum Analyzer.)

i. Step the Synthesizer frequency to the second harmonic frequency of the 339A output.

j. The amplitude of the second harmonic frequency, relative to the fundamental frequency is determined by adding the Spectrum Analyzer display reading and the range setting of the Notch Filter. (As an example: If the Notch Filter distortion range control is set to -80 dB and the Spectrum Analyzer display indicates -23 dB the amplitude of the second harmonic is -103 dB, relative to the fundamental.) Record the amplitude reading of the second harmonic.

k. Step the Synthesizer frequency to the frequency of the third harmonic.

l. Determine the relative amplitude of the third harmonic by adding the Spectrum Analyzer display reading and the range setting of the Notch Filter. Record the amplitude reading of the third harmonic.

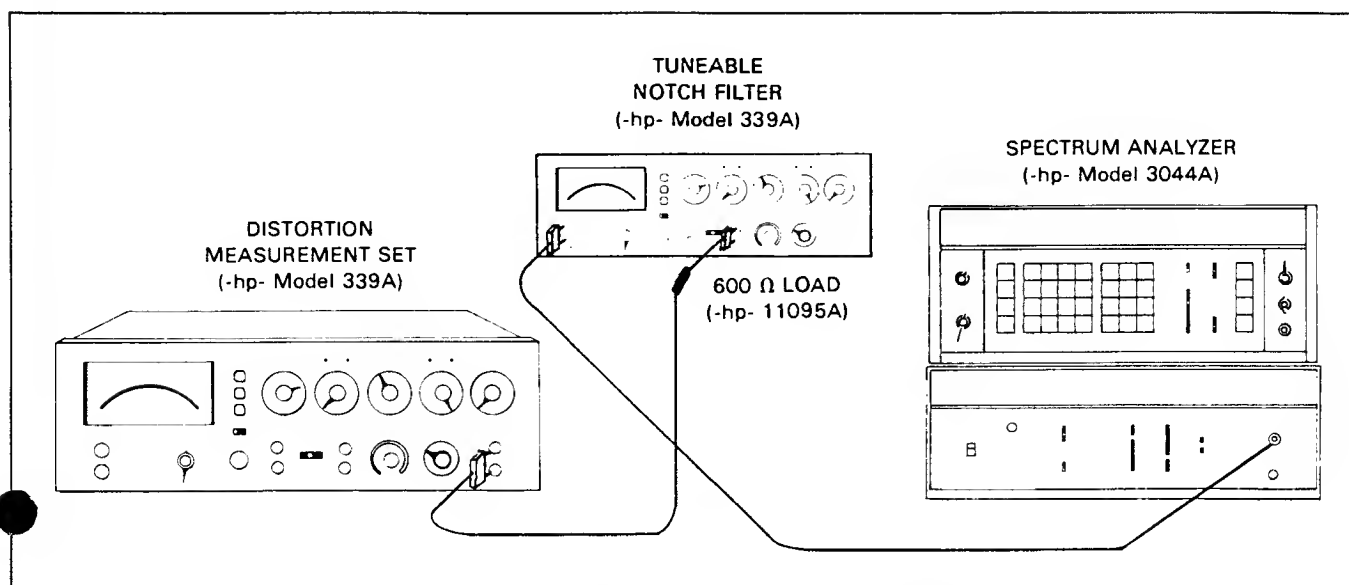


Figure 4-8. Oscillator Total Harmonic Distortion Test.

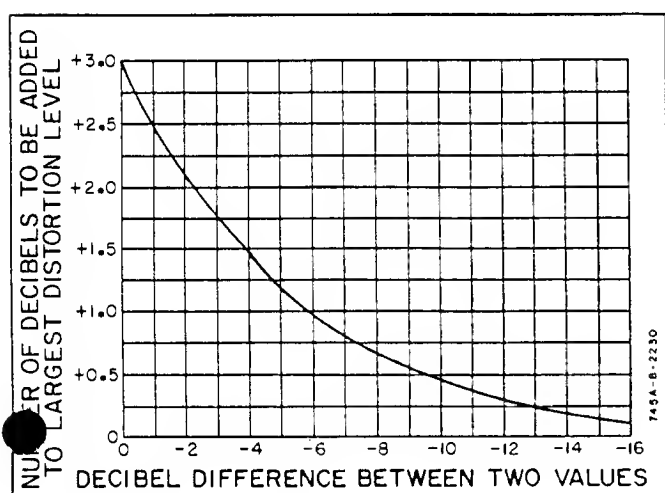


Figure 4-9. Logarithmic Addition of Harmonic Components.

Table 4-5. Oscillator Total Harmonic Distortion Test.

339A Frequency	THD Specification
10 Hz	> -95 dB
100 Hz	> -95 dB
1 kHz	> -95 dB
10 kHz	> -95 dB
20 kHz	> -95 dB
30 kHz	> -85 dB
50 kHz	> -80 dB
109 kHz	> -70 dB

m. Calculate the Total Harmonic Distortion using the graph shown in Figure 4-9. As an example: If the amplitude of the second harmonic is -110 dB and the third harmonic amplitude is -114 dB the dB difference between the two is -4 dB. Locate this number on the horizontal axis of the graph. The -4 line intersects the curve at approximately the $+1.5$ level on the vertical axis. The total harmonic distortion is therefore the amplitude of the largest harmonic (2nd harmonic) plus the number determined on the vertical axis (-110 dB $+ 1.5$ dB = -108.5 dB).

n. The 339A should meet the 10 Hz THD specification listed in Table 4-5.

o. Repeat Steps f through m for each frequency listed in Table 4-5.

NOTE

It may be necessary to increase the Bandwidth of the Spectrum Analyzer at higher frequencies. Adjust as necessary to maintain a stable reading.

4-20. DISTORTION ANALYZER PERFORMANCE TESTS.

4-21. The Voltmeter Performance Tests, at the beginning of this section, should be performed and the Voltmeter accuracy verified before proceeding with the Distortion Analyzer Tests.

4-22. Fundamental Rejection and Induced Distortion Test.

4-23. The following test requires an exceptionally low

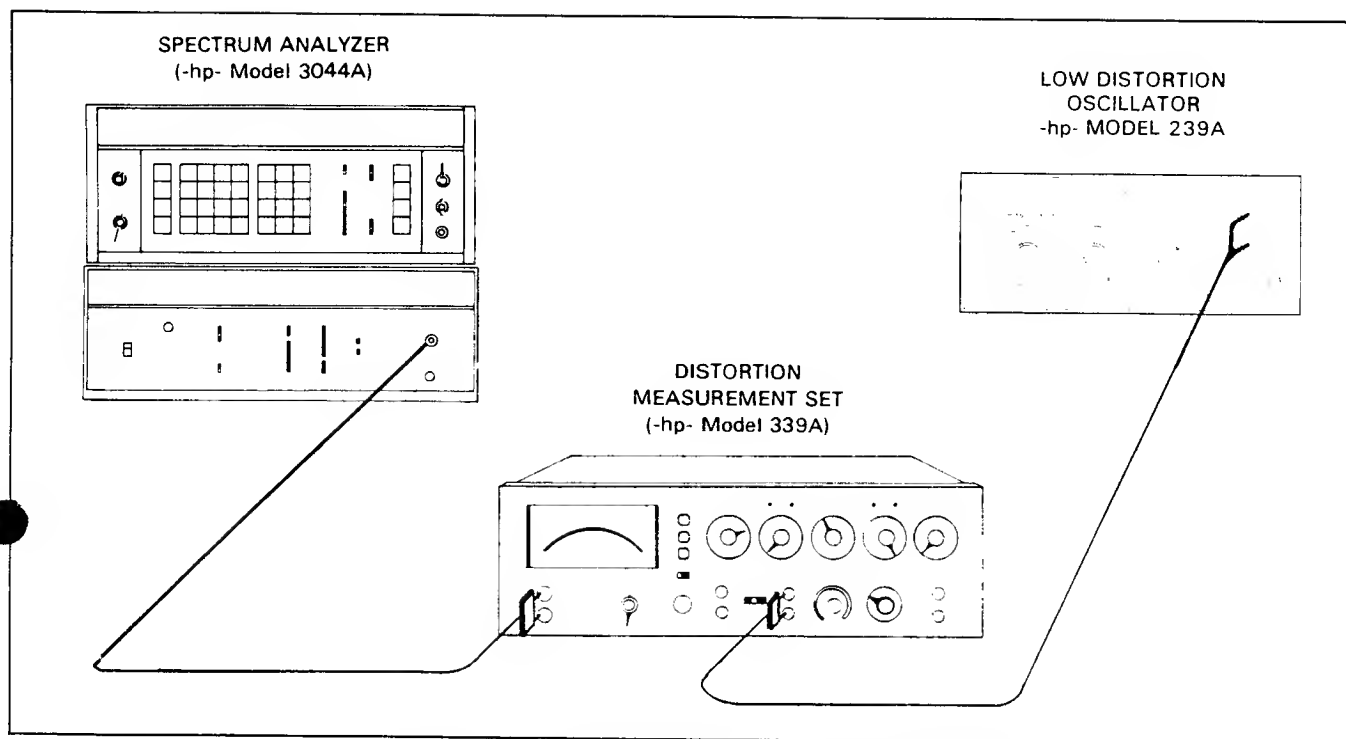


Figure 4-10. Fundamental Rejection and Induced Distortion Test.

distortion signal source. In most cases the Model 339A being used as a source will be sufficient. However, if the instrument under test does not meet the Induced Distortion specifications listed in Table 4-6, it must be determined whether the distortion is due to the signal source or the analyzer under test. In some cases this may be accomplished by exchanging the signal source with another. If this is not practical, low-pass filters may be constructed to enhance the signal purity of the source.

NOTE

When adjusting the frequency of the Synthesizer, use frequency steps equal to 10% of the fundamental frequency being measured. This insures adequate resolution.

e. Reference the Spectrum Analyzer to this level by pressing the enter offset button. The Spectrum Analyzer should indicate 00.00 dB.

f. Set the FUNCTION switch of the 339A under test to DISTORTION.

g. Adjust the DISTORTION RANGE control for an on-scale meter indication as near full-scale as possible.

h. Determine the fundamental rejection of the 339A under test by adding the display reading of the Spectrum Analyzer and the distortion range setting of the 339A under test. (As an example: If the 339A DISTORTION RANGE control is set to -80 dB and the Spectrum Analyzer display indicates -35 dB the fundamental rejection is -115 dB.)

i. The fundamental rejection level determined in the previous step must meet or exceed the specification listed in Table 4-6.

j. Step the Synthesizer frequency to the second harmonic frequency.

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE NORMAL
 INPUT RANGE 3 V
 INPUT/GND SELECT DIS. AN./⊥
 (center position)
 FREQUENCY 10 Hz (1.0 x 10)

b. Connect the equipment as shown in Figure 4-10.

c. Set the Low Distortion Oscillator for an output frequency of 10 Hz. Adjust the output level for a full-scale (0 dB) meter indication on the 339A under test.

d. Adjust the frequency of the Synthesizer (3330B) for a maximum level indication on the Spectrum Analyzer (3571A). Enter this frequency as both the output frequency and step frequency of the synthesizer.

Table 4-6. Fundamental Rejection and Induced Distortion Test.

Test Frequency	Fundamental Rejection Specification	Induced Distortion Specification
10 Hz	> -100 dB	> -95 dB
100 Hz		
1 kHz		
10 kHz		
20 kHz		
30 kHz	> -90 dB	> -90 dB
50 kHz		> -85 dB
110 kHz		> -70 dB

k. Determine the relative amplitude of the second harmonic by adding the Spectrum Analyzer display reading and the distortion range setting of the 339A under test. Record the amplitude reading of the second harmonic.

l. Step the Synthesizer frequency to the third harmonic frequency.

m. Determine the relative amplitude of the third harmonic by adding the Spectrum Analyzer display reading and the distortion range setting of the 339A under test. Record the amplitude reading of the third harmonic.

n. Calculate the Induced Harmonic Distortion using the graph shown in Figure 4-9.

o. The induced distortion measurement must meet or exceed the specification listed in Table 4-6.

p. Set the FUNCTION switch of the 339A under test to INPUT LEVEL.

q. Repeat Steps c through p for each frequency listed in Table 4-6.

4-24. Distortion Measurement Accuracy Test.

Equipment Required:

Spectrum Analyzer (-hp- Model 3044A)
 Low Distortion Oscillator (-hp- Model 339A)
 600 Ω 1% Metal Film Resistor (-hp- Part No. 0698-5405)
 60 k Ω 1% Metal Film Resistor (-hp- Part No. 0698-5973)

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 DISTORTION RANGE -80 dB
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN./L
 (center position)
 FREQUENCY 10 kHz (1.0 x 10 K)

b. Connect the equipment as shown in Figure 4-11.

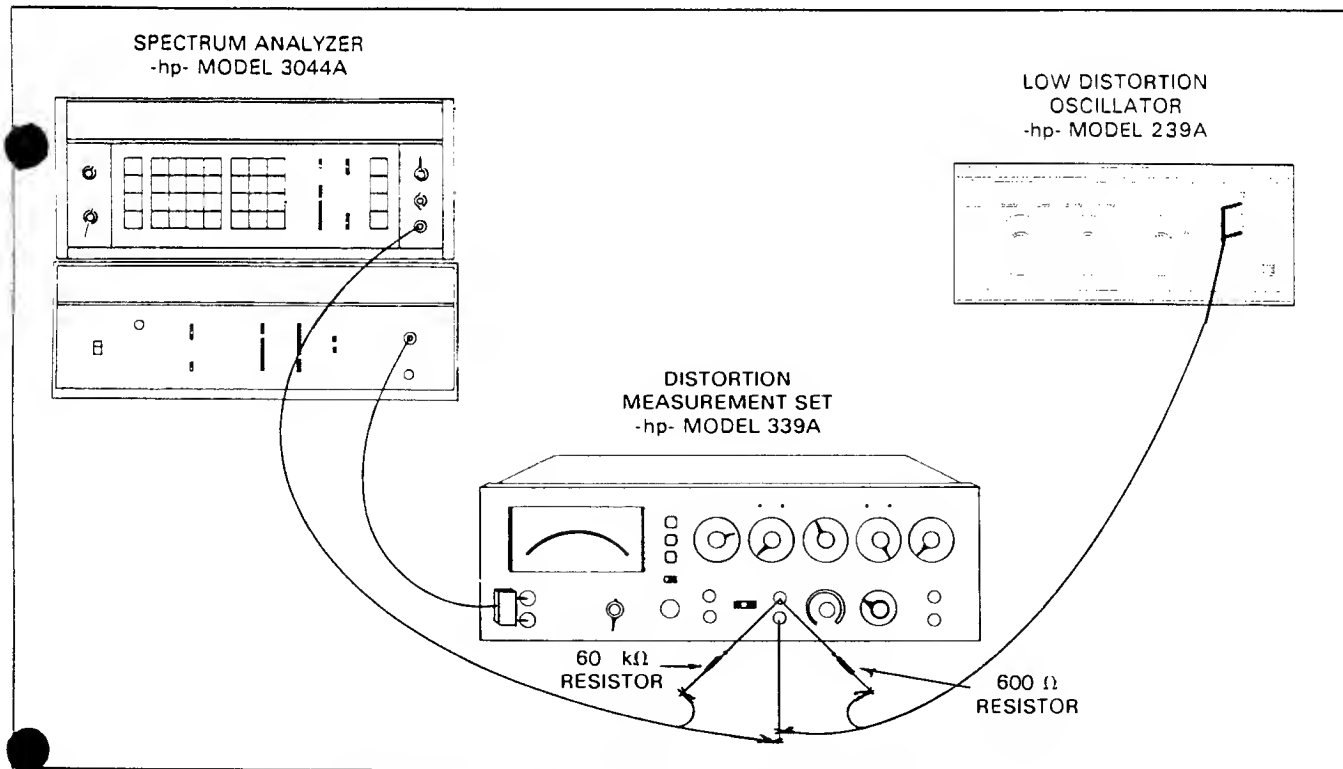
**Figure 4-11. Distortion Measurement Accuracy Test.**

Table 4-7. Distortion Measurement Accuracy Test.

Distortion Frequency	Accuracy Limits
10 Hz	+1.0 dB, -2.0 dB
20 Hz	±1.0 dB
100 Hz	±1.0 dB
20 kHz	±1.0 dB
50 kHz	+1.0 dB, -2.0 dB
100 kHz	+1.5 dB, -4.0 dB
330 kHz	+1.5 dB, -4.0 dB

- c. Adjust the Synthesizer (3330B) controls for an output frequency of 1 kHz and an output amplitude of -40 dBm.
- d. Set the Low Distortion Oscillator for an output frequency of 10 kHz. Adjust the output level for a meter indication of 1 V on the 339A under test.
- e. Set the FUNCTION switch of the 339A under test to DISTORTION.
- f. Adjust the Synthesizer amplitude as necessary to obtain a distortion reading of -80 dB on the 339A under test (full-scale meter indication).
- g. Set the Spectrum Analyzer (3571A) to a 3 Hz bandwidth, an input range of +10 dB V, an input impedance of 1 MΩ , and a relative display reference. Reference the Spectrum Analyzer to the 339A measurement by pressing the Enter Offset button.

- h. Set the Synthesizer to each frequency listed in Table 4-7, and verify that the Spectrum Analyzer reading is within the limits listed.

4-25. Residual Noise Test.

Equipment Required:

1 k Ω shielded load (Refer to Figure 4-12.)

- a. Set the 339A controls as follows:

FUNCTION DISTORTION
FILTERS80 kHz ON (in)
DISTORTION RANGE.....-80 dB
INPUT RANGE 1 V
FREQUENCY 20 kHz (2.0 x 10 K)
INPUT, GND SELECT DIS. AN. ⊥
(center position)

- b. Connect the 1 kΩ shielded load to the DISTORTION ANALYZER input terminals. (See Figure 4-12 for construction details of 1 k Ω load.)

- c. The 339A measurement indication must be below -92 dB.

4-26. Input Impedance Test.

Equipment Required:

Spectrum Analyzer (-hp- Model 3044A)
100 k Ω 0.1% Metal Film Resistor (-hp- Part No. 0698-4158)

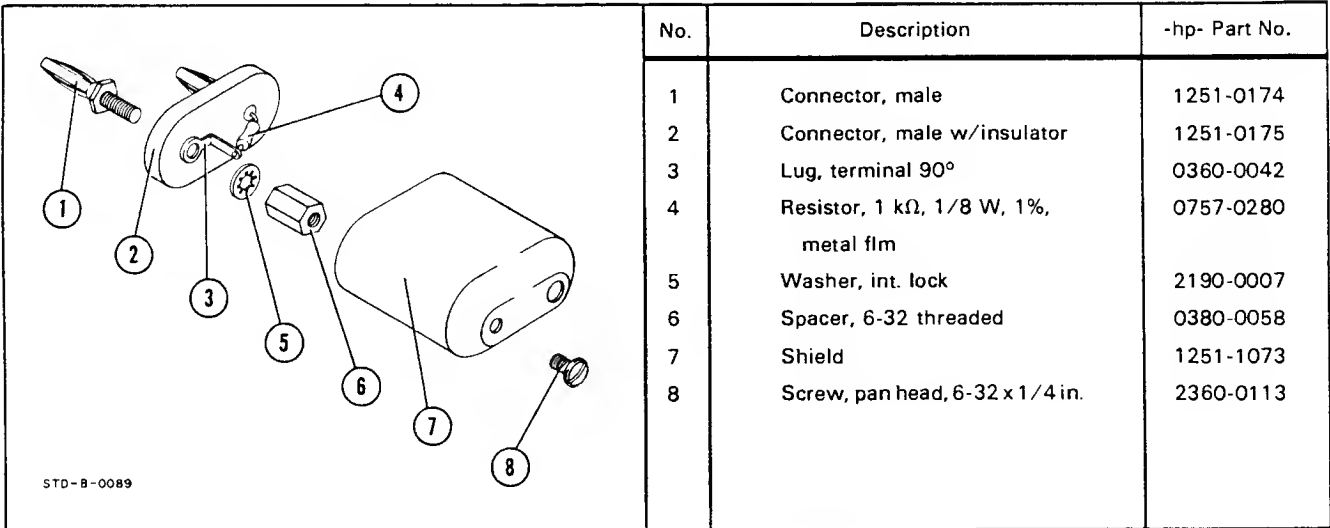


Figure 4-12. Shielded Load Assembly.

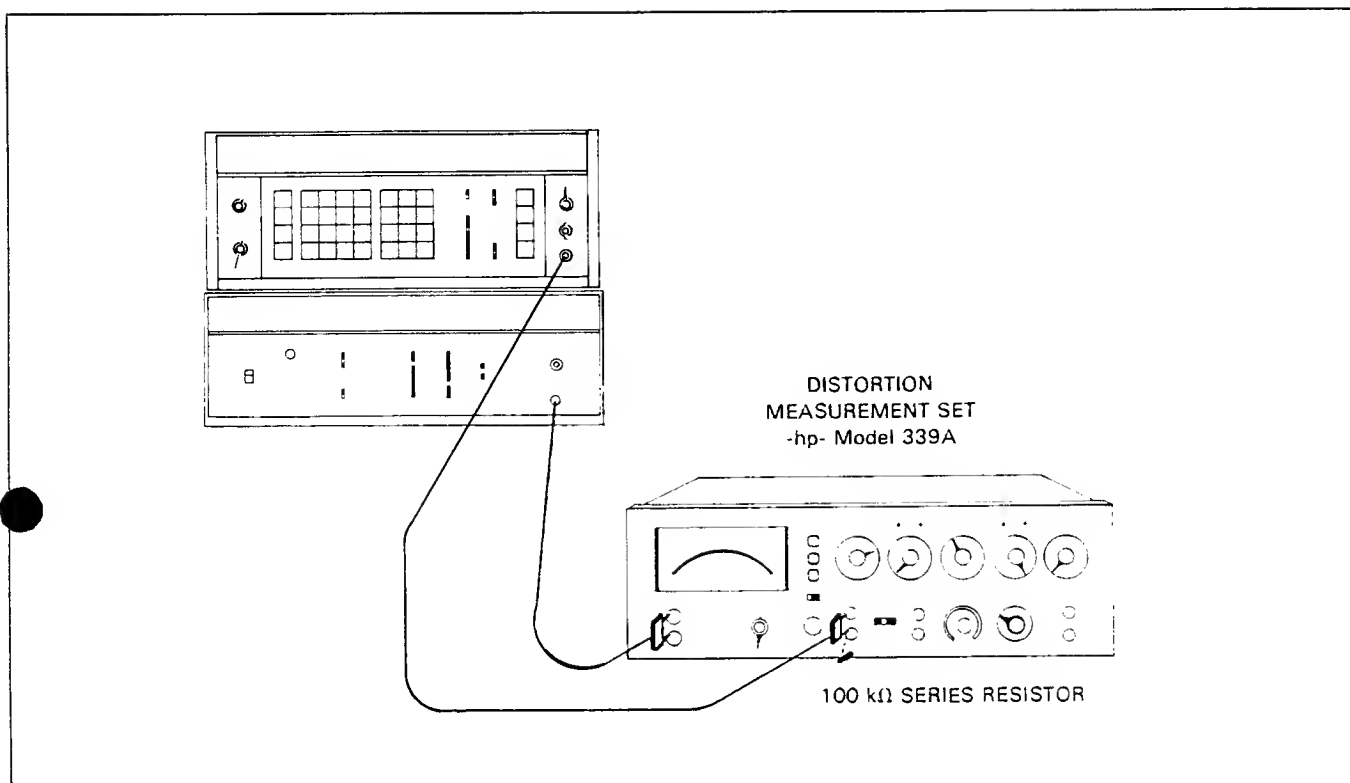


Figure 4-13. Input Impedance Test.

- a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN./ \perp
 (center position)

- b. Connect the equipment as shown in Figure 4-13.

c. Set the Synthesizer (3330B) for an output frequency of 1 kHz and adjust the amplitude as necessary to obtain a meter reading of 0 dB on the 339A.

d. Set the Spectrum Analyzer (3571A) reference by pressing the Enter Offset button. Observe a display reading of 00.00 dB.

e. Disconnect the cable from the 339A and insert the 100 k Ω resistor in series with the input. The Spectrum Analyzer must indicate -6.02 dB \pm .05 dB.

f. Change the Synthesizer frequency to 17.000 kHz. The Spectrum Analyzer reading must be less than -9.00 dB indicating an input capacitance of less than 100 pF.

PERFORMANCE TEST RECORD

Hewlett-Packard Model 339A

Tests Performed By: _____

Distortion Measurement Set

Date: _____

Serial No. _____

VOLTMETER PERFORMANCE

Full-Scale Accuracy and Frequency Response Test:

339A Input Level	339A Input Range	339A 10 Hz Reading	339A 110 KHz Reading	Test Limits	339A 20 Hz Reading	339A 100 Hz Reading	339A 1 kHz Reading	339A 10 kHz Reading	339A 20 kHz Reading	Test Limits
.001 V	.001 V			.00096 - .00104						.00098 - .00102
.003 V	.003 V			.00288 - .00312						.00294 - .00306
.01 V	.01 V			.0096 - .0104						.0098 - .0102
.03 V	.03 V			.0288 - .0312						.0294 - .0306
.1 V	.1 V			.096 - .104						.098 - .102
.3 V	.3 V			.288 - .312						.294 - .306
1 V	1 V			.96 - 1.04						.98 - 1.02
3 V	3 V			2.88 - 3.12						2.94 - 3.06
10 V	10 V			9.6 - 10.4						9.8 - 10.2
30 V	30 V			28.8 - 31.2						29.4 - 30.6
100 V	100 V			96 - 104						98 - 102
300 V	300 V			288 - 312						294 - 306

Meter Tracking and Monitor Output Accuracy Test:

Input Level	339A Meter Reading	Test Limits	Monitor Output Level	Test Limits
1.0 V		.98 - 1.02		.95 - 1.05
.9 V		.88 - .92		.85 - .95
.8 V		.78 - .82		.75 - .85
.7 V		.68 - .72		.65 - .75
.6 V		.58 - .62		.55 - .65
.5 V		.48 - .52		.45 - .55
.4 V		.38 - .42		.35 - .45
.3 V		.28 - .32		.25 - .35
.2 V		.18 - .22		.15 - .25
.1 V		.08 - .12		.05 - .15

PERFORMANCE TEST RECORD (Cont'd)

Model 339A

RMS Accuracy (crest factor) Test:

RMS Input Level	Repetition Rate	339A Meter Reading	Test Limits
3 V	100 Hz	_____	2.94 - 3.06
	1 kHz	_____	2.94 - 3.06
	10 kHz	_____	2.88 - 3.12

Filter Accuracy Test:

339A Filter	-3 dB Frequency	Test Limits
400 Hz	_____	360 Hz - 435 Hz
30 kHz	_____	27 kHz - 32.6 kHz
80 kHz	_____	72.1 kHz - 87 kHz

OSCILLATOR PERFORMANCE**Output Level and Flatness Test:**

339A Output Frequency	Output Level	Test Limits
10 Hz	_____	2.930 - 3.070
20 Hz	_____	2.965 - 3.035
100 Hz	_____	2.965 - 3.035
10 kHz	_____	2.965 - 3.035
20 kHz	_____	2.965 - 3.035
110 kHz	_____	2.930 - 3.070

Maximum Output Level into 600 Ω = _____ (> 3 V rms)**Output Impedance Test:**

With an unloaded output level of 6.00 V rms, the output level into a 600 Ω load = _____
(test limit 2.927 - 3.077 V rms).

Oscillator Frequency Accuracy Test:

339A Output Frequency	339A Frequency Range Setting	Frequency Counter Indication (Period)	Test Limits
10 Hz	X 10	_____	98.04 - 102.04 msec.
20 Hz		_____	49.019 - 51.020 msec.
50 Hz		_____	19.608 - 20.408 msec.
100 Hz		_____	9.803 - 10.204 msec.
100 Hz	X 100	_____	9.803 - 10.204 msec.
200 Hz		_____	4.9019 - 5.1020 msec.
500 Hz		_____	1.9608 - 2.0408 msec.
1 kHz		_____	.9803 - 1.0204 msec.

PERFORMANCE TEST RECORD (Cont'd)**Oscillator Frequency Accuracy Test (Cont'd):**

339A Output Frequency	339A Frequency Range Setting	Frequency Counter Indication (Period)	Test Limits
1.0 kHz	X 1K		980.3 - 1020.4 μ sec.
1.1 kHz			891.26 - 927.64 μ sec.
1.2 kHz			816.99 - 850.34 μ sec.
1.3 kHz			754.14 - 784.93 μ sec.
1.4 kHz			700.28 - 728.86 μ sec.
1.5 kHz			653.59 - 680.27 μ sec.
1.6 kHz			612.74 - 637.75 μ sec.
1.7 kHz			576.70 - 600.24 μ sec.
1.8 kHz			544.66 - 566.89 μ sec.
1.9 kHz			515.99 - 537.05 μ sec.
2.0 kHz			490.19 - 510.20 μ sec.
3.0 kHz			326.79 - 340.13 μ sec.
4.0 kHz			245.09 - 255.10 μ sec.
5.0 kHz			196.08 - 204.08 μ sec.
6.0 kHz			163.39 - 170.06 μ sec.
7.0 kHz			140.05 - 145.77 μ sec.
8.0 kHz			122.54 - 127.55 μ sec.
9.0 kHz			108.93 - 113.37 μ sec.
10 kHz			98.039 - 102.04 μ sec.
10 kHz	X 10K		98.039 - 102.04 μ sec.
20 kHz			49.019 - 51.020 μ sec.
50 kHz			19.608 - 20.408 μ sec.
100 kHz			9.8039 - 10.204 μ sec.
109 kHz			9.3615 - 8.9944 μ sec.

Oscillator Total Harmonic Distortion Test:

339A Output Frequency	Calculated THD	Test Limit
10 Hz		-95 dB
100 Hz		
1 kHz		
10 kHz		
20 kHz		
30 kHz		-85 dB
50 kHz		-80 dB
109 kHz		-70 dB

PERFORMANCE TEST RECORD (Cont'd)**DISTORTION ANALYZER PERFORMANCE**

Fundamental Rejection and Induced Distortion Test:

Test Frequency	339A Fundamental Rejection	Test Limit	339A Induced Distortion	Test Limit
10 Hz		-100 dB		-95 dB
100 Hz				
1 kHz				
10 kHz				
20 kHz				
30 kHz		-90 dB		-90 dB
50 kHz				-85 dB
110 kHz				-70 dB

Distortion Measurement Accuracy Test:

Distortion Frequency	Spectrum Analyzer Reading	Test Limit
10 Hz		+1.0 dB, -2.0 dB
20 Hz		±1.0 dB
100 Hz		±1.0 dB
20 kHz		±1.0 dB
50 kHz		+1.0 dB, -2.0 dB
100 kHz		+1.5 dB, -4.0 dB
330 kHz		+1.5 dB, -4.0 dB

Residual Noise Test:

Residual Noise with 1 k Ω input load and 80 kHz Filter = _____ . Test Limit; below -92 dB.

Input Impedance Test:

Spectrum Analyzer indication for 100 k Ω resistance in series with 339A input, frequency -1 kHz = _____ .
Test Limit -5.97 to -6.07 dB.

Spectrum Analyzer indication for frequency of 17 kHz = _____ . Test Limit -6.02 to -9.00 dB.

SECTION V ADJUSTMENTS

5-1. INTRODUCTION.

5-2. This section contains complete adjustment procedures for the Model 339A Distortion Measurement Set. After the instrument has been adjusted according to the procedures given in this section, it should meet the accuracy specifications listed in Table 1-1.

5-3. EQUIPMENT REQUIRED.

5-4. The test equipment required to perform the adjustments is listed at the beginning of each adjustment procedure and in the Recommended Test Equipment Table in Section I. If the recommended equipment is not available, substitute equipment which meets the critical specifications listed in the table may be used.

5-5. ADJUSTMENT LOCATIONS.

5-6. The location of all adjustments is shown in Figure 5-3 at the back of this section. The function of each adjustment is listed in Table 5-2.

5-7. FACTORY SELECTED COMPONENTS.

5-8. Certain components in the Model 339A are individually selected to compensate for varying circuit parameters. These components are noted on the schematics and in the material list by an asterisk (*). The value listed in the material list and on the schematic is the typical value of the selected component. The function of the factory selected components and their value ranges are listed in Table 5-1.

5-9. VOLTMETER ADJUSTMENTS.

5-10. Mechanical Meter Zero.

5-11. The mechanical meter-zero should be checked and adjusted, if necessary, before proceeding with the calibration procedures. The meter-zero is checked when the instrument is at its operating temperature and the power is off. The meter zero is correctly set when the pointer rests directly over the zero mark on the meter scale. To adjust the meter-zero, proceed as follows:

- Turn the instrument on and allow it to "warmup" for at least 20 minutes.
- Turn the instrument off and allow approximately 30 seconds for all capacitors to discharge.
- Rotate the zero adjustment screw clockwise until the pointer is left of zero and moving up-scale.

d. Continue rotating the screw clockwise until the pointer is exactly over the zero calibration mark.

e. Rotate the adjustment screw slightly counter-clockwise to relieve tension on the pointer suspension. If the pointer moves off zero, repeat Steps c through e, but make the counter-clockwise rotation less.

5-12. Gain Adjustments.

Equipment Required:

AC Calibrator (-hp- Model 745A).
Digital Voltmeter (-hp- Model 3465A).

- Set the 339A controls as follows:

FUNCTION INPUT LEVEL
FILTERS OFF (out)
METER RESPONSE VU
INPUT RANGE 3 V
INPUT/GND SELECT DIS. AN./⊥
(center position)

b. Set the AC Calibrator for an output of 3 V at 1 kHz. Connect the output of the AC Calibrator to the 339A DISTORTION ANALYZER input.

c. Adjust A2R17 (FULL SCALE ADJUST) for a meter indication of exactly 3 V.

d. Reduce the AC Calibrator output to 1 V at 1 kHz.

e. Adjust A2R37 (1/3 SCALE ADJUST) for a meter indication of exactly 1 V.

NOTE

The adjustment of A2R17 and A2R37 interact. Repeat Steps b through e until the meter indication is correct at both fullscale (3 V) and one-third scale (1 V).

f. Set the AC Calibrator for an output of 3.162 V at 1 kHz. Set the Digital Voltmeter to measure DC volts (20 volt range).

g. Connect the DVM's low input to the A2 assembly shield and the high input to A2TP2.

h. Adjust A2R36 (REFERENCE ADJUST) for a DVM reading of +3.162 V dc.

- i. Reduce the AC calibrator output to 0.94 V.
- j. Adjust A2R35 (LOW LIMIT ADJUST) until the INPUT RANGE low limit indicator just lights.
- k. Increase the AC Calibrator output to 0.95 V. The low limit indicator should turn off. If not, repeat Steps i and j.
- l. Increase the AC Calibrator output to 3.10 V. Note that both high and low INPUT RANGE indicator lights are OFF.
- m. Increase the AC Calibrator output to 3.4 V. The INPUT RANGE high limit indicator should light.

CAUTION

Set the LINE switch OFF before performing the following steps to prevent damaging A2U7.

- n. Set the 339A LINE switch OFF.
- o. Disconnect the cable from A2J2. Place the cable in such a manner that it will not short against the chassis or components on the PC assembly.
- p. Install a jumper wire between A2TP1 and A2TP8.
- q. Set the DVM to measure DC volts (20 volt range). Connect the DVM's high input to A2TP9 and the low input to the A2 assembly shield.
- r. Set the AC Calibrator for an output of 3 V at 1 kHz.
- s. Set the 339A LINE switch ON.
- t. Adjust A2R24 (AUTO SET-LEVEL FULL SCALE ADJUST) for a DVM reading of +3.162 V dc.
- u. Reduce the AC Calibrator output to 1 V.
- v. Adjust A2R22 (AUTO-SET LEVEL 1/3 SCALE ADJUST) for a DVM reading of +3.162 V dc.

NOTE

The adjustment of A2R22 and A2R24 interact. Repeat Steps r through v until the DVM indication at both full-scale and 1/3 scale is +3.162 V dc \pm 0.02 V dc.

w. While observing the DVM, set the AC Calibrator for output of 1.5, 2.0, 2.5, and 3 volts. The DVM should indicate 3.162 V dc \pm 0.04 V dc for each setting.

- x. Set the 339A LINE switch to OFF.
- y. Remove the test jumper and DVM leads.

Reconnect the cable to A2J2. Return the LINE switch to ON.

5-13. OSCILLATOR ADJUSTMENTS.

5-14. Amplitude Adjustment.

Equipment Required:

Digital Voltmeter (-hp- Model 3465A).

- a. Set the 339A controls as follows:

FREQUENCY 10 Hz (1.0×10)
 FREQUENCY VERNIER CAL
 OSCILLATOR LEVEL 3 V
 (vernier fully CW)

- b. Set the DVM to measure DC volts (2 volt range). Connect the DVM's high input to A1TP8 and the low input to the A1 assembly shield.

- c. Adjust A1R30 (AMPLITUDE ADJUST) for a DVM reading of -0.4 V dc \pm 0.1 V dc.

5-15. Frequency Adjustment.

Equipment Required:

Electronic Counter (-hp- Model 5300A mainframe, Model 5302A Universal Counter Module.)

- a. Set the 339A controls as follows:

FREQUENCY 10 kHz (1.0×10 K)
 FREQUENCY VERNIER CAL
 OSCILLATOR LEVEL 3 V
 (vernier fully CW)

- b. Connect the Electronic Counter input to the 339A Oscillator output.

- c. Adjust A1C7 (10 kHz adjust) for a counter indication of 10 kHz \pm 10 Hz.

- d. Set the 339A FREQUENCY controls for a frequency of 100 kHz (10.0×10 K).

- e. Verify that the counter reads 100 kHz \pm 1 kHz. If not, readjust A1C7 until both the 10 kHz and 100 kHz readings are within the specified limits.

5-16. ANALYZER ADJUSTMENTS.

5-17. Notch Filter Null Adjust.

Equipment Required:

Spectrum Analyzer (-hp- Model 3044A)
 Low Distortion Oscillator (-hp- Model 339A)

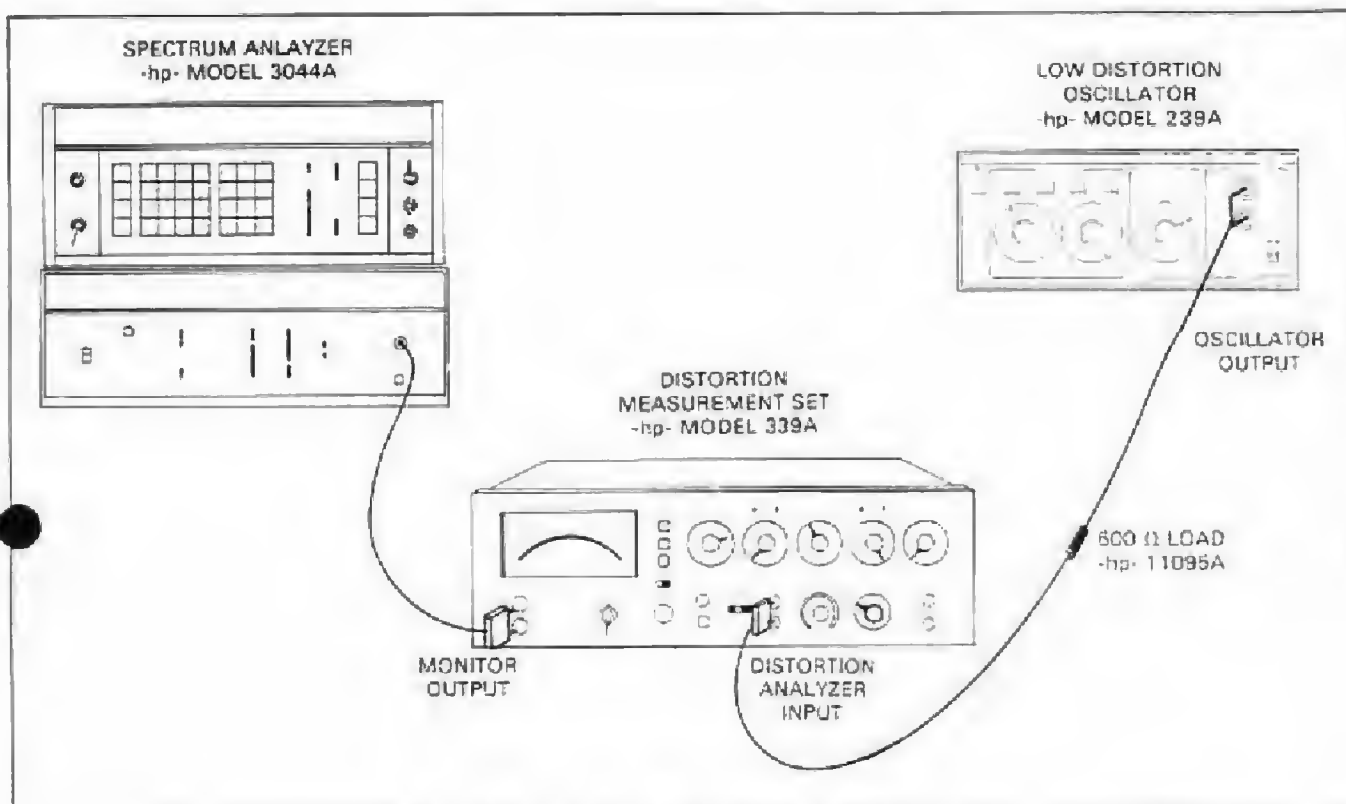


Figure 5-1. Notch Filter Null Adjustments.

- a. Connect the equipment as shown in Figure 5-1.

- b. Set the 339A (under test) controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE NORMAL
 DISTORTION RANGE -80 dB
 INPUT RANGE 3V
 INPUT/GND SELECT DIS. AN./⊥
 (center position)
 FREQUENCY 1 kHz (1.0 x 1 K)

- c. Set the controls of the 339A being used as a signal source to obtain a 1 kHz (1.0 x 1 K) signal. Adjust the output level for a meter indication of -10 dB V on the instrument under test.

- d. Set the 3571A Tracking Spectrum Analyzer controls as follows:

DISPLAY REFERENCE RELATIVE
 DISPLAY SMOOTHING ON
 BANDWIDTH 30 Hz
 INPUT RANGE +10 (dB V)
 INPUT IMPEDANCE 1 MΩ

- e. Set the 3330B Automatic Synthesizer controls as follows:

LEVELING FAST
 TIME/STEP 1000 in Sec

Enter an output frequency of 1 kHz and a step frequency of 1 Hz.

- f. Step the synthesizer up or down as necessary to obtain a peak reading on the 3571A.

- g. Press the 3571A Enter Offset switch and observe a display reading of 00.00 dB V.

- h. Set the FUNCTION switch of the 339A under test to DISTORTION.

- i. Adjust A4R16 (NOTCH FILTER NULL ADJUST) and A4R43 (NOTCH FILTER FREQUENCY ADJUST) for maximum null (greatest negative reading) as indicated by the 3571A. The null depth must be >-100 dB. Null depth is determined by adding the 339A DISTORTION RANGE setting (-80 dB) and the 3571A display reading.

NOTE

The adjustment of A4R16 and A4R43 interact. Repeat the adjustment of A4R16 and A4R43 until the maximum null is obtained.

j. Set the FUNCTION switch of the 339A under test to INPUT LEVEL.

k. Adjust the output of the 339A being used as a source for a meter indication of 0 dB V.

l. Return the 339A under test to the DISTORTION FUNCTION. The null depth must be > -100 dB. If not, readjust A4R16 and A4R43 until the null depth is > -100 dB at both input levels.

m. Set the FUNCTION switch of the 339A under test to INPUT LEVEL and the FREQUENCY controls for a frequency of 10 Hz (1.0×10).

n. Set the frequency of the 339A being used a signal source to 10 Hz (1.0×10). Adjust the output level for a meter indication of -10 dB V on the instrument under test.

o. Enter an output frequency of 10 Hz and a step frequency of 0.1 Hz into the 3330B.

p. Set the Bandwidth of the 3571A to 3 Hz.

q. Step the Synthesizer frequency up or down as necessary to obtain a peak reading on the 3571A.

r. Press the 3571A ENTER OFFSET button and observe a display reading of 00.00 dB V.

s. Enter the frequency displayed on the Synthesizer as the step frequency. Step the frequency of the Synthesizer to the second harmonic of the original frequency (one step).

t. Set the FUNCTION switch of the 339A under test to DISTORTION.

u. Adjust A4R65 (INPUT BALANCE ADJUST) for a minimum reading on the 3571A. (Greatest negative reading.)

5-18. High Frequency Adjustment.

Equipment Required:

Spectrum Analyzer (-hp- Model 3044A)

Low Distortion Oscillator (-hp- Model 339A)

600 Ω 1% Metal Film Resistor (-hp- Part No. 0698-5405)

60 k Ω 1% Metal Film Resistor (-hp- Part No. 0698-5973)

a. Connect the equipment as shown in Figure 5-2.

b. Set the 339A (under test) controls as follows:

FUNCTION DISTORTION
 FILTERS OFF (out)
 METER RESPONSE NORMAL
 DISTORTION RANGE -80 dB
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN.; \perp
 (center position)
 FREQUENCY 10 kHz (1.0×10 K)
 OSCILLATOR LEVEL OFF

c. Adjust the 339A being used as a signal source to provide a 10 kHz, 1 V signal.

d. Set the 3571A Tracking Spectrum Analyzer controls as follows:

DISPLAY REFERENCE RELATIVE
 DISPLAY SMOOTHING ON
 BANDWIDTH 3 Hz
 INPUT RANGE $+10$ dB V
 INPUT IMPEDANCE 1 M Ω

e. Set the 3330B Automatic Synthesizer controls as follows:

LEVELING SLOW
 TIME/STEP 3000 mSec.

Enter an output frequency of 1 kHz, an output amplitude of -40 dBm, and an amplitude step level of, $1 \pm$ dBm.

f. Step the 3330B amplitude until the 339A under test indicates a distortion reading of -80 dB V.

g. Press the 3571A ENTER OFFSET button and observe a display reading of 00.00 dB.

h. Enter an output frequency of 20 kHz into the 3330B.

i. Adjust A3C18 (HIGH FREQUENCY ADJUST) for a 3571A display reading of -0.3 dB ± 0.1 dB.

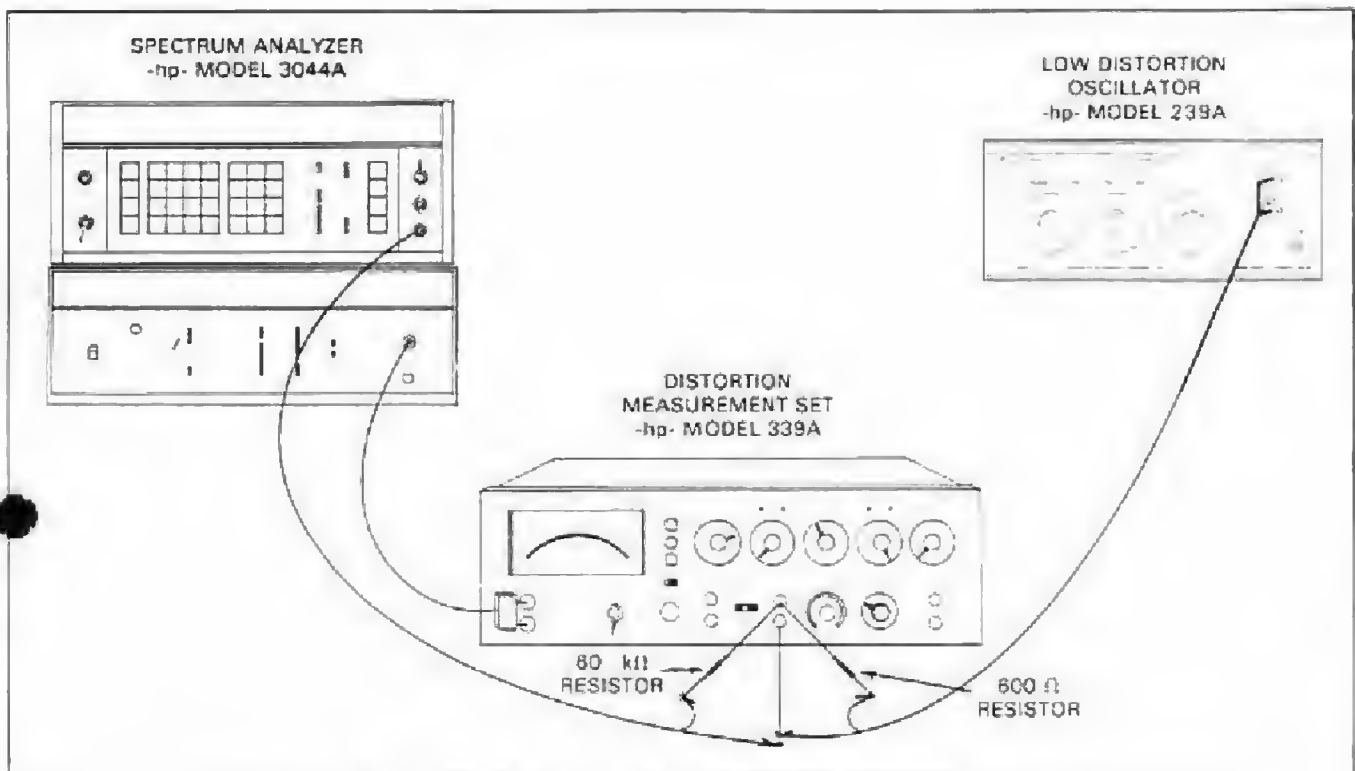


Figure 5-2. Notch Filter High Frequency Adjust.

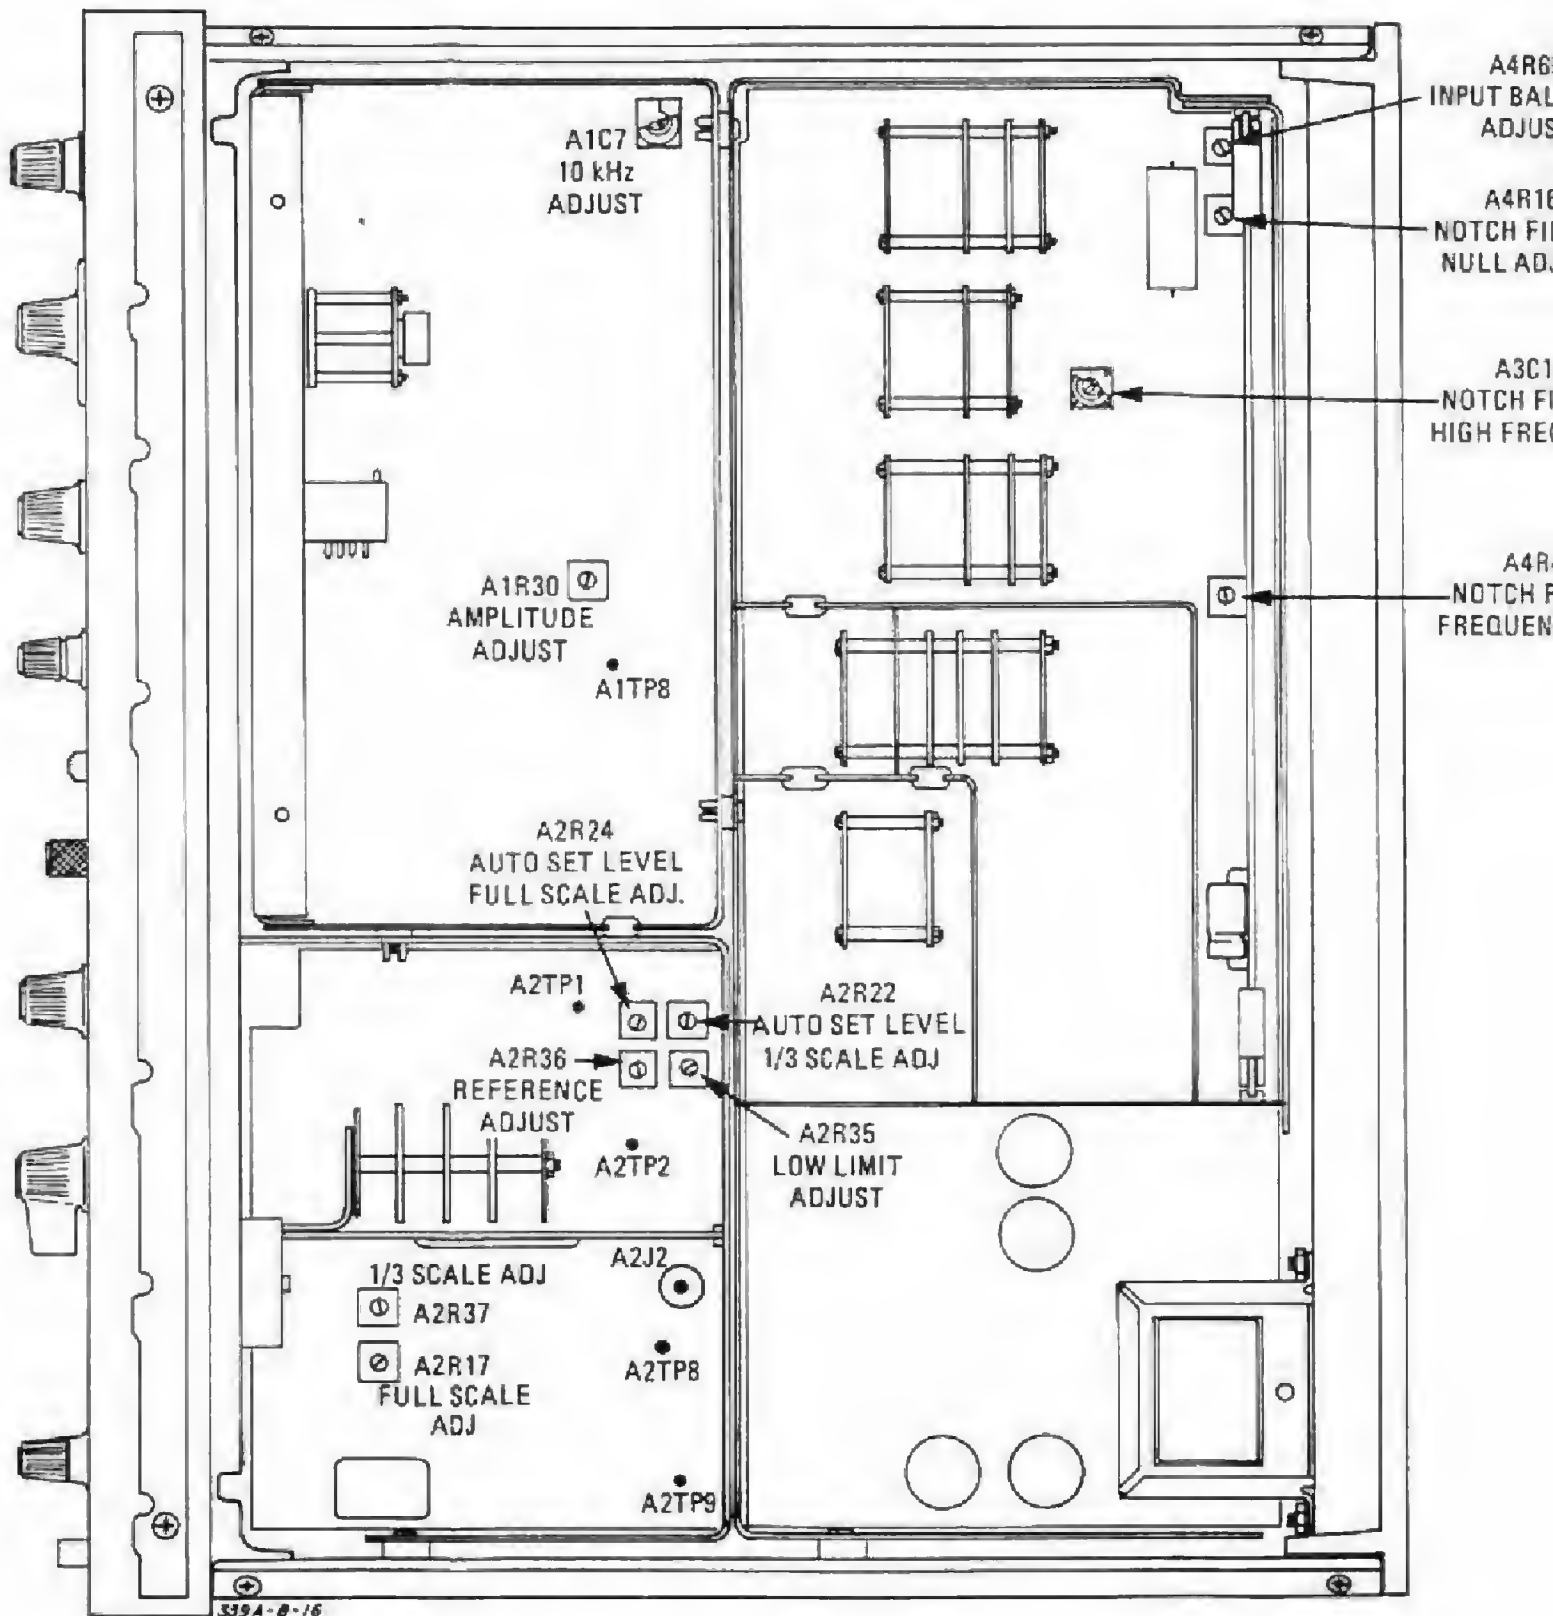


Figure S-3. Adjustment L

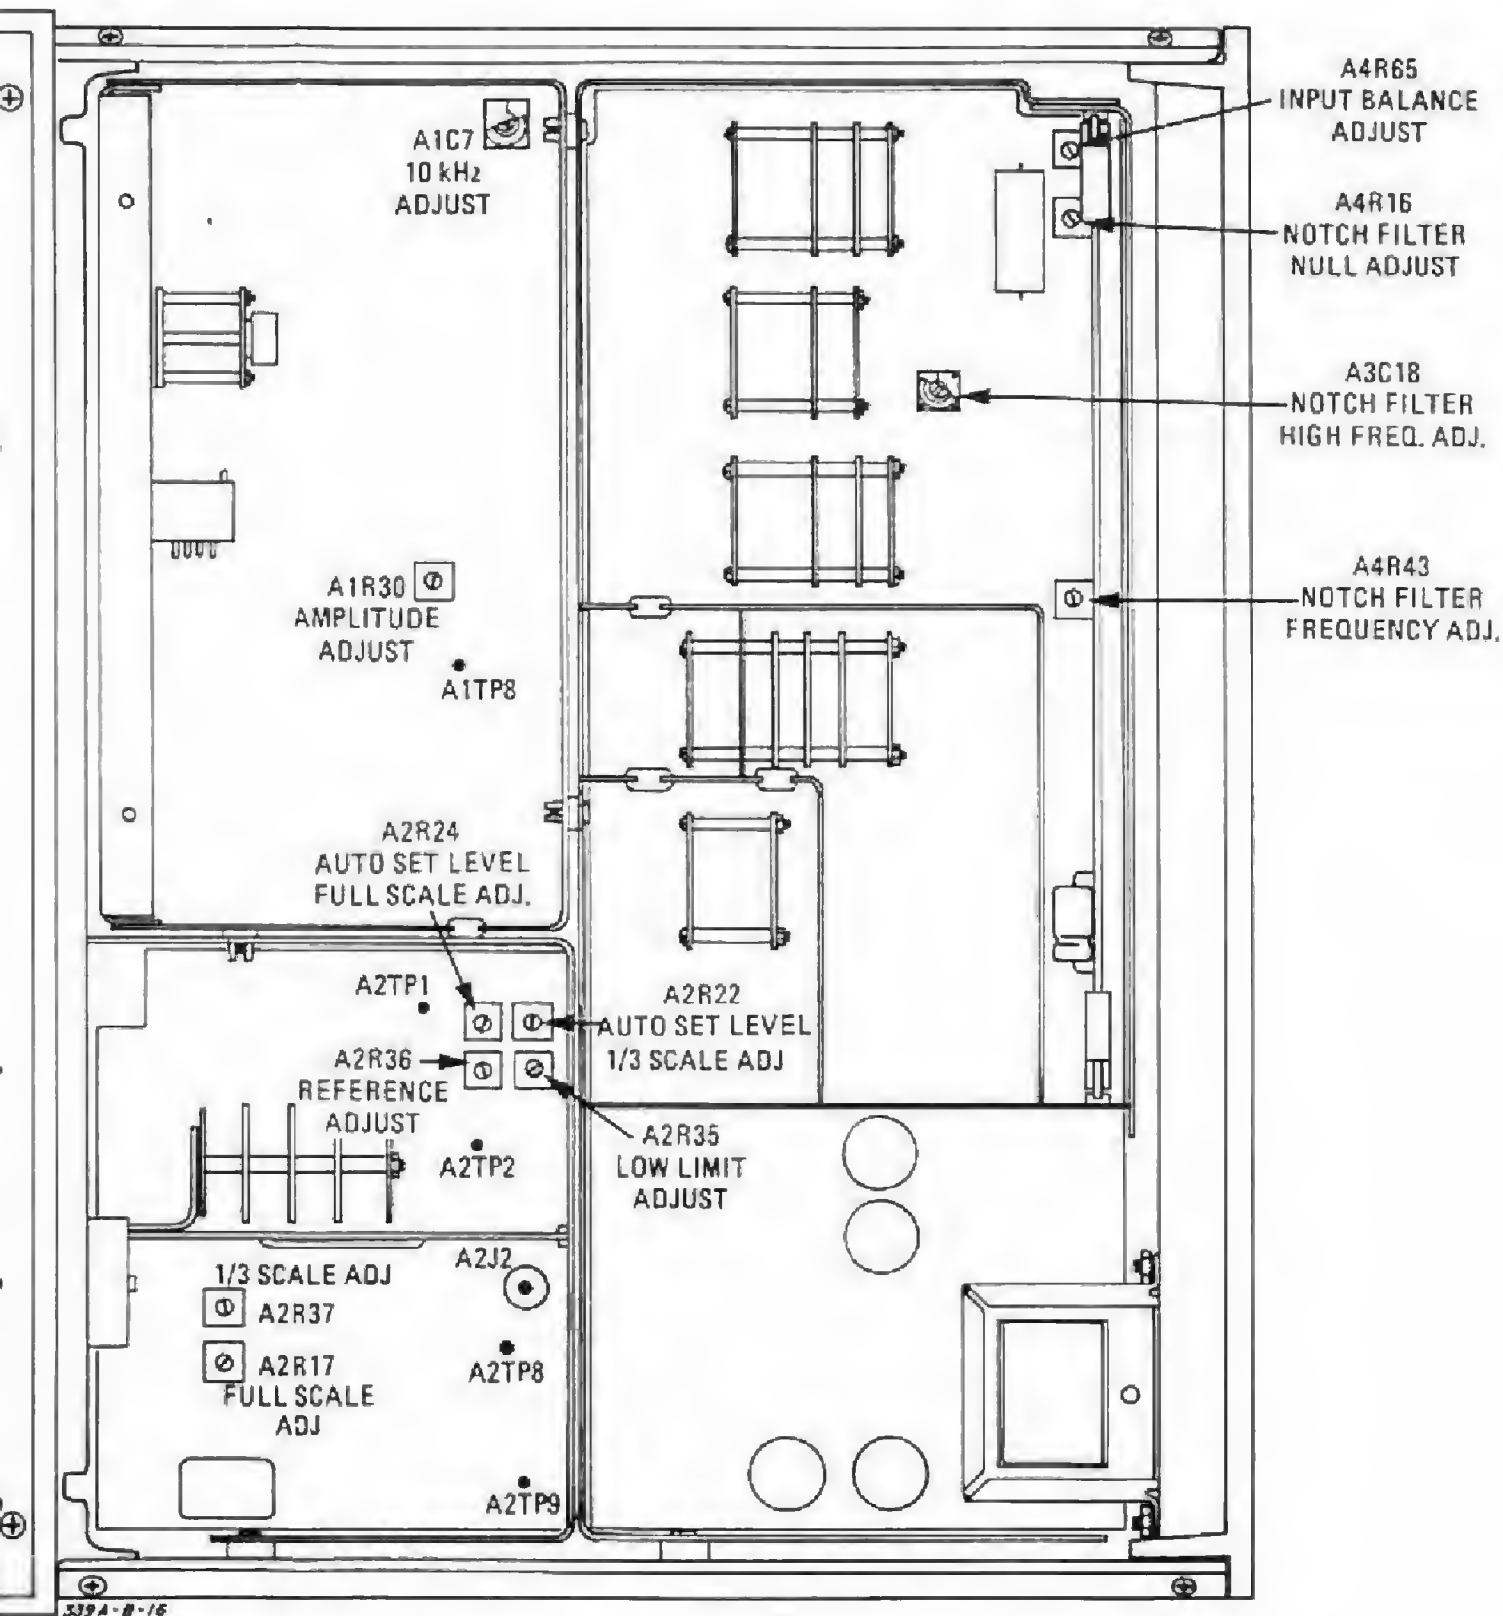


Figure 5-3. Adjustment Locations.
5-7/5-8

Table 5-1. Factory Selected Components.

Reference Designator	Range of Values	Description
A1C47	27 pF to 750 pF	Value selected for minimum second harmonic distortion at the Oscillator output for fundamental frequencies of 20 kHz and above.
A3C132	4.7 pF to 15 pF	Value selected to prevent amplifier A3U101 from oscillating.

Table 5-2. Adjustable Components.

Adjustment Name	Reference Designator	Adjustment Paragraph	Description
10 kHz ADJUST	A1C7	5-13	Adjust Oscillator frequency at 10 kHz.
AMPLITUDE ADJUST	A1R30	5-13	Adjust the basic output level of the oscillator amplifier.
FULL SCALE ADJUST	A2R17	5-12 (Step c)	Adjust meter amplifier for full-scale meter indication.
AUTO SET-LEVEL 1/3 SCALE ADJUST	A2R22	5-12 (Step v)	Adjusts the gain of the Auto Set-Level circuit for an applied input level equal to 1/3 full-scale.
AUTO SET-LEVEL FULL-SCALE ADJUST	A2R24	5-12 (Step t)	Adjusts the gain of the Auto Set-Level circuit for an applied input level equal to full-scale.
LOW LIMIT ADJUST	A2R35	5-12 (Step j)	Adjust the low limit reference of the Input Level indicator circuit. Input levels below this reference will cause the low input level indicator to light.
REFERENCE ADJUST	A2R36	5-12 (Step h)	Adjusts the Auto Set-Level full-scale reference voltage.
1/3 SCALE ADJUST	A2R37	5-12 (Step e)	Adjusts the meter amplifier gain for proper meter indication with an applied input level equal to 1/3 of full-scale.
HIGH FREQUENCY ADJUST	A3C18	5-18	Neutralizes the effects of capacitive loading of the Notch Filter.
NOTCH FILTER NULL ADJUST	A4R16	5-17	Adjusts the null depth of the Notch Filter.
NOTCH FILTER FREQUENCY ADJ	A4R43	5-17	Adjusts the Notch Filter frequency to obtain maximum null depth.
INPUT BALANCE ADJUST	A4R65	5-17	Adjusts the input balance to the amplitude feedback demodulator to reduce distortion at low frequencies.

SECTION VI REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-3 lists parts in alphabetic order of their reference designators and indicates the description, -hp- Part Number of each part, together with any applicable notes, and provides the following:

- Total quantity used in the instrument (Qty column). The total quantity of a part is given the first time the part number appears.
- Description of the part. (See abbreviations listed in Table 6-1.)
- Typical manufacturer of the part in a five-digit code. (See Table 6-2 for list of manufacturers.)
- Manufacturers part number.

6-3. Miscellaneous parts are listed at the end of Table 6-3.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or

inquiry to your local Hewlett-Packard Field Office.

(Field Office locations are listed at the back of the manual.) Identify parts by their Hewlett-Packard part numbers. Include instrument model and serial numbers.

6-6. NON-LISTED PARTS.

6-7. To obtain a part that is not listed, include:

- Instrument model number.
- Instrument serial number.
- Description of the part.
- Function and location of the part.

6-8. PARTS CHANGES.

6-9. Components which have been changed are so marked by one of three symbols; i.e., Δ , Δ with a letter subscript, e.g., Δ_A , or Δ with a number subscript, e.g., Δ_{10} . A Δ with no subscript indicates the component listed is the preferred replacement for an earlier component. A Δ with a letter subscript indicates a change which is explained in a note at the bottom of the page. A Δ with a number subscript indicates the related change is discussed in backdating (Section VII). The

Table 6-1. Standard Abbreviations.

		ABBREVIATIONS			
Ag	silver	Hz	hertz (cycles per second)	NPD	negative positive zero (zero temperature coefficient) NAND (and) $\times 10^{-9}$ seconds
Al	aluminum	ID	inside diameter	NR	not separately replaceable
Am	amper(s)	img	image	NR	not separately replaceable
As	arsenic	ins	insulation	OD	outside diameter
C	capacitor	ins	insulation	OD	outside diameter
cer	ceramic	kHz	kilohertz = 10^3 hertz	OD	outside diameter
coef	coefficient	kHz	kilohertz = 10^3 hertz	OD	outside diameter
com	common	kHz	kilohertz = 10^3 hertz	OD	outside diameter
comp	composition	kHz	kilohertz = 10^3 hertz	OD	outside diameter
conn	connection	kHz	kilohertz = 10^3 hertz	OD	outside diameter
cap	capacitor	kHz	kilohertz = 10^3 hertz	OD	outside diameter
DPDT	double-pole double-throw	kHz	kilohertz = 10^3 hertz	OD	outside diameter
DST	double-pole single-throw	kHz	kilohertz = 10^3 hertz	OD	outside diameter
elect	electronic	kHz	kilohertz = 10^3 hertz	OD	outside diameter
encap	encapsulated	kHz	kilohertz = 10^3 hertz	OD	outside diameter
F	field effect	kHz	kilohertz = 10^3 hertz	OD	outside diameter
FEY	field effect transistor	kHz	kilohertz = 10^3 hertz	OD	outside diameter
fix	fixed	kHz	kilohertz = 10^3 hertz	OD	outside diameter
GAs	gallium arsenide	kHz	kilohertz = 10^3 hertz	OD	outside diameter
GHz	gigahertz = 10^9 hertz	kHz	kilohertz = 10^3 hertz	OD	outside diameter
gl	glass	kHz	kilohertz = 10^3 hertz	OD	outside diameter
Ge	germanium	kHz	kilohertz = 10^3 hertz	OD	outside diameter
grd	ground(s)	kHz	kilohertz = 10^3 hertz	OD	outside diameter
H	henry(ies)	kHz	kilohertz = 10^3 hertz	OD	outside diameter
Hg	mercury	kHz	kilohertz = 10^3 hertz	OD	outside diameter
DESIGNATORS					
A	assembly	FL	filter	Q	transistor
B	base	HR	heater	OCR	optical character reader
BT	battery	IC	integrated circuit	R	resistor
C	capacitor	J	jack	RT	thermistor
CD	ceramic diode	K	key	S	switch
CL	clock	L	inductor	T	transformer
CR	crystal	M	meter	TB	terminal board
E	electronic part	MP	mechanical part	TC	thermocouple
F	field effect transistor	P	plug	TP	test point
DESIGNATORS					
U	microcircuit	TS	terminal strip	W	vacuum tube, neon bulb, photocell
V	vacuum tube, neon bulb, photocell	X	connector	Y	crystal
W	vacuum tube, neon bulb, photocell	Z	network		

number of the subscript indicates the number of the change in backdating which should be referred to.

6-11. Items marked by a dagger (†) in the reference designator column are available only for repair and service of Hewlett-Packard Instruments.

6-10. PROPRIETARY PARTS.

Table 6-2. Code List of Manufacturers.

Mfr. No.	Manufacturer Name	Address
01121	Allen-Bradley Co.	Milwaukee, WI 53204
01928	RCA Corp Solid State Div	Somerville, NJ 08876
03888	KOI Pyrofilm Corp	Whippany, NJ 07981
04713	Motorola Semiconductor Products	Phoenix, AZ 85062
06001	GE Co Elek Cap & Bat Prod Dept	Irmo, SC 29063
13103	Thermalloy Co	Dallas, TX 75234
17856	Siliconix Inc	Santa Clara, CA 95054
18178	Vactec Inc	Maryland Hgts, MO 63043
19701	Mepeco/Electra Corp	Mineral Wells, TX 67067
24546	Corning Glass Works (Bradford)	Bradford, PA 16701
27014	National Semiconductor Corp	Santa Clara, CA 95051
28480	Hewlett-Packard Co Corporate Hq	Palo Alto, CA 94304
34371	Harris Semicon Div Harris-Intertype	Melbourne, FL 32901
56289	Sprague Electric Co	North Adams, MA 01247
72136	Electro Motive Corp Sub IEC	Willimantic, CT 06226
74970	Johnson E F Co	Waseca, MN 56093
75915	Littlefuse Inc	Des Plaines, IL 60016
91637	Date Electronics Inc	Columbus, NE 68601

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1	00139-00591	1	PC ASSEMBLY OSCILLATOR	2400L	00139-00591
A1C1	0100-4401	1	CAPACITOR-FXD 560F $\pm 1\%$ 200VDC	2400L	0100-4401
A1C2	0100-4401	1	CAPACITOR-FXD 560F $\pm 1\%$ 200VDC	2400L	0100-4401
A1C3	0100-4590	1	CAPACITOR-FXD 560F $\pm 1\%$ 200VDC	2400L	0100-4590
A1C4	0100-4590	1	CAPACITOR-FXD 560F $\pm 1\%$ 200VDC	2400L	0100-4590
A1C5	0100-4590	1	CAPACITOR-FXD 560F $\pm 1\%$ 200VDC	2400L	0100-4590
A1C6	0100-3100	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3100
A1C7	0121-0107	2	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0121-0107
A1C10	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C11	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C12	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C13	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C14	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C15	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C16	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C17	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C20 1A	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C21	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C22	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C23	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C24	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C25	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C26	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C27	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C28	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C29	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C30	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C31	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C32	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C33	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C34	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C35	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C36	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C37	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C38	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C39	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C40	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C41	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C42	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C43	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C44	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C45	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C46	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C47	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C48	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C49	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C50	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C51	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C52	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C53	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C54	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C55	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C56	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C57	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C58	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C59	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C60	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C61	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C62	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C63	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C64	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C65	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C66	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C67	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C68	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C69	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C70	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C71	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C72	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C73	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C74	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C75	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C76	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C77	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C78	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C79	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C80	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C81	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C82	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C83	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C84	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C85	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C86	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C87	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C88	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C89	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C90	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C91	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C92	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C93	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C94	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C95	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C96	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C97	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C98	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1C99	0100-3022	1	CAPACITOR-FXD 100F $\pm 1\%$ 300VDC	2400L	0100-3022
A1D1	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D2	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D3	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D4	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D5	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D6	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D7	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D8	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D9	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D10	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D11	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D12	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D13	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D14	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D15	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D16	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D17	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D18	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D19	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D20	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D21	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D22	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D23	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D24	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D25	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D26	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D27	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D28	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D29	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D30	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D31	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D32	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D33	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D34	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D35	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D36	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D37	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D38	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D39	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D40	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D41	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D42	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D43	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D44	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D45	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D46	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D47	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D48	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D49	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D50	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D51	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D52	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D53	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D54	0000-0000	1	DIODE-600V 1A	2400L	0000-0000
A1D55	0000-0000	1			

See introduction to this section for ordering information

4-3

ΔA The oscillator circuit has been changed beginning with serial number 1730A00266. For instruments with lower serial numbers, refer to Section VII.

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1R16	0699-0030	2	RESISTOR 142.1K .25W .125A F TC00+-50	0107J	B
A1R17	0699-0031		RESISTOR 94.74K .25W .125A F TC00+-50	0107J	B
A1R18	0699-0031		RESISTOR 94.74K .25W .125A F TC00+-50	0107J	B
A1R19	0699-0032		RESISTOR 11.05K .25W .125A F TC00+-50	0107J	A
A1R20	0699-0032		RESISTOR 11.05K .25W .125A F TC00+-50	0107J	A
A1R21	0699-0033	2	RESISTOR 58.76K .25W .125A F TC00+-50	0107J	A
A1R22	0699-0033		RESISTOR 58.84K .25W .125A F TC00+-50	0107J	B
A1R23, 424	0699-0530		RESISTOR 232K 1W .125A F TC00+-100	0329J	C4-1/8-10-2323-F
A1R24	0699-3518		RESISTOR 7.32K 1W .125A F TC00+-100	0329B	C4-1/8-10-7323-F
A1R25	0699-3492		RESISTOR 2.87K 1W .125A F TC00+-100	0329B	C4-1/8-10-2871-F
A1R29	0757-0401	4	RESISTOR 100 1K .125W F TC00+-100	0329B	C4-1/8-10-101-F
A1R30	2100-0357		RESISTOR 100K 2W 10% C TC00+-100 1-T94	7313A	72-100-00
A1R31	0699-0438		RESISTOR 3.09K 1A .125W F TC00+-100	0329B	C4-1/8-10-3091-F
A1R32 1A					
A1R33 1A					
A1R34	0699-0440	2	RESISTOR 3.0K 1K .125W F TC00+-100	0329B	C4-1/8-10-301-F
A1R35	0699-3279		RESISTOR 4.99K 1K .125W F TC00+-100	0329B	C4-1/8-10-4991-F
A1R36	0699-0094		RESISTOR 9.14 5W .25W FC TC00+-110	0106G	C5-1/8-10-094-F
A1R37	0757-0401		RESISTOR 100 1K .125W F TC00+-100	0329B	C4-1/8-10-101-F
A1R40	0757-0472		RESISTOR 200K 1K .125W F TC00+-100	0329B	C4-1/8-10-2003-F
A1R41	0699-3228	1	RESISTOR 49.7K 1K .125W F TC00+-100	0329B	C4-1/8-10-4971-F
A1R42	0757-0402		RESISTOR 10K 1K .125W F TC00+-100	0329B	C4-1/8-10-102-F
A1R43	0757-0402		RESISTOR 10K 1K .125W F TC00+-100	0329B	C4-1/8-10-102-F
A1R44	0757-0401		RESISTOR 911 1K .125W F TC00+-100	0329B	C4-1/8-10-911-F
A1R45	0757-0402		RESISTOR 10K 1K .125W F TC00+-100	0329B	C4-1/8-10-102-F
A1R46	0699-3279	5	RESISTOR 4.99K 1K .125W F TC00+-100	0329B	C4-1/8-10-4991-F
A1R50	0757-0283		RESISTOR 2K 1K .125W F TC00+-100	0329B	C4-1/8-10-2001-F
A1R51	0757-0283		RESISTOR 2K 1K .125W F TC00+-100	0329B	C4-1/8-10-2001-F
A1R52	0757-0283		RESISTOR 100 1K .125W F TC00+-100	0329B	C4-1/8-10-101-F
A1R53	0757-0407		RESISTOR 200 1K .125W F TC00+-100	0329B	C4-1/8-10-201-F
A1R61	0699-3406	1	RESISTOR 3.57K 1K .125W F TC00+-100	0329B	C4-1/8-10-3571-F
A1R62	0699-3279		RESISTOR 4.99K 1K .125W F TC00+-100	0329B	C4-1/8-10-4991-F
A1R63	0699-0670		RESISTOR 680 5W .5W F TC00+-100	0552C	C4-1/8-10-067-F
A1R64	0699-0682		RESISTOR 1.67K 1K .5W F TC00+-100	0552C	C4-1/8-10-068-F
A1R65	0699-3406		RESISTOR 3.57K 1K .125W F TC00+-100	0552C	C4-1/8-10-3571-F
A1R66	0699-3474	5	RESISTOR 1.74K 1K .5W F TC00+-100	0552C	C4-1/8-10-069-F
A1R67	0699-0288		RESISTOR 1.10K 1K .5W F TC00+-100	0552C	C4-1/8-10-069-F
A1R68	0699-3474		RESISTOR 1.74K 1K .5W F TC00+-100	0552C	C4-1/8-10-069-F
A1R69	0699-0688		RESISTOR 1.10K 1K .5W F TC00+-100	0552C	C4-1/8-10-069-F
A1R70	0699-3474		RESISTOR 1.74K 1K .5W F TC00+-100	0552C	C4-1/8-10-069-F
A1R71	0699-0688	1	RESISTOR 1.10K 1K .5W F TC00+-100	0552C	C4-1/8-10-069-F
A1R72	0699-3474		RESISTOR 1.74K 1K .5W F TC00+-100	0552C	C4-1/8-10-069-F
A1R73	0699-0688		RESISTOR 1.10K 1K .5W F TC00+-100	0552C	C4-1/8-10-069-F
A1R74	0699-3474		RESISTOR 1.74K 1K .5W F TC00+-100	0552C	C4-1/8-10-069-F
A1R75	0699-3474		RESISTOR 1.74K 1K .5W F TC00+-100	0552C	C4-1/8-10-069-F
A1R76	0699-0870	4	RESISTOR 680 1K .5W F TC00+-100	0552C	C4-1/8-10-069-F
A1R78	0757-0301		RESISTOR 100 1K .125W F TC00+-100	0329B	C4-1/8-10-101-F
A1R80	0757-0280		RESISTOR 1K 1K .125W F TC00+-100	0329B	C4-1/8-10-101-F
A1R81	00339-01002		SWITCH ASSEMBLY, MULTIPLIER	28480	00339-01002
A1R82	3100-3421		SWITCH, ROTARY	28480	3100-3421
A1R83	00339-01003	2	SWITCH ASSEMBLY, UNITS	28480	00339-01003
A1R84	3100-3422		SWITCH, ROTARY	28480	3100-3422
A1R85	00339-01004		SWITCH ASSEMBLY, TENS	28480	00339-01004
A1R86	3100-3423		SWITCH, ROTARY	28480	3100-3423
A1R87	5040-0259		CHART, EXTENDER	28480	5040-0259
A1R88	1500-0014	12	COUPLER, HIGLO	0510M	120
A1R89	1826-0487		IC OP AMP	28480	1826-0487
A1R90	1826-0313		IC OP AMP	0540F	1826-0313
A1R91	1826-0487		IC OP AMP TO 99	28480	1826-0487
A1R92	00339-00502		PC ASSEMBLY, DETECTOR	28480	00339-00502
A2C1	0160-0103	3	CAPACITOR-PAD .0033UF +-1% 200VDC POLY	4-20J	28480-0103
A2C2	0160-0103		CAPACITOR-PAD .0033UF +-1% 200VDC POLY	4-20J	28480-0103
A2C3	0160-0103		CAPACITOR-PAD .0033UF +-1% 200VDC POLY	4-20J	28480-0103
A2C4	0160-0341		CAPACITOR-PAD 680PF +-1% 350VDC MICAD-70	28480	0160-0341
A2C5	0160-2201		CAPACITOR-PAD 51PF +-5% 350VDC	28480	0160-2201
A2C6	0160-4317	1	CAPACITOR-PAD 1200PF +-1% 100VDC	28480	0160-4317
A2C7	0160-3156		CAPACITOR-PAD 750PF +-1% 350VDC MICAD-70	28480	0160-3156
A2C8	0160-3691		CAPACITOR-PAD 750PF +-1% 100VDC	28480	0160-3691
A2C9	0160-3928		CAPACITOR-PAD 1700PF +-1% 100VDC	28480	0160-3928
A2C10	0160-0034		CAPACITOR-PAD .22UF +-10% 200VDC POLY	28480	0160-0034
A2C11	0160-2257	3	CAPACITOR-PAD 10PF +-5% 350VDC CERAM-50	28480	0160-2257
A2C12	0160-3622		CAPACITOR-PAD .1UF +-10% 200VDC CER-50	28480	0160-3622
A2C13	0160-2244		CAPACITOR-PAD 39PF +-5% 350VDC	28480	0160-2244
A2C14	0160-1622		CAPACITOR-PAD .1UF +-5% 200VDC CER-50	28480	0160-1622
A2C15	0160-2201		CAPACITOR-PAD 51PF +-5% 350VDC	28480	0160-2201

See introduction to this section for ordering information

ΔA The oscillator circuit has been changed beginning with serial number 1730A00266. For instrument with lower serial numbers, refer to Section VII.

Table 6-3. Replaceable Parts

[illegible]

See introduction to this section for ordering information.

2

ΔA Refer to note ΔA on Figure 8-16.

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2P32	0747-0410	1	RESISTOR 301 1% .125W F TC00=100	03294	C=1/8-10=3010-F
A2P33	0404-3225	1	RESISTOR 1,430 1% .125W F TC00=100	03294	C=1/8-10=1431-F
A2P34	0751-0442	1	RESISTOR 10K 1% .125W F TC00=100	03294	C=1/8-10=1002-F
A2P35	2100-0467	1	RESISTOR 10K 2% 10% C 10P=ADJ 1-TRN	73134	72-100-0
A2P36	2100-3211	1	RESISTOR 10K 2% 10% C 10P=ADJ 1-TRN	73134	72-100-0
A2P37	2100-3210	1	RESISTOR 10K 1% 10% C 10P=ADJ 1-TRN	73134	72-100-0
A2P38	0404-3220	3	RESISTOR 54 1% .125W F TC00=25	03294	04F55-1/8-10=5401-F
A2P39	0404-0434	3	RESISTOR 2,312K .25% .125W F AC00=50	01070	9
A2P40	0757-0442	1	RESISTOR 10K 1A .125W F TC00=100	03294	C=1/8-10=1002-F
A2P41	0757-0442	1	RESISTOR 10K 1A .125W F TC00=100	03294	C=1/8-10=1002-F
A2P42	0404-0443	1	RESISTOR 4,514 1% .125W F TC00=100	03294	C=1/8-10=4511-F
A2U1	1826-0315	1	IC OP AMP	03404	L=9-04
A2U4	1826-0487	1	IC OP AMP	28480	1826-0487
A2U5	1826-0421	3	IC LINEAR 536J	24430	1826-0421
A2U6	1826-0203	3	IC 741 OP AMP	72700	741CE000
A2U7	1826-0421	1	IC LINEAR 536J	24430	1826-0421
A2U8	1826-0315	1	IC OP AMP	03404	L=9-04
A2U9	1826-0203	1	IC 741 OP AMP	72700	741CE000
A2U10	1826-0203	5	IC 518 OP AMP	03790	L=9-18
A2U12	1826-0203	1	IC 741 OP AMP	02257	04741HC
A2U13	1826-0421	2	IC OP AMP	03404	L=9-10
A3	00330-00303	1	PC ASSEMBLY, ANALYZER-POWER SUPPLY	24440	00330-00303
A3C1	0160-2132	1	CAPACITOR-FXD .050UF +-10% 50VDC POLYE	04411	0160-2132
A3C2	0160-0145	1	CAPACITOR-FXD .050UF +-10% 200VDC POLYE	04411	0160-0145
A3C3	0160-0158	1	CAPACITOR-FXD .050UF +-10% 200VDC POLYE	04411	0160-0158
A3C4	0160-1515	1	CAPACITOR-FXD .050UF +-10% 300VDC WICAD-70	04411	0160-1515
A3C5	0160-3622	1	CAPACITOR-FXD .1UF +-5% 100VDC CER	24460	0160-3622
A3C6	0160-3622	1	CAPACITOR-FXD .1UF +-5% 100VDC CER	24460	0160-3622
A3C7	0160-2250	1	CAPACITOR-FXD .1UF +-5% 500VDC CER	24460	0160-2250
A3C8	0160-2257	1	CAPACITOR-FXD .1UF +-5% 500VDC CER	24460	0160-2257
A3C9	0160-2257	1	CAPACITOR-FXD .1UF +-5% 500VDC CER	24460	0160-2257
A3C10	0160-2257	1	CAPACITOR-FXD .1UF +-5% 500VDC CER	24460	0160-2257
A3C11	0160-2257	1	CAPACITOR-FXD .1UF +-5% 500VDC CER	24460	0160-2257
A3C12	0160-2257	1	CAPACITOR-FXD .1UF +-5% 500VDC CER	24460	0160-2257
A3C13	0160-4591	1	CAPACITOR-FXD .010UF +-1% 200VDC POLYE	24460	0160-4591
A3C14	0160-4592	1	CAPACITOR-FXD .010UF +-1% 200VDC POLYE	24460	0160-4592
A3C15	0160-2206	1	CAPACITOR-FXD .010UF +-5% 300VDC WICAD-70	24460	0160-2206
A3C16	0160-3622	1	CAPACITOR-FXD .1UF +-5% 100VDC CER	24460	0160-3622
A3C17	0160-3622	1	CAPACITOR-FXD .1UF +-5% 100VDC CER	24460	0160-3622
A3C18	0160-2147	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2147
A3C19	0160-2147	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2147
A3C20	0160-2147	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2147
A3C21	0160-2147	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2147
A3C22	0160-2147	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2147
A3C23	0160-3622	1	CAPACITOR-FXD .1UF +-5% 100VDC CER	24460	0160-3622
A3C24	0160-3622	1	CAPACITOR-FXD .1UF +-5% 100VDC CER	24460	0160-3622
A3C25	0160-2147	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2147
A3C26	0160-2201	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2201
A3C27	0160-2201	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2201
A3C100	0160-2251	4	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2251
A3C102	0160-3622	1	CAPACITOR-FXD .1UF +-5% 100VDC CER	24460	0160-3622
A3C103	0160-2201	2	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2201
A3C104	0160-2201	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2201
A3C105	0160-3622	1	CAPACITOR-FXD .1UF +-5% 100VDC CER	24460	0160-3622
A3C106	0160-2201	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2201
A3C107	0160-3622	1	CAPACITOR-FXD .1UF +-5% 100VDC CER	24460	0160-3622
A3C108	0160-2249	3	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2249
A3C109	0160-3622	1	CAPACITOR-FXD .1UF +-5% 100VDC CER	24460	0160-3622
A3C110	0160-0142	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-0142
A3C111	0160-1715	2	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-1715
A3C112	0160-1715	2	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-1715
A3C113	0160-2204	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2204
A3C114	0160-0363	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-0363
A3C115	0160-2263	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2263
A3C116	0160-0195	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-0195
A3C117	0160-2249	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2249
A3C120	0160-2220	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2220
A3C121	0160-2204	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2204
A3C122	0160-2201	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2201
A3C130	0160-3622	1	CAPACITOR-FXD .1UF +-5% 100VDC CER	24460	0160-3622
A3C131	0160-3622	1	CAPACITOR-FXD .1UF +-5% 100VDC CER	24460	0160-3622
A3C132	0160-2249	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2249
A3C133	0160-2204	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2204
A3C134	0160-2201	1	CAPACITOR-FXD .010UF +-5% 300VDC CER	24460	0160-2201

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
43C115	0160-2257		CAPACITOR-FXD 10UF +-5% 500VDC CERF0+-00	28480	0160-2257
43C200	0160-1632		CAPACITOR-FXD 10UF +-0.5% 200 100VDC CER	28480	0160-1632
43C201	0160-1632		CAPACITOR-FXD 10UF +-0.5% 200 100VDC CER	28480	0160-1632
43C202	0160-2258		CAPACITOR-FXD 5.1UF +-0.25% 500VDC	28480	0160-2258
43C203	0160-2254		CAPACITOR-FXD 100UF +-5% 300VDC MFC0+-00	28480	0160-2254
43C204	0160-2201		CAPACITOR-FXD 51UF +-5% 300VDC	28480	0160-2201
43C205	0160-2204		CAPACITOR-FXD 20UF +-5% 500VDC 1E+-00-30	28480	0160-2204
43C206	0160-1724		CAPACITOR-FXD 47UF+-10% 50VDC TA	0420J	0160-1724
43C207	0160-1704		CAPACITOR-FXD 47UF+-10% 50VDC TA	0420J	0160-1704
43C300	0160-1632		CAPACITOR-FXD 10UF +-0.5% 200 100VDC CER	28480	0160-1632
43C301	0160-1632		CAPACITOR-FXD 10UF +-0.5% 200 100VDC CER	28480	0160-1632
43C302	0160-2028		CAPACITOR-FXD 0.03UF +-20% 500VDC CER	28480	0160-2028
43C303	0160-2028		CAPACITOR-FXD 0.03UF +-20% 500VDC CER	28480	0160-2028
43C304	0160-2035		CAPACITOR-FXD 1000UF+-50-10% 35VDC AL	28480	0160-2035
43C305	0160-2035		CAPACITOR-FXD 1000UF+-50-10% 35VDC AL	28480	0160-2035
43C306	0160-2035		CAPACITOR-FXD 1000UF+-50-10% 35VDC AL	28480	0160-2035
43C307	0160-2035		CAPACITOR-FXD 1000UF+-50-10% 35VDC AL	28480	0160-2035
43C308	0160-1632		CAPACITOR-FXD 10UF +-0.5% 200 100VDC CER	28480	0160-1632
43C309	0160-1632		CAPACITOR-FXD 10UF +-0.5% 200 100VDC CER	28480	0160-1632
43C310	0160-0291		CAPACITOR-FXD 10UF+-10% 35VDC TA	0420J	0160-0291
43C311	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C312	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C313	0160-0291		CAPACITOR-FXD 10UF+-10% 35VDC TA	0420J	0160-0291
43C314	0160-0291		CAPACITOR-FXD 10UF+-10% 35VDC TA	0420J	0160-0291
43C315	0160-0291		CAPACITOR-FXD 10UF+-10% 35VDC TA	0420J	0160-0291
43C316	0160-0291		CAPACITOR-FXD 10UF+-10% 35VDC TA	0420J	0160-0291
43C317	0160-0291		CAPACITOR-FXD 10UF+-10% 35VDC TA	0420J	0160-0291
43C318	0160-0291		CAPACITOR-FXD 10UF+-10% 35VDC TA	0420J	0160-0291
43C319	0160-0291		CAPACITOR-FXD 10UF+-10% 35VDC TA	0420J	0160-0291
43C320	0160-0291		CAPACITOR-FXD 10UF+-10% 35VDC TA	0420J	0160-0291
43C321	0160-0291		CAPACITOR-FXD 10UF+-10% 35VDC TA	0420J	0160-0291
43C322	0160-0291		CAPACITOR-FXD 10UF+-10% 35VDC TA	0420J	0160-0291
43C323	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C324	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C325	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C326	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C327	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C328	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C329	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C330	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C331	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C332	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C333	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C334	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C335	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C336	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C337	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C338	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C339	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C340	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C341	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C342	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C343	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C344	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C345	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C346	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C347	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C348	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C349	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C350	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C351	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C352	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C353	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C354	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C355	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C356	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C357	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C358	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C359	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C360	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C361	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C362	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C363	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C364	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C365	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C366	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C367	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C368	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C369	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C370	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C371	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C372	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C373	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C374	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C375	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C376	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C377	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C378	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C379	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C380	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C381	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C382	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C383	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C384	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C385	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C386	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C387	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C388	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C389	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C390	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C391	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C392	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C393	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C394	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C395	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C396	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C397	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C398	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C399	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C400	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C401	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C402	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C403	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C404	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C405	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C406	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C407	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C408	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C409	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C410	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C411	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C412	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C413	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C414	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C415	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C416	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C417	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C418	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C419	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C420	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C421	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C422	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C423	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C424	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C425	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C426	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C427	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C428	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C429	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C430	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C431	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C432	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C433	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C434	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C435	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C436	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C437	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C438	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C439	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C440	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C441	0160-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	0420J	0160-0374
43C442	0160-03				

See Introduction to this section for ordering information

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A331	00339-01905	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01905
A332	00339-01906	1	SWITCH ROTARY	28480	00339-01906
A333	00339-01907	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01907
A334	00339-01908	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01908
A335	00339-01909	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01909
A336	00339-01910	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01910
A337	00339-01911	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01911
A338	00339-01912	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01912
A339	00339-01913	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01913
A340	00339-01914	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01914
A341	00339-01915	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01915
A342	00339-01916	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01916
A343	00339-01917	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01917
A344	00339-01918	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01918
A345	00339-01919	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01919
A346	00339-01920	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01920
A347	00339-01921	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01921
A348	00339-01922	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01922
A349	00339-01923	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01923
A350	00339-01924	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01924
A351	00339-01925	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01925
A352	00339-01926	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01926
A353	00339-01927	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01927
A354	00339-01928	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01928
A355	00339-01929	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01929
A356	00339-01930	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01930
A357	00339-01931	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01931
A358	00339-01932	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01932
A359	00339-01933	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01933
A360	00339-01934	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01934
A361	00339-01935	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01935
A362	00339-01936	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01936
A363	00339-01937	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01937
A364	00339-01938	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01938
A365	00339-01939	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01939
A366	00339-01940	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01940
A367	00339-01941	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01941
A368	00339-01942	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01942
A369	00339-01943	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01943
A370	00339-01944	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01944
A371	00339-01945	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01945
A372	00339-01946	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01946
A373	00339-01947	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01947
A374	00339-01948	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01948
A375	00339-01949	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01949
A376	00339-01950	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01950
A377	00339-01951	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01951
A378	00339-01952	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01952
A379	00339-01953	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01953
A380	00339-01954	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01954
A381	00339-01955	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01955
A382	00339-01956	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01956
A383	00339-01957	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01957
A384	00339-01958	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01958
A385	00339-01959	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01959
A386	00339-01960	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01960
A387	00339-01961	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01961
A388	00339-01962	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01962
A389	00339-01963	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01963
A390	00339-01964	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01964
A391	00339-01965	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01965
A392	00339-01966	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01966
A393	00339-01967	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01967
A394	00339-01968	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01968
A395	00339-01969	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01969
A396	00339-01970	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01970
A397	00339-01971	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01971
A398	00339-01972	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01972
A399	00339-01973	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01973
A400	00339-01974	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01974
A401	00339-01975	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01975
A402	00339-01976	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01976
A403	00339-01977	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01977
A404	00339-01978	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01978
A405	00339-01979	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01979
A406	00339-01980	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01980
A407	00339-01981	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01981
A408	00339-01982	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01982
A409	00339-01983	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01983
A410	00339-01984	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01984
A411	00339-01985	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01985
A412	00339-01986	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01986
A413	00339-01987	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01987
A414	00339-01988	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01988
A415	00339-01989	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01989
A416	00339-01990	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01990
A417	00339-01991	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01991
A418	00339-01992	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01992
A419	00339-01993	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01993
A420	00339-01994	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01994
A421	00339-01995	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01995
A422	00339-01996	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01996
A423	00339-01997	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01997
A424	00339-01998	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01998
A425	00339-01999	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-01999
A426	00339-02000	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02000
A427	00339-02001	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02001
A428	00339-02002	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02002
A429	00339-02003	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02003
A430	00339-02004	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02004
A431	00339-02005	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02005
A432	00339-02006	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02006
A433	00339-02007	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02007
A434	00339-02008	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02008
A435	00339-02009	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02009
A436	00339-02010	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02010
A437	00339-02011	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02011
A438	00339-02012	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02012
A439	00339-02013	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02013
A440	00339-02014	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02014
A441	00339-02015	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02015
A442	00339-02016	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02016
A443	00339-02017	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02017
A444	00339-02018	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02018
A445	00339-02019	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02019
A446	00339-02020	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02020
A447	00339-02021	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02021
A448	00339-02022	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02022
A449	00339-02023	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02023
A450	00339-02024	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02024
A451	00339-02025	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02025
A452	00339-02026	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02026
A453	00339-02027	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02027
A454	00339-02028	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02028
A455	00339-02029	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02029
A456	00339-02030	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02030
A457	00339-02031	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02031
A458	00339-02032	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02032
A459	00339-02033	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02033
A460	00339-02034	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02034
A461	00339-02035	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02035
A462	00339-02036	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02036
A463	00339-02037	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02037
A464	00339-02038	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02038
A465	00339-02039	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02039
A466	00339-02040	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02040
A467	00339-02041	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02041
A468	00339-02042	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02042
A469	00339-02043	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02043
A470	00339-02044	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02044
A471	00339-02045	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02045
A472	00339-02046	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02046
A473	00339-02047	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02047
A474	00339-02048	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02048
A475	00339-02049	1	SWITCH 435E-PLY, 40012PL12R	28480	00339-02049
A476	00339-02050				

See introduction to this section for ordering information

63

ΔA Components L3 and L4 have been added to instruments with serial numbers 1730A00196 and greater. Refer to note ΔA on Figure 8-15.

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A444	0757-0445		RESISTOR 100K 1% .125W F TC000-100	0329F	C4-1/8-T0-1001-F
A447	0757-0442		RESISTOR 10K 1% .125W F TC000-100	0329F	C4-1/8-T0-1002-F
A448	0757-0442		RESISTOR 10K 1% .125W F TC000-100	0329F	C4-1/8-T0-1002-F
A449	0757-0449		RESISTOR 15.3K 1% .125W F TC000-100	0249F	C4-1/8-T0-1531-F
A4410	0757-0423	2	RESISTOR 5.01K 1% .125W F TC000-100	0329F	C4-1/8-T0-5011-F
A4411	0757-0449	1	RESISTOR 20K 1% .125W F TC000-100	0329F	C4-1/8-T0-2002-F
A4412	0698-4404		RESISTOR 9.31K 1% .125W F TC000-100	0552D	C4-1/8-T0-9311-F
A4413	0698-4431	2	RESISTOR 2.06K 1% .125W F TC000-100	0329F	C4-1/8-T0-2061-F
A4414	0757-0449		RESISTOR 5.11K 1% .125W F TC000-100	0329F	C4-1/8-T0-5111-F
A4415	0757-0445		RESISTOR 5.11K 1% .125W F TC000-100	0329F	C4-1/8-T0-5111-F
A4416	2100-3351	2	RESISTOR 144K 500 10% C B10E-ADJ 1-TM	7313A	72-144K-0
A4417	0698-4428		RESISTOR 40.9K 1% .125W F TC000-100	0140G	CC
A4418	0698-4428		RESISTOR 40.9K 1% .125W F TC000-100	0140G	CC
A4419	0698-4428		RESISTOR 40.9K 1% .125W F TC000-100	0140G	CC
A4420	0698-4428		RESISTOR 40.9K 1% .125W F TC000-100	0140G	CC
A4421	0698-4486		RESISTOR 248K 1% .125W F TC000-100	0329F	C4-1/8-T0-2482-F
A4422	0698-4486		RESISTOR 248K 1% .125W F TC000-100	0329F	C4-1/8-T0-2482-F
A4423	0698-4445	2	RESISTOR 34K 1% .125W F TC000-100	0329F	C4-1/8-T0-3481-F
A4424	0757-0407		RESISTOR 200 1% .125W F TC000-100	0329F	C4-1/8-T0-201-F
A4425	0757-0449		RESISTOR 20K 1% .125W F TC000-100	0329F	C4-1/8-T0-2002-F
A4426	0698-4404		RESISTOR 9.31K 1% .125W F TC000-100	0552D	C4-1/8-T0-9311-F
A4427	0757-0449		RESISTOR 20K 1% .125W F TC000-100	0329F	C4-1/8-T0-2002-F
A4428	0698-4404		RESISTOR 9.31K 1% .125W F TC000-100	0552D	C4-1/8-T0-9311-F
A4429	0757-0449		RESISTOR 5.11K 1% .125W F TC000-100	0329F	C4-1/8-T0-5111-F
A4430	0757-0445		RESISTOR 100K 1% .125W F TC000-100	0329F	C4-1/8-T0-1003-F
A4431	0757-0445		RESISTOR 100K 1% .125W F TC000-100	0329F	C4-1/8-T0-1003-F
A4432	0757-0445		RESISTOR 100K 1% .125W F TC000-100	0329F	C4-1/8-T0-1003-F
A4433	0757-0445		RESISTOR 100K 1% .125W F TC000-100	0329F	C4-1/8-T0-1003-F
A4434	0757-0442		RESISTOR 10K 1% .125W F TC000-100	0329F	C4-1/8-T0-1002-F
A4435	0757-0442		RESISTOR 10K 1% .125W F TC000-100	0329F	C4-1/8-T0-1002-F
A4436	0757-0429		RESISTOR 15.3K 1% .125W F TC000-100	0249F	C4-1/8-T0-1531-F
A4437	0757-0445		RESISTOR 20K 1% .125W F TC000-100	0329F	C4-1/8-T0-2002-F
A4438	0698-4404		RESISTOR 9.31K 1% .125W F TC000-100	0552D	C4-1/8-T0-9311-F
A4439	0757-0423		RESISTOR 3.01K 1% .125W F TC000-100	0329F	C4-1/8-T0-3011-F
A4440	0698-4431		RESISTOR 2.06K 1% .125W F TC000-100	0329F	C4-1/8-T0-2061-F
A4441	0757-0445		RESISTOR 5.11K 1% .125W F TC000-100	0329F	C4-1/8-T0-5111-F
A4442	0757-0445		RESISTOR 5.11K 1% .125W F TC000-100	0329F	C4-1/8-T0-5111-F
A4443	2100-3351		RESISTOR 144K 500 10% C B10E-ADJ 1-TM	7313A	72-144K-0
A4444	0698-4428		RESISTOR 40.9K 1% .125W F TC000-100	0140G	CC
A4445	0698-4428		RESISTOR 40.9K 1% .125W F TC000-100	0140G	CC
A4446	0698-4428		RESISTOR 40.9K 1% .125W F TC000-100	0140G	CC
A4447	0698-4428		RESISTOR 40.9K 1% .125W F TC000-100	0140G	CC
A4448	0698-4435		RESISTOR 248K 1% .125W F TC000-100	0329F	C4-1/8-T0-2481-F
A4449	0757-0447	2	RESISTOR 162K 1% .125W F TC000-100	0329F	C4-1/8-T0-1622-F
A4450	0757-0280		RESISTOR 1K 1% .125W F TC000-100	0329F	C4-1/8-T0-1001-F
A4451	0757-0447				
A4452	0698-4435		RESISTOR 248K 1% .125W F TC000-100	0329F	C4-1/8-T0-2481-F
A4453	0757-0280	1	RESISTOR 1K 1% .125W F TC000-100	0329F	C4-1/8-T0-1001-F
A4454	0698-4441	1	RESISTOR 30.9K 1% .125W F TC000-100	0329F	C4-1/8-T0-3092-F
A4455	0698-4453		RESISTOR 402 1% .125W F TC000-100	0329F	C4-1/8-T0-402A-F
A4456	0757-0407		RESISTOR 200 1% .125W F TC000-100	0329F	C4-1/8-T0-201-F
A4457	0757-0426	2	RESISTOR 1.5K 1% .125W F TC000-100	0329F	C4-1/8-T0-1501-F
A4458	0757-0426		RESISTOR 1.5K 1% .125W F TC000-100	0329F	C4-1/8-T0-1501-F
A4459	0757-0407		RESISTOR 200 1% .125W F TC000-100	0329F	C4-1/8-T0-201-F
A4460	0757-0407		RESISTOR 200 1% .125W F TC000-100	0329F	C4-1/8-T0-201-F
A4461	0698-4453	1	RESISTOR 402 1% .125W F TC000-100	0329F	C4-1/8-T0-402A-F
A4462	0698-0085	1	RESISTOR 2.01K 1% .125W F TC000-100	0329F	C4-1/8-T0-2011-F
A4463	0698-4440	2	RESISTOR 409 1% .125W F TC000-100	0329F	C4-1/8-T0-409A-F
A4464	0698-0080		RESISTOR 409 1% .125W F TC000-100	0329F	C4-1/8-T0-409A-F
A4465	2100-3278	1	RESISTOR 15K 1% .125W F TC000-100	7313A	72-15K-0
A4466	0757-0440		RESISTOR 15K 1% .125W F TC000-100	0329F	C4-1/8-T0-1502-F
A44U1	1628-0081		1C 315 0P AMP	4579C	L4318
A44U2	1628-0427	2	2C 1496 MODULATOR	4579C	W41496G
A44U3	1628-0315		1C 0P AMP	4579C	L4318H
A44U4	1628-0427		2C 1496 MODULATOR	4579C	W41496G
A44U5	1628-0315		1C 0P AMP	4579C	L4318H
A44U6	1628-0315		1C 0P AMP	4579C	L4318H
A44U7	1628-0021		1C 0P AMP	4579C	L4318H
	0401-0214	1	EXTRACTOR-RC BOARD YEL POLIC	2444B	0401-0214
	1480-0116	1	EXTRACTOR P34411A WIA	7344B	0401-0214
AS	00314-00395	1	PC ASSEMBLY, INPUT FUNCTION	2444B	00314-00395
ASC500	0160-3456	1	CAPACITOR-XXD 100UF +-10% 16VDC CER	2444B	0160-3456
ASC501	0160-0147	2	CAPACITOR-XXD 2.2UF +-10% 50VDC TA	2444B	0160-0147
ASC502	0160-0147		CAPACITOR-XXD 2.2UF +-10% 25VDC TA	2444B	0160-0147
ASC503	0160-0446	1	CAPACITOR-XXD 2200PF +-2% 30VDC	2444B	0160-0446

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
ASC504	0160-2222	1	CAPACITOR-FXD 1500PF +-5% 350VDC	28440	0160-2222
ASC505	0160-2204	1	CAPACITOR-FXD 100PF +-5% 350VDC MICAC-70	28440	0160-2204
ASC506	0160-2207	1	CAPACITOR-FXD 300PF +-5% 350VDC MICAC-70	28440	0160-2207
ASC510	0160-4593	1	CAPACITOR-FXD 1.5UF +-20% 400VDC	28440	0160-4593
ASC500	1401-0914	1	CODE-80-077-V	28440	1401-0914
ASL500	9100-1064	1	COIL-MLD 3MM 5% 0-70 .2150x.50L2	02175	9100-1064
ASL501	9100-1072	1	COIL-MLD 0.2MM 5% 0-80 .240x.74L2	02175	9100-1072
ASL502	9100-1064	1	COIL-MLD 4.5MM 5% 0-80 .240x.74L2	02175	9100-1064
AS401	00339-01204	1	BRACKET, FUNCTION SWITCH	28440	00339-01204
ASR500	0608-1972	1	RESISTOR 40.6K 1% .125W P TC=0+-100	03245	0608-1972
ASR501	0737-0280	1	RESISTOR 1K 1% .125W P TC=0+-100	03245	0737-0280
ASR502	0737-0424	1	RESISTOR 1.5K 1% .125W P TC=0+-100	03245	0737-0424
AS54	00339-01001	1	SWITCH ASSEMBLY, FUNCTION	28440	00339-01001
	3100-1423	1	SWITCH, ROTARY	25440	3100-1423

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
C-43218 PARTS					
C1	0150-0012	1	CAPACITOR-440 .01UF +-20% 14VDC CBN	0420J	009341027103-538
D81	1490-0487	4	LED-VISIBLE LUM-INTIM-DCD 1A-20MA-MA2	28480	1490-0487
D82	1490-0487	4	LENS CAP CL-1L .125-014	28480	1490-0487
D83	1490-0487	4	LED-VISIBLE LUM-INTIM-DCD 1A-20MA-MA2	28480	1490-0487
D84	1490-0487	4	LENS CAP CL-1L .125-014	28480	1490-0487
F1	2110-0004	1	FUSE .25A 250V FAST-BLOW 1,25K,25 AL 12L	0470C	312-250
F2	2110-0184	1	FUSE .062A 125V FAST-BLOW .25K,091	0470C	275-092
FL1	9100-1875	1	FILTER	28480	9100-1875
J1	1510-0090	2	STANDING POST SGL SGL-TUR GSK	28480	1510-0090
J2	1510-0093	3	STANDING POST SGL SGL-TUR GSK BLK	28480	1510-0093
J3	2950-0144	3	NOT-RE-DBL-C-4V 1/2-12-7-0 .150-14-TM	28480	2950-0144
J4	1510-0093	1	STANDING POST SGL SGL-TUR GSK BLK	28480	1510-0093
J5	1510-0093	1	STANDING POST SGL SGL-TUR GSK BLK	28480	1510-0093
L1	9100-1447	1	COIL 300H 25A	28480	9100-1447
L2	9100-1456	3	WIDE BAND CHOK	28480	9100-1456
L3	9100-1456	3	WIDE BAND CHOK	28480	9100-1456
L4	9100-1456	3	WIDE BAND CHOK	28480	9100-1456
M1	1320-0091	1	METER	28480	1320-0091
S13	3101-1877	1	SWITCH, SLIDE DPST-3 (INPUT SELECT)	28480	3101-1877
S14	00339-61604	1	SWITCH ASSEMBLY, OSC, LEVEL	28480	00339-61604
S14-1	3100-3424	1	SWITCH ROTARY INCLUDES R3 (10KOHM)	28480	3100-3424
S14-2	00339-61601	1	CABLE ASSEMBLY, OSC, LEVEL	28480	00339-61601
S14-3	1251-3218	2	CONNECTOR, 8-PIN FEMALE	27264	00-50-7081
S14-4	1251-3073	2	CONTACT, CONNECTOR	27264	00-50-7081
S14-5	00339-61600	1	CABLE ASSEMBLY, OSCILLATOR LEVEL	28480	00339-61600
S14-6	1251-3201	1	CONNECTOR 8-PIN F POST TYPE	27264	00-50-7081
S14-7	1251-3073	3	CONTACT-CONN 8-PIN F POST TYPE	27264	00-50-7081
S14-8	1251-3073	3	CONTACT-CONN 8-PIN F POST TYPE	27264	00-50-7081
S17	3101-2042	2	SWITCH, SLIDE	28480	3101-2042
S18	3101-2042	2	SWITCH, SLIDE	28480	3101-2042
T1	9100-4012	1	TRANSFORMER, POWER	28480	9100-4012
T2	1251-3073	1	CONNECTOR 8-PIN F POST TYPE	27264	00-50-7081
T3	1251-3073	1	CONTACT-CONN 8-PIN F POST TYPE	27264	00-50-7081
W2	00339-61602	1	CABLE ASSEMBLY, OSC, POWER	28480	00339-61602
W2-1	1251-3201	1	CONNECTOR 8-PIN F POST TYPE	27264	00-50-7081
W2-2	1251-3073	1	CONTACT-CONN 8-PIN F POST TYPE	27264	00-50-7081
W3	00339-61603	1	CABLE ASSEMBLY, DETECTOR POWER	28480	00339-61603
W3-1	1251-3201	1	CONNECTOR 8-PIN F POST TYPE	27264	00-50-7081
W3-2	1251-3073	1	CONTACT-CONN 8-PIN F POST TYPE	27264	00-50-7081
W3-3	1251-3073	1	CONTACT-CONN 8-PIN F POST TYPE	27264	00-50-7081
W4	00339-61604	1	CABLE ASSEMBLY, METER RESPONSE	28480	00339-61604
W4-1	1251-3201	1	CONNECTOR 8-PIN F POST TYPE	27264	00-50-7081
W4-2	1251-3073	1	CONTACT-CONN 8-PIN F POST TYPE	27264	00-50-7081
W4-3	1251-3073	1	CONTACT-CONN 8-PIN F POST TYPE	27264	00-50-7081
W5	2100-3440	1	RESISTOR, VAR 5K (RELATIVE LEVEL)	28480	2100-3440
W5-1	3101-1235	1	SWITCH-8L DPST-4S STD 1.5A 125VAC	0565G	11-12404
W5-2	00339-61605	1	CABLE ASSEMBLY, FILTER	28480	00339-61605
W5-3	1251-3201	1	CONNECTOR 8-PIN F POST TYPE	27264	00-50-7081
W5-4	1251-3073	1	CONTACT-CONN 8-PIN F POST TYPE	27264	00-50-7081
W5-5	3101-2247	1	FILTER SWITCH	28480	3101-2247
W5-6	5041-0117	2	KEY CAP FILTER SWITCH	28480	5041-0117

Table 6-3. Replaceable Parts


Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
*7	00339-01007	1	CABLE ASSEMBLY, AC POWER	20400	00339-01007
*7010 A	3101-1000	1	SWITCH TGL BASIC DPDT NS 3A 125VAC	20400	3101-1000
	5000-5032	1	COVER, ON POWER SWITCH	20400	5000-5032
*8	00339-01008	1	CABLE ASSEMBLY, FREQUENCY IND.	20400	00339-01008
*9	00339-01009	1	CABLE ASSEMBLY, LEVEL IND.	20400	00339-01009
*10	00339-01010 00100-00702	1 3	CABLE ASSEMBLY, FREQUENCY VERNIER SPACERS, FOUR	20400 20400	00339-01010 00100-00702
*10P	1251-0510 1251-1073	1	MOUNTING, CONNECTOR, 5-PIN REMOTE CONTACT, CONNECTOR	27000 27000	00150-7051 00150-0107
*10P2	2100-1001	1	RESISTOR, VAR 500K (FREQ. VERNIER)	20400	2100-1001
*11	0120-2574	6	CABLE ASSEMBLY	20400	0120-2574
*12	0120-2576		CABLE ASSEMBLY	20400	0120-2576
*13	0120-2574		CABLE ASSEMBLY	20400	0120-2574
*14	0120-2576		CABLE ASSEMBLY	20400	0120-2576
*15	0120-2574		CABLE ASSEMBLY	20400	0120-2574
*16	0120-2574		CABLE ASSEMBLY	20400	0120-2574
*17	0120-2575	4	CABLE ASSEMBLY	20400	0120-2575
*18	0120-2575		CABLE ASSEMBLY	20400	0120-2575
*19	0120-2575		CABLE ASSEMBLY	20400	0120-2575
*20	0120-2575		CABLE ASSEMBLY	20400	0120-2575
	0370-0490 00339-03701 3030-0090 1500-0010 0370-1090	1 1 20 1 2	KNOB, POINT-TO-POINT, CAP (FUNCTION) SHAFT, W/ SCREW-SET 4-000 .13-IN-LG SMALL CUP-PT COUPLER-ROD .75-IG BRG KNOB-BASE-PT 1/2 35T .25-IN-10	20400 20400 20400 20400 20400	0370-0490 00339-03701 3030-0090 1500-0010 0370-1090
	3030-0090 00339-04001 3130-0533	1 1 1	SCREW-SET 4-000 .13-IN-LG SMALL CUP-PT KNOB, DISTORTION RING DETENT, 10-POSITION	20400 20400 20400	3030-0090 00339-04001 3130-0533
	00339-04002 3030-0090 3130-0534	1 1 1	KNOB, INPUT RING SCREW-SET 4-000 .13-IN-LG SMALL CUP-PT DETENT, 12-POSITION	20400 20400 20400	00339-04002 3030-0090 3130-0534
	3030-0090 00339-04004 3130-0535	1 1 2	SCREW-SET 4-000 .13-IN-LG SMALL CUP-PT KNOB, TENS DETENT, 10-POSITION	20400 20400 20400	3030-0090 00339-04004 3130-0535
	00339-04005 3030-0090 3130-0535	1 1 1	KNOB, UNITS SCREW-SET 4-000 .13-IN-LG SMALL CUP-PT DETENT, 10-POSITION	20400 20400 20400	00339-04005 3030-0090 3130-0535
	00339-04006 3030-0090 3130-0536	1 1 1	KNOB, MULTIPLIER SCREW-SET 4-000 .13-IN-LG SMALL CUP-PT DETENT, 10-POSITION	20400 20400 20400	00339-04006 3030-0090 3130-0536
	0370-1090 00339-03702 1500-0010	1 1 1	KNOB, POINTER (FREQUENCY VERNIER) SHAFT, NON-METALLIC COUPLER-ROD .75-IG BRG	20400 20400 20400	0370-1090 00339-03702 1500-0010
	00339-04003 3030-0090 0370-1090 3030-0090	1 1 10 1	KNOB, OSC. LEVEL SCREW-SET 4-000 .13-IN-LG SMALL CUP-PT KNOB, END W/BRG SCREW-SET 4-000 .13-IN-LG SMALL CUP-PT	20400 20400 20400 20400	00339-04003 3030-0090 0370-1090 3030-0090
	0370-1125 3030-0051	1 2	KNOB, POINTER (LEVEL VERNIER) SCREW-SET 4-000 .09-IN-14-IG SMALL CUP-PT	20400 20400	0370-1125 3030-0051
*21	2110-0405 2110-0407 2110-0073	1 1 1	CAP, FUSEHOLDER NUT, HEX SINGLE CHAMFER 1/2-20 T-PEEN FUSE-FLORA-PT-4 FUSE 200 300V UL/IEC	20400 20400 20400	2110-0405 2110-0407 2110-0073

See introduction to this section for ordering information

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
			MECHANICAL PARTS		
MP1	00130-00201	1	PANEL, FRONT	25-00	00130-00201
MP2	00130-00202	1	FRONT SUB-PANEL	25-00	00130-00202
MP3	00741-01212	2	BRACKET, PETER	25-00	00741-01212
MP4	5020-0003	1	FRONT FRAME	20-00	5020-0003
MP5	5020-0015	0	CORNER, STRUT	25-00	5020-0015
MP6	00130-01206	1	BRACKET, SHIELD MOUNTING	25-00	00130-01206
	5000-0255	0	FASTENER, CAPTIVE	25-00	5000-0255
MP7	5020-0004	1	REAR, CASTING	25-00	5020-0004
MP8	00130-00203	1	PANEL, REAR	25-00	00130-00203
MP9	00130-00603	1	S-SHIELD, DETECTOR	25-00	00130-00603
	0003-0123	1	GUIDE-AC BOARD GUN POLY. .002-00-7-443	25-00	0003-0123
	5000-0503	0	FASTENER, CAPTIVE	25-00	5000-0503
MP10	00130-00601	1	S-SHIELD, OSC., FRONT	25-00	00130-00601
MP11	00130-00602	1	S-SHIELD, OSC., BACK	25-00	00130-00602
	5000-0503	0	FASTENER, CAPTIVE	25-00	5000-0503
MP12	00130-00102	1	PLATE, OSC. TOP	25-00	00130-00102
MP13	00130-00101	1	PLATE, OSC. BOTTOM	25-00	00130-00101
MP14	00130-00004	1	SHIELD-0, S., FRONT	25-00	00130-00004
MP15	00130-00005	1	SHIELD, S., BACK	25-00	00130-00005
	0003-0150	2	GUIDE-AC BOARD VEL POLY. .002-00-7-443	25-00	0003-0150
	5000-0255	0	FASTENER, CAPTIVE	25-00	5000-0255
MP16	00130-00006	1	S-SHIELD, P-0	25-00	00130-00006
	0003-0150	0	GUIDE-AC BOARD VEL POLY. .002-00-7-443	25-00	0003-0150
MP17	00130-00007	1	SHIELD, INPUT AMPLIFIER	25-00	00130-00007
MP18	00130-00008	1	SHIELD, ATTENUATOR	25-00	00130-00008
MP19	5000-0011	1	COVER, TOP (STANDARD)	25-00	5000-0011
MP20	5000-0005	1	COVER, BOTTOM (STANDARD)	25-00	5000-0005
MP21	5000-7201	4	FOOT (STANDARD)	25-00	5000-7201
MP22	1400-1305	2	TEST STAND SET	25-00	1400-1305
MP23	5000-0070	3	COVER, SIDE (STANDARD)	25-00	5000-0070
MP24	5000-0002	2	HANDLE, STRAP	25-00	5000-0002
MP25	5000-7219	2	STRAP, HANDLE, CAP-FRONT	25-00	5000-7219
MP26	5000-7220	2	STRAP, HANDLE, CAP-REAR	25-00	5000-7220
MP27	5000-7202	1	TRIM, TOP	25-00	5000-7202
MP28	5001-0410	2	PIPE TUB	25-00	5001-0410
MP29	00130-00609	1	TRANSFORMER SHIELD	25-00	00130-00609

See introduction to this section for ordering information

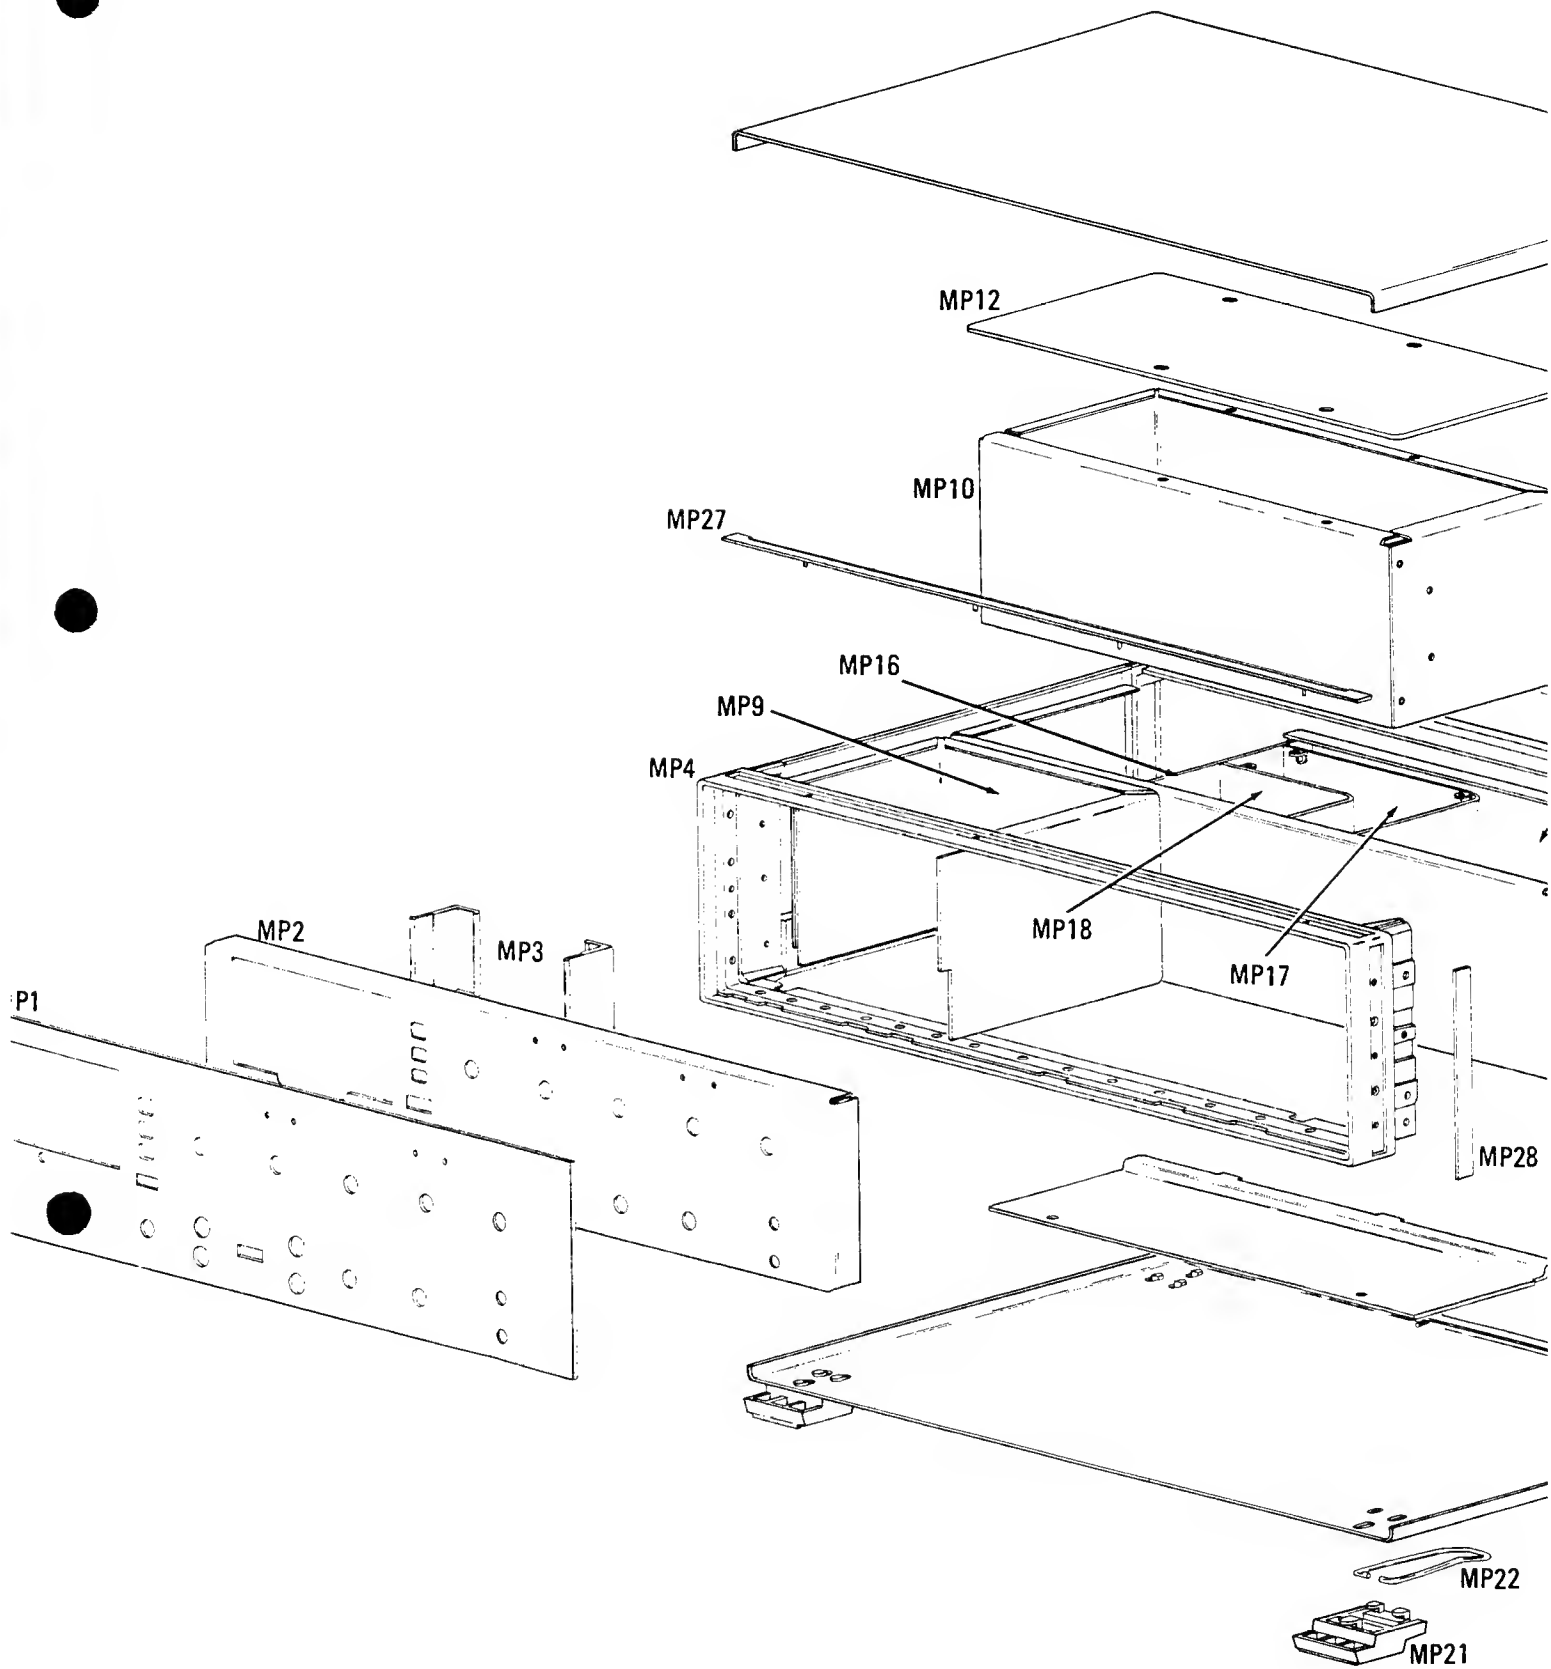

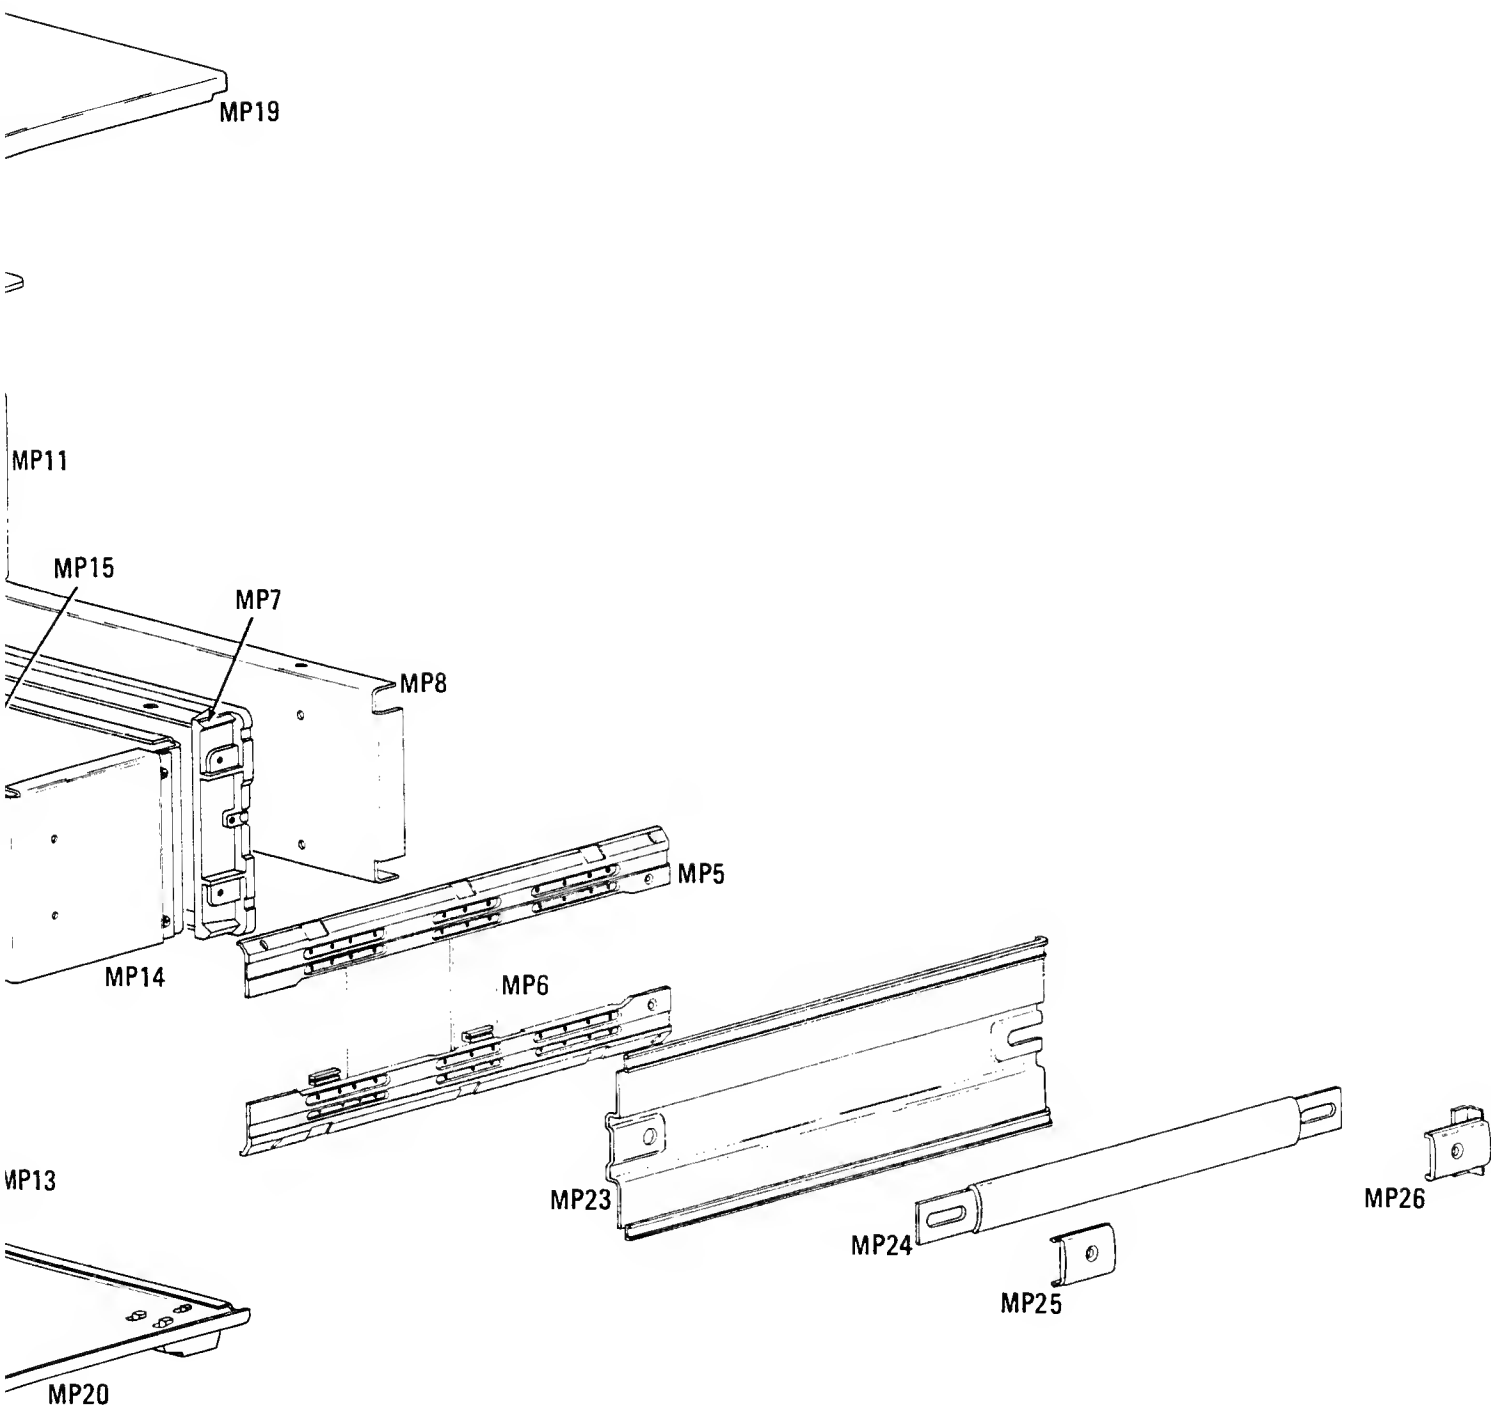


Figure 6-1. Mechanical Parts Locator.
6-15/6-16

SECTION VII

MANUAL CHANGES

7-1. INTRODUCTION.

7-2. This section contains information necessary to adapt this manual to instruments with serial numbers lower than the number listed on the title page.

7-3. MANUAL CHANGES.

7-4. To adapt this manual to your instrument, refer to Table 7-1 and make the manual changes listed opposite your instrument serial number. These changes should be performed in the sequence listed.

7-5. If your instrument serial number is not listed on the title page of this manual or in Table 7-1, it may be documented in a yellow MANUAL CHANGES supplement included with the manual. For additional information, refer to INSTRUMENT AND MANUAL IDENTIFICATION in Section I.

Table 7-1. Manual Changes by Serial Number.

Instrument Serial No.	Make Manual Change
1730A00101 to 1730A00266	A

7-6. MANUAL CHANGE INSTRUCTIONS.

CHANGE A

The oscillator circuitry was simplified beginning with instrument serial number 1730A00266. To adapt this manual to prior instruments make the following changes.

Page 6-3, Table 6-3.

Add:

A1C20, 0180-0291, Cap-Fxd 1 μ F $\pm 10\%$ 35 VDC TA
A1CR1, 1901-0518, Diode-Schottky
A1Q1, 1855-0360, Transistor Mosfet N-Chan D-Mode
A1R32, R33, 0698-7332, Resistor 1 M 1% .125 W F
TC=0 \pm 100

Delete:

AlCR14, 1901-0040, Diode-Switching 30 V 5 mA

Page 8-21/8-22, Figure 8-17.

Change:

Modify the amplitude control circuitry as shown in Figure 7-1.

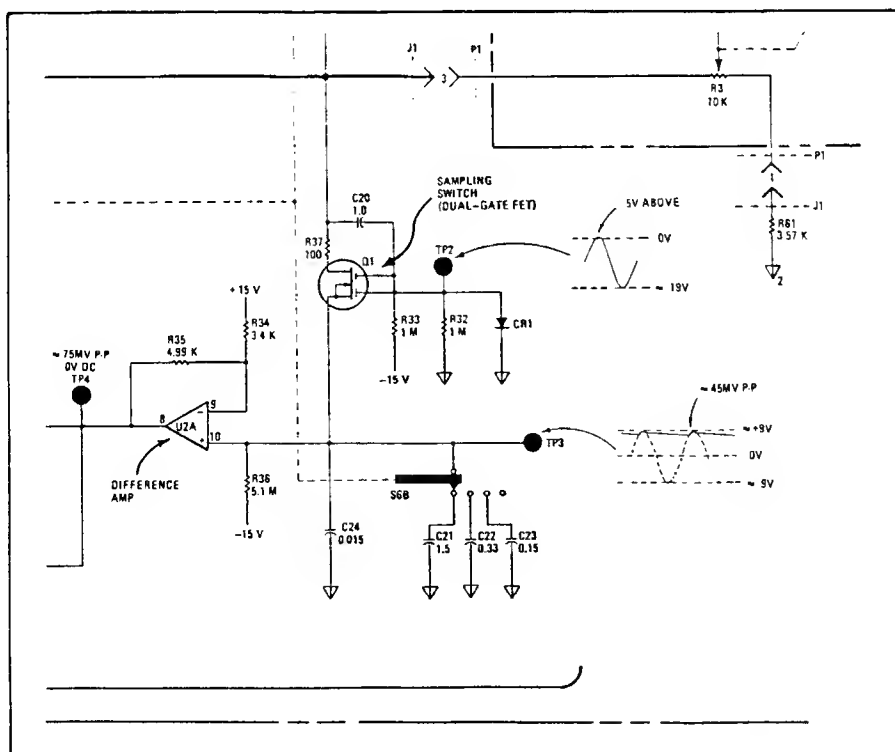


Figure 7-1. Amplitude Control Circuit Change.

SECTION VIII SERVICE

8-1. INTRODUCTION.

8-2. This section contains theory of operation, troubleshooting information, safety considerations, and general service information for the Model 339A Distortion Measurement Set.

8-3. SAFETY CONSIDERATIONS.

8-4. Although this instrument has been designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to ensure safe operation and to maintain the instrument in safe operating condition. Service and adjustments should be performed only by qualified service personnel.

8-5. Any adjustment, maintenance, and repair of the opened instrument while any power or voltage is applied should be avoided as much as possible, and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

WARNING

Any interruption of the protective grounding conductor (inside or outside the instrument) or disconnection of the protective earth

terminal is likely to make the instrument dangerous. Intentional interruption of the protective grounding conductor is strictly prohibited.

8-6. It is possible for capacitors inside the instrument to still be charged even if the instrument has been disconnected from its power source.

8-7. Be certain that only fuses with the required current rating and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuse holders must be avoided.

WARNING

The service information presented in this manual is normally used with the protective covers removed and power applied to the instrument. Energy available at many points may, if contacted, result in personal injury.

8-8. RECOMMENDED TEST EQUIPMENT.

8-9. Test equipment required to maintain the Distortion Measurement Set is listed in Table 1-3. Equipment other than that listed may be used if it meets the critical specifications.

THEORY OF OPERATION

8-10. GENERAL DESCRIPTION.

8-11. Figure 8-1 shows a simplified block diagram of the Model 339A Distortion Measurement Set. The 339A combines an automatic, high resolution distortion analyzer/voltmeter and a low distortion oscillator to provide a drive signal to the device under test. The frequency of both the oscillator and the fundamental rejection circuit (notch filter) of the distortion analyzer are tuned simultaneously to simplify operation.

8-12. The Model 339A features an AM DETECTOR input, in addition to the normal analyzer/voltmeter input, which permits the user to measure the distortion of a modulating signal on an RF carrier. Selection of the AM DETECTOR input or DISTORTION ANALYZER input is made by a front panel switch.

8-13. An OSCILLATOR LEVEL function is provided

to allow the operator to monitor the oscillator output level without connecting external cables.

8-14. The selected input signal is applied to the input attenuator/amplifier which provides the proper amount of attenuation or gain required to place the signal within the input range of the analyzer circuits.

8-15. The Fundamental Rejection Circuit consists of a "bridged T" filter network in conjunction with a "notch amplifier" and feed-back amplifier which enhance the rejection characteristics. The "nulling" process of the circuit is fully automatic to simplify operation and to provide maximum accuracy. If the fundamental frequency of the input signal is not within the "pull-in" range of the rejection circuit (in cases where an external signal source is used), a front panel LED indicator is lit to indicate which direction to turn the FREQUENCY controls to bring the rejection circuit within range. The

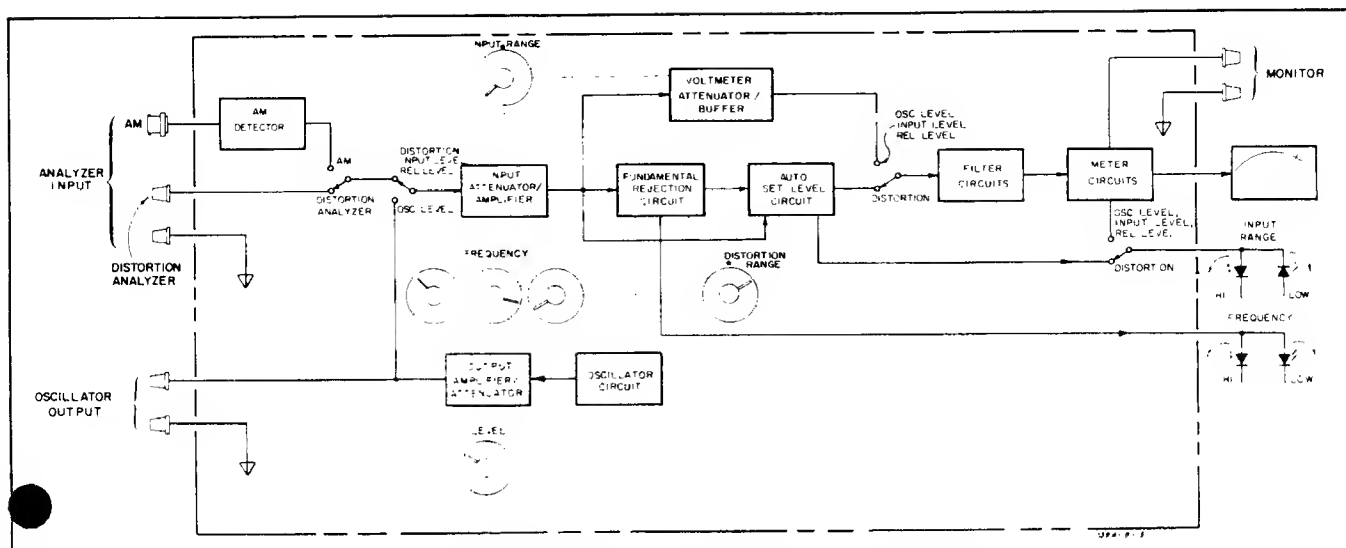


Figure 8-1. Model 339A Simplified Block Diagram.

rejection circuit attenuates the fundamental frequency of the input signal approximately -100 dB. The distortion signal (output signal) of the rejection circuit is attenuated or amplified (depending upon the setting of the DISTORTION RANGE control) by the distortion amplifier and applied to the input of the Auto Set-Level circuit.

8-16. The Automatic Set-Level Circuit, as the name implies, automatically adjust the distortion signal to provide a distortion measurement which is relative to a full-scale input level. The Auto Set-Level circuit eliminates the necessity of manually setting a reference level before making a distortion measurement.

8-17. When using the voltmeter function of the 339A, OSCillator LEVEL, INPUT LEVEL, and RELative LEVEL, the Voltmeter Attenuator Buffer supplies the necessary amount of attenuation to bring the input signal within the input range of the meter circuits and provides isolation between the input amplifier and meter circuits.

8-18. The Filter Circuits, included with the Model 339A, are three-pole active filters and include a 400 Hz high-pass filter, a 30 kHz low-pass filter, and an 80 kHz low-pass filter. These filters may be selected individually or in any combination to provide the filter characteristics required.

8-19. The Meter Circuits include an input amplifier, and RMS detector, a variable gain amplifier, and a voltage to current converter. The input amplifier amplifies the input signal by +40 dB to drive the rms detector and supply an output signal to the MONITOR terminals. The full-scale output of this amplifier is 1 V rms. The rms detector converts the input signal to a dc voltage proportional to the rms value of the input (1 V dc full-scale). The output of the rms detector is applied to the input of a variable gain amplifier which acts as a buffer in all functions except RELative LEVEL. In this function, the variable

gain amplifier is enabled to permit the user to set a convenient reference level on the meter. The output of the variable gain amplifier is applied to both the voltage-to-current converter which drives the meter and the input range comparators. These comparators are used to light front panel LED indicators when the meter drive signal is greater than full-scale or less than 1/3 full-scale. The LEDs indicate which direction to turn the INPUT RANGE control to bring the drive signal within the range of the meter.

8-20. The Oscillator Circuit of the 339A uses a "bridged T" filter network to determine the operating frequency and employs a sampling feedback circuit to control the oscillator output level. The amplitude feedback circuit is designed to provide cycle-to-cycle amplitude control while minimizing distortion caused by regulating the output level.

8-21. The Output Amplifier/Attenuator circuit of the oscillator provides isolation between the oscillator circuit and the output terminals and varies the output level from 1 mV rms to greater than 3 V rms into a 600 ohm load.

8-22. CIRCUIT DESCRIPTIONS.

8-23. Input Circuitry.

8-24. The front panel FUNCTION switch permits the user to select one of four input functions, as follows:

OSCillator LEVEL - In this function the meter circuit monitors the rms output level of the oscillator.

DISTORTION - The distortion function measures the rms value of total harmonic distortion (THD) of the input signal.

INPUT LEVEL - In this function, the meter

indicates the rms value of the input signal (voltmeter function).

RELATIVE LEVEL - The relative level function permits the user to measure the rms value of the input signal relative to a pre-set reference (dB and VU measurements).

8-25. In addition to the DISTortion ANalyzer input, the 339A also includes an AM DETECTOR INPUT which detects the AM modulation signal of an RF carrier. This allows the user to measure the total harmonic distortion of the modulation signal.

8-26. Input Amplifier.

8-27. The 339A input amplifier is an operational amplifier circuit which uses a combination of attenuation and gain to limit the full-scale output of the amplifier to 3 V rms. Figure 8-2 shows a simplified schematic of the input amplifier and lists the attenuation and gain for each INPUT RANGE setting. The output signal of the buffer amplifier is applied to the fundamental rejection circuit (notch filter) and auto set-level circuit of the analyzer section. The voltmeter attenuator provides the necessary attenuation to maintain a 10 mV rms full-scale output signal to the voltmeter buffer amplifier.

8-28. Input Overload Protection.

8-29. The input amplifier is protected from the application of high voltage to the input by a zener

referenced protection circuit which limits the input voltage to approximately 11 volts peak. The input is further protected by a fuse which limits the input current to approximately 60 mA. During normal operation, FET A3Q100 supplies a feedback signal which is equal in phase and amplitude to the input signal to eliminate leakage caused by the capacitance of the protection diodes.

8-30. Analyzer Circuitry.

8-31. Notch Filter.

8-32. The purpose of the Notch Filter is to eliminate the fundamental frequency of the signal being measured. The basic notch filter circuit, as shown in Figure 8-3, is a "bridged T" RC filter network. The filter is tuned to approximately the fundamental frequency of the input signal by the front panel FREQUENCY controls and is fine tuned to the exact frequency by the phase control circuit. The notch filter by itself attenuates the fundamental frequency only about -16 dB. To improve the "notch" characteristics, a portion of the input signal is "fed-forward" and algebraically summed with the output of the notch filter by notch amplifier A3U3. The Application of the feed-forward signal cancels the remaining fundamental signal. The correct level of feed-forward signal necessary to cancel the fundamental frequency is regulated by the amplitude control circuit. The combination of feed-forward signal and the automatic frequency tuning provided by the phase control circuit improves the "notch depth" to

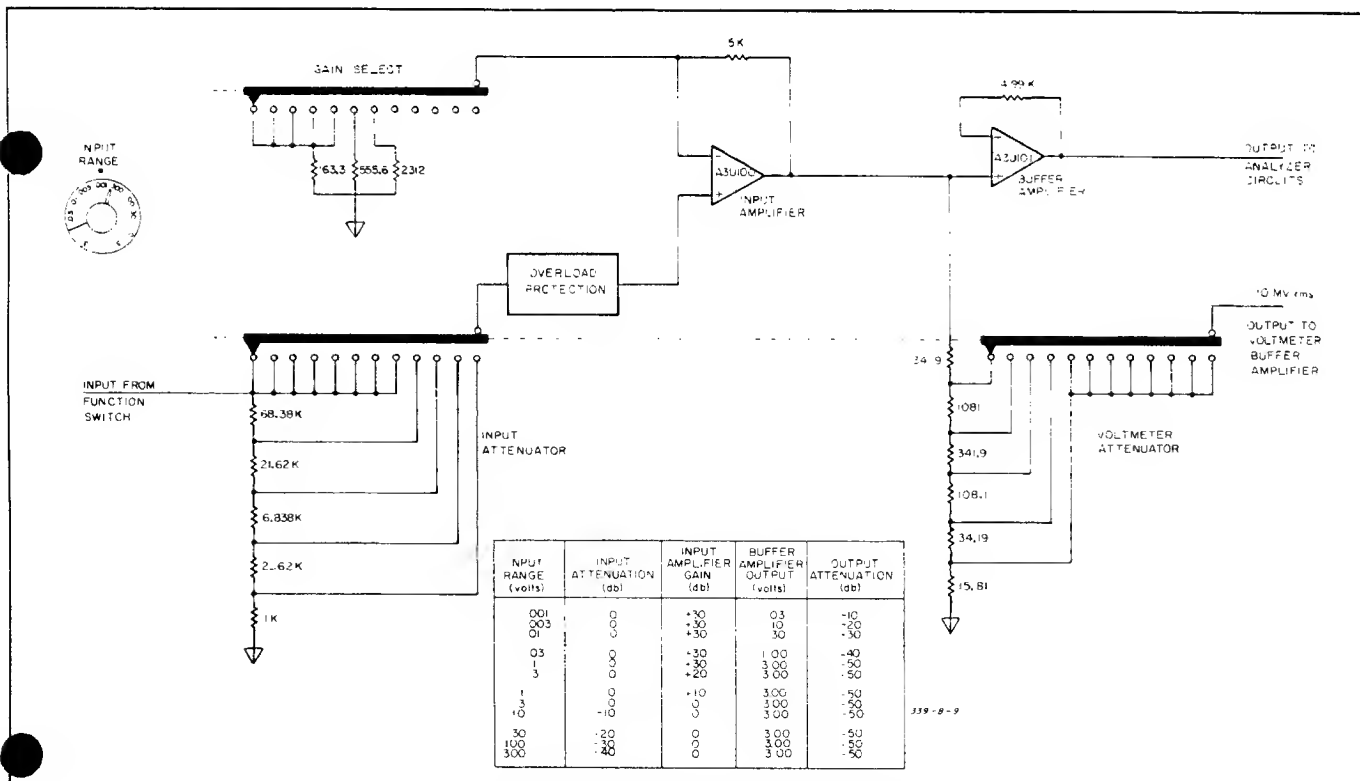


Figure 8-2. Simplified Input Amplifier Schematic.

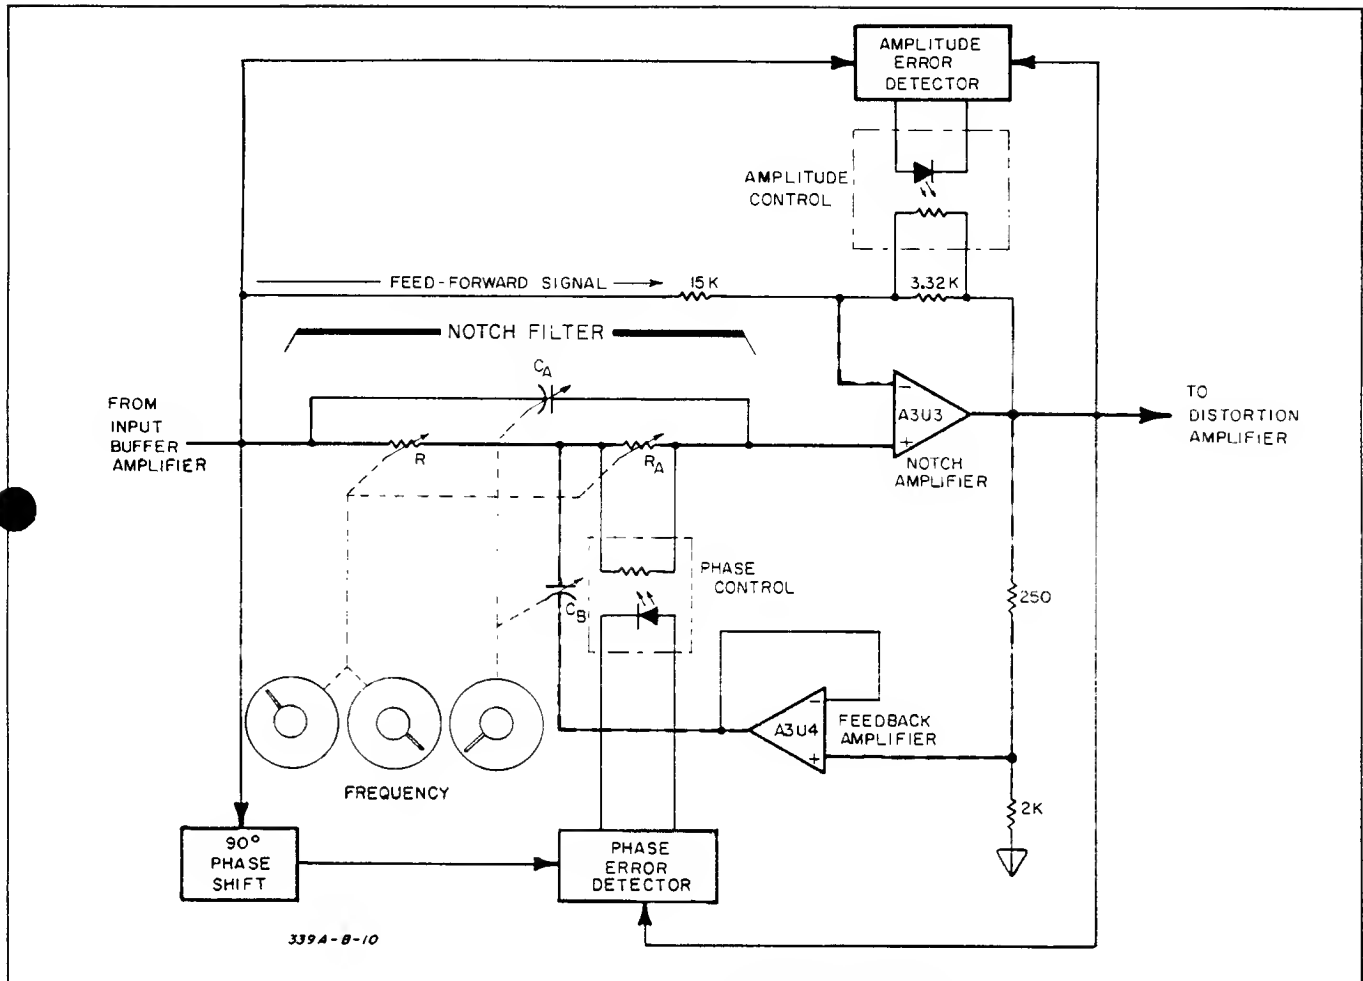


Figure 8-3. Simplified Notch Filter Schematic.

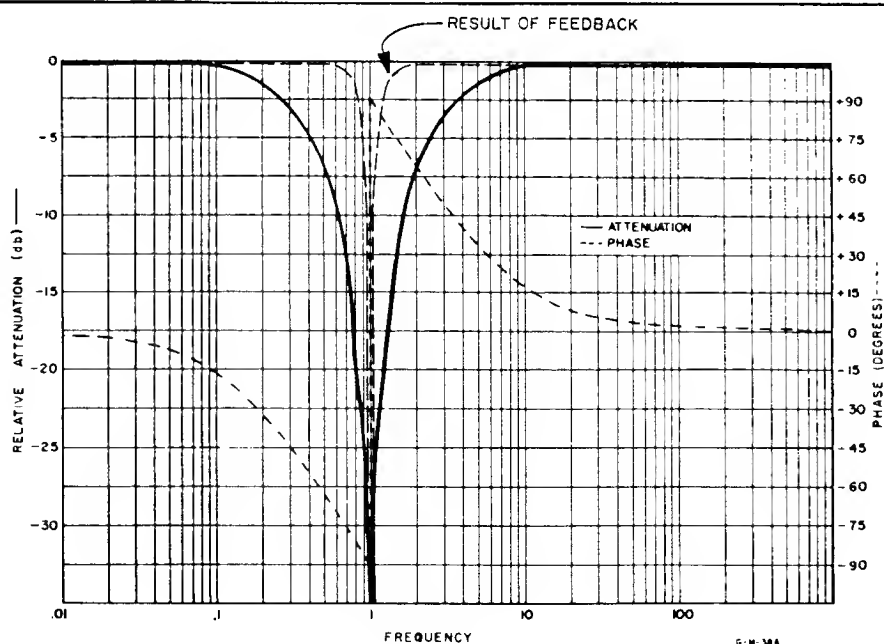


Figure 8-4. Effect of Feedback.

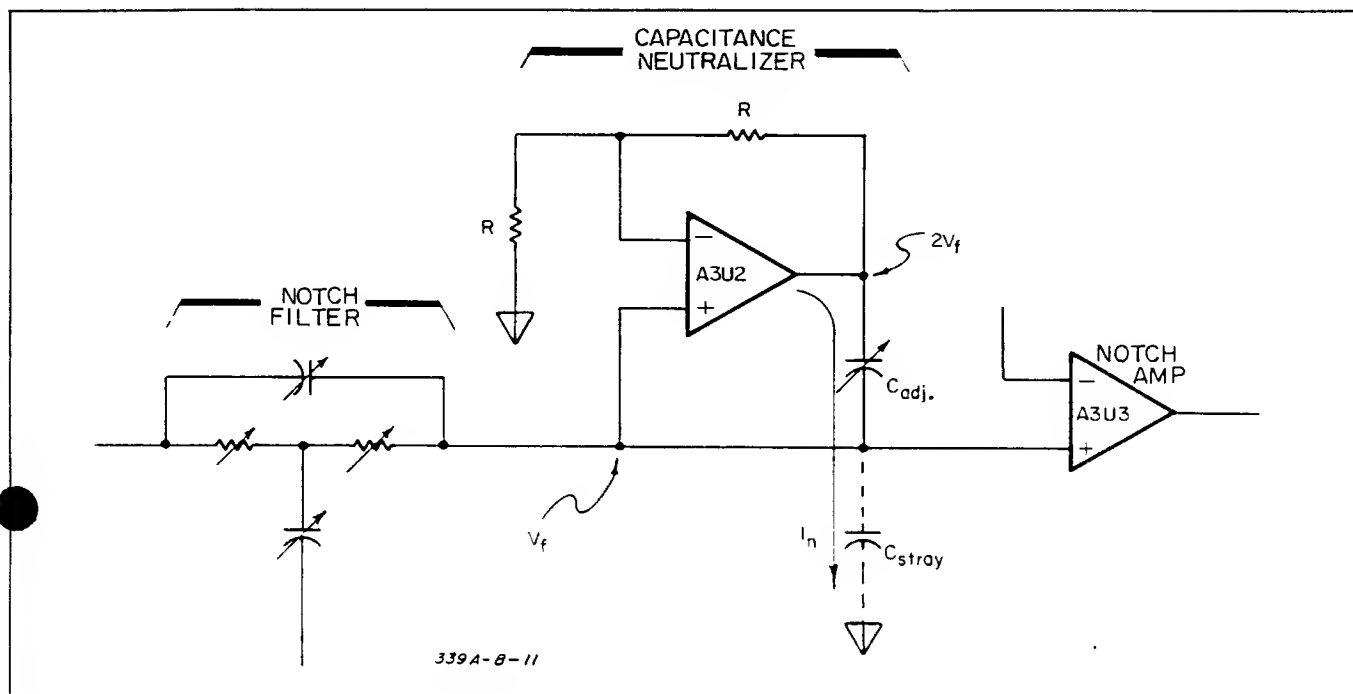


Figure 8-5. Simplified Capacitance Neutralizer Schematic.

approximately -100 dB. To improve the "notch width", a portion of the output signal from A3U3 is fed-back to the notch filter circuit. The effects of this feed-back are illustrated in Figure 8-4. Feed-back amplifier A3U4 is a unity gain amplifier which provides isolation between notch amplifier A3U3 and the notch filter circuitry. The notch filter output (from A3U3) is applied to the input of distortion amplifier A3U200 and to the input of the amplitude and phase error detector circuits.

8-33. Capacitance Neutralizer.

8-34. The purpose of the Capacitance Neutralizer is to neutralize the effects of stray capacitance at the output of the notch filter. The neutralizer circuit (shown in Figure 8-5) consists of an operational amplifier whose gain is set by resistors "R". The output voltage of A3U2 is equal to: $V_f(1 + R/R)$ or $2V_f$, where V_f is the output voltage from the notch filter. The output of A3U2 drives

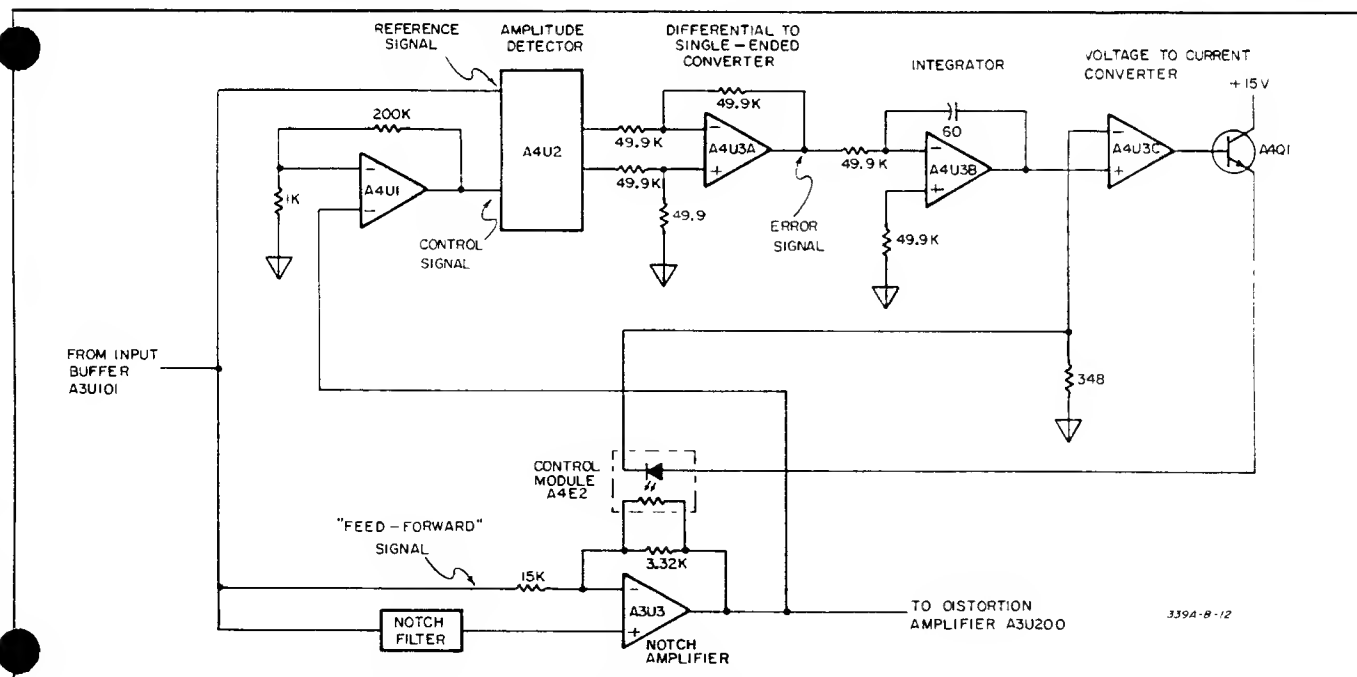


Figure 8-6. Simplified Amplitude Error Detector Schematic.

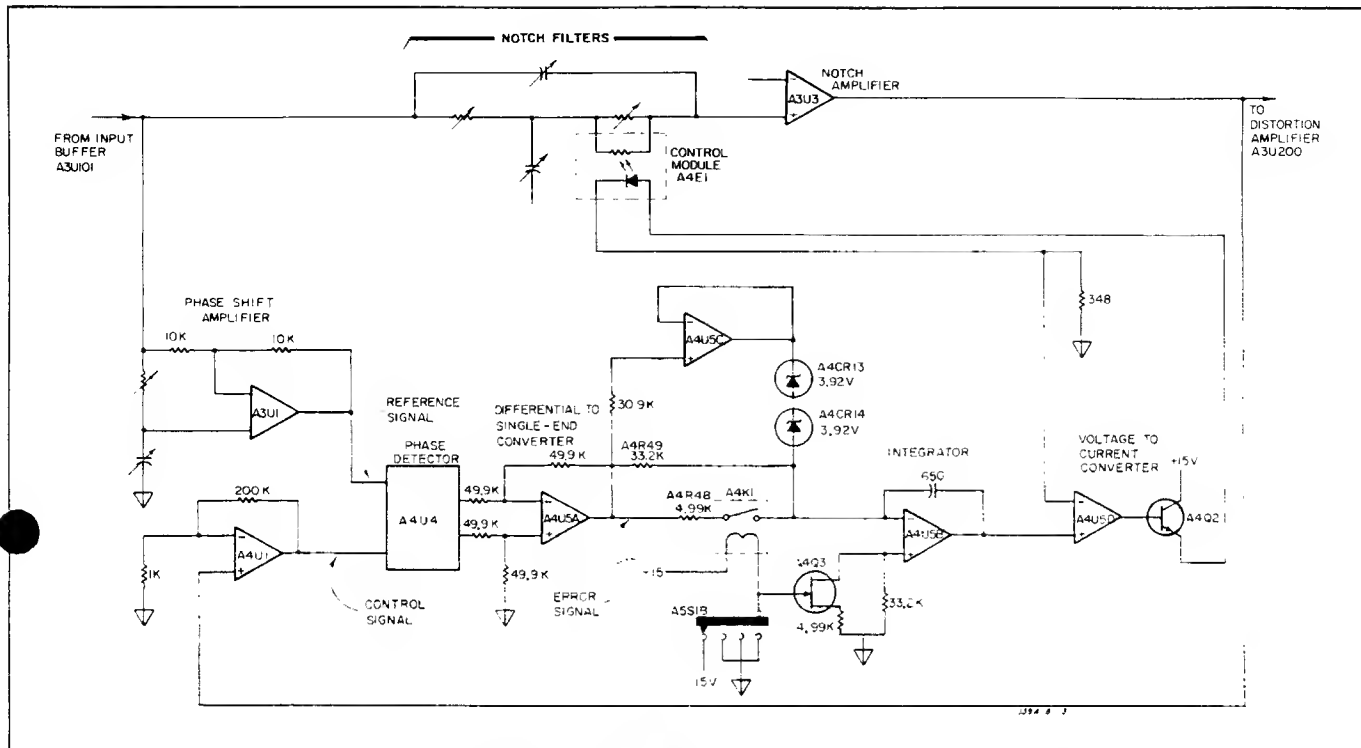


Figure 8-7. Simplified Phase Error Detector Schematic.

capacitors C_{adj} and C_{stray} . C_{adj} is adjusted to be equal to C_{stray} so that $1/2$ of the output of A3U2 (a voltage = V_f) is dropped across each. Since the current necessary to drive the stray capacitance (C_{stray}) is supplied by the neutralizer circuit, the output of the notch filter is not loaded.

8-35. Amplitude Error Detector.

8-36. The purpose of the Amplitude Error Detector is to regulate the amount of "feed-forward" signal required to optimize the depth of the notch filter. Figure 8-6 shows a simplified schematic of the amplitude error detector circuit. The input signal to the notch filter (from input buffer amplifier A3U101) is used as the reference signal for amplitude detector A4U2. The output of the notch amplifier (A3U3) is amplified by A4U1 and is used as the control signal to A4U2. Amplifier A4U1 supplies a gain of 200, which is necessary to achieve "notch depths" in excess of -100 dB. The output of amplitude detector A4U2 is the product of the two input signals. Mathematically, the output of A4U2 (V_o) is equal to the reference signal ($A_1 \cos \omega t$) times the control signal ($A_2 \cos \omega t + \phi$), or $V_o = A_1 A_2 [(\cos \omega t + \phi)]$. By trig identity, this expression is equal to:

$$V_o = 1/2 A_1 A_2 [\cos (2 \omega t + \phi) + \cos \phi].$$

The differential output of A4U2 is converted to a single ended output by A4U3A and applied to the integrator. The integrator (A4U3B) acts as a low-pass filter to the output signal from the amplitude detector and responds only to the low frequency component of the signal. The

error signal is, therefore, effectively equal to:

$$V_o = 1/2 A_1 A_2 \cos \phi \text{ times a constant "K".}$$

Since the notch filter is tuned to the fundamental frequency of the input signal, the phase difference term of the error signal ($\cos \phi$) is equal to 1 ($\cos 0^\circ = 1$). The error signal as seen by the integrator, is therefore a dc voltage equal to:

$$\frac{K (A_1 A_2)}{2}$$

Since the amplitude of the reference signal (A_1) is held constant, any changes in the error signal are caused by the amplitude changes of the control signal (A_2). The error signal to the integrator can therefore be expressed as:

$$V_o = A_2 \left(\frac{K A_1}{2} \right).$$

The output of the integrator is applied to a voltage-to-current converter (A4U3C and A3Q1) which drives amplitude control module A3E2. Control module A3E2 adjusts the gain of notch amplifier A3U3 to provide the proper amount of feed-forward signal necessary to cancel the fundamental frequency at the output of the notch amplifier and therefore reduce the error signal to zero.

8-37. Phase Error Detector.

8-38. The purpose of the Phase Error Detector circuit is to "fine tune" the notch filter to the fundamental frequency of the input signal. The circuit shown in Figure 8-7 is a simplified schematic of the phase detector circuit.

The input signal from input buffer amplifier A3U101 is retarded 90° by phase shift amplifier A3U1 and applied to the input of A4U4 as the reference signal. The output of the notch amplifier (A3U3) is amplified by A4U1 and is used by the phase detector (A4U4) as the control signal. The output of the error detector is equal to the product of the two input signals. Mathematically, the output of A4U4 (V_o) is equal to the reference signal [$A_1 \cos(\omega t - 90^\circ)$] times the control signal ($A_2 \cos \omega t + \phi$) or, $V_o = A_1 A_2 [(\cos \omega t - 90^\circ)(\cos \omega t + \phi)]$. By trig identity, this expression is equal to:

$$[\cos(2\omega t + \phi - 90^\circ) + \cos(\phi + 90^\circ)] \text{ or; } V_o = 1/2 A_1 A_2 [\sin(2\omega t + \phi) - \sin \phi]$$

The differential output of A4U4 is converted to a single-ended output by A4U5A and applied to the integrator. The integrator (A4U5B) acts as a low-pass filter to the output signal from the phase detector and responds only to the low frequency component of the signal. The error signal is, therefore, effectively equal to:

$$V_o = 1/2 A_1 A_2 \sin \phi \text{ times a constant "K"}$$

The amplitude and phase of the reference signal ($A_1 \cos -90^\circ$) is held constant. Therefore, the error signal (V_o) is zero only when the phase difference between the reference signal and control signal is equal to 90° ($\cos 90^\circ = 0$). Since the reference signal has purposely been shifted by 90° , this condition can only occur when the notch filter is perfectly "tuned", resulting in 0° phase shift of the signal through it. The error signal from the output of A4U5A is applied to the input circuit of the integrator. Resistors A4R48 and A4R49 determine the time constant of integrator A4U5B. On the X10 frequency range (10 Hz - 100 Hz) relay A4K1 opens to increase the time constant. The time constant is increased on this range to prevent distortion which might be caused by the phase control circuit at low frequencies. On frequency ranges X100 through X10 K (100 Hz - 110 kHz), relay A4K1 is closed to parallel A4R49 with A4R48 to reduce the time constant. FET switch A4Q3 switches the integrator bias resistance to prevent offsets at the output caused by input imbalance. Amplifier A4U5C and diodes A4CR13 and A4CR14 provide a "fast-charge" path for the integrator when the notch filter is extremely off frequency. In this case, the output of A4U5A exceeds the break-down voltage of A4CR13 or A4CR14 to provide increased charge current to the integrator. As the notch filter approaches the proper frequency, the output of A4U5A no longer exceeds the break-down voltage of A4CR13 or A4CR14 and normal operation resumes. The output of integrator A4U5B is applied to the voltage-to-current converter (A4U5D) and A4Q2) which drives phase control module A3E1. Control module A3E1 changes the resonant frequency of the notch filter.

8-39. Auto Set-Level Circuit.

8-40. The Auto Set-Level circuit automatically adjusts the gain of the distortion analyzer circuitry to provide a

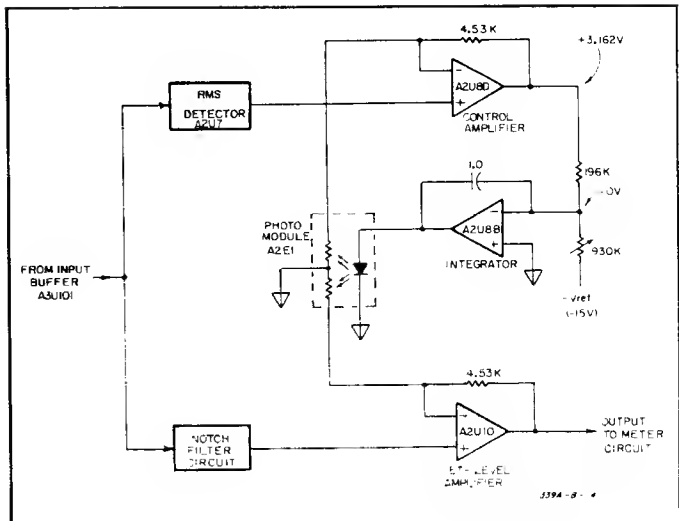


Figure 8-8. Simplified Auto Set-Level Circuit.

full-scale reference level for distortion measurements. Figure 8-8 shows a simplified schematic of the auto setlevel circuit used in the Model 339A. The input signal from amplifier A3U101 is applied to the input of rms detector A2U7. The output of A2U7 is a dc voltage equivalent to the rms value of the input signal. This signal is applied to control amplifier A2U8D whose output is connected to one end of a resistive summing network. The other end of the summing network is referenced to -15 V dc. The output of the summing network is applied to the input of integrator A2U8B which drives photomodule A2E1. Photo-module A2E1 consists of an LED driver and two balanced, photo-sensitive resistors which are part of the gain determining circuits of control amplifier A2U8D and set-level amplifier A2U10. Integrator A2U8B drives the photo-module until the gain of control amplifier A2U8D is such that its output is equal to a full-scale input level (3.162 V dc). At this point, the output of the summing network is zero and the circuit is stable. Since the set-level amplifier and control amplifier circuits are identical, the gain of set-level amplifier A2U10 is equal to that established by control amplifier A2U3D. Therefore, the set-level amplifier amplifies the distortion signal by the amount of gain which would be required to give a full-scale meter reading of the input signal or, the distortion signal is referenced to a full-scale input level.

8-41. Meter Circuits.

8-42. Figure 8-9 shows a simplified schematic of the meter circuitry used in the Model 339A. The voltmeter input shown includes the OSCillator LEVEL, INPUT LEVEL, and RELATIVE LEVEL input functions. The distortion input is the distortion signal from the analyzer circuitry. The input signal to the meter circuitry may be filtered to remove unwanted frequencies and noise. The filters are three-pole active filters and include a 400 Hz high-pass filter and 30 kHz and 80 kHz low-pass filter. The signal from the filter circuits is amplified 40 dB by

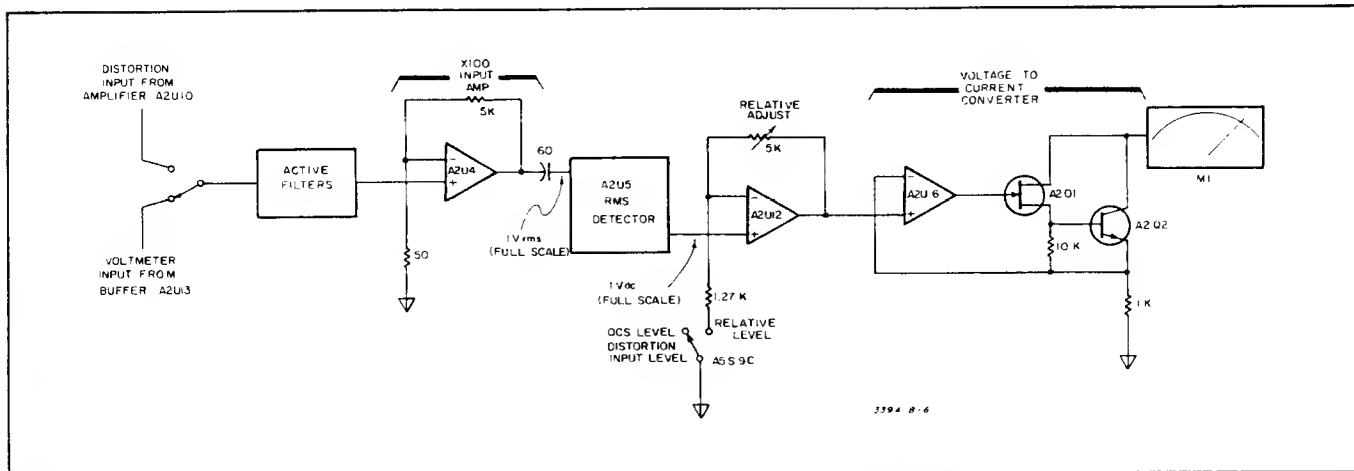


Figure 8-9. Simplified Meter Circuit Schematic.

input amplifier A2U4 to provide a 1 V rms (full-scale) input signal to the RMS detector A2U5. The dc output of the RMS detector is applied to the input of the relative adjust amplifier A2U12 which, in all function except RELATIVE LEVEL, acts as a X1 buffer amplifier. In the RELATIVE LEVEL function, the feed-back path of A2U1 is completed by switch A5S9C to allow the gain of A2U1 to be varied. This permits the user to set a reference level on the meter. The output of the relative adjust amplifier is applied to a voltage-to-current converter (A2U6, A2Q1, and A2Q2) to drive meter M1. Full-scale output current is 1 mA.

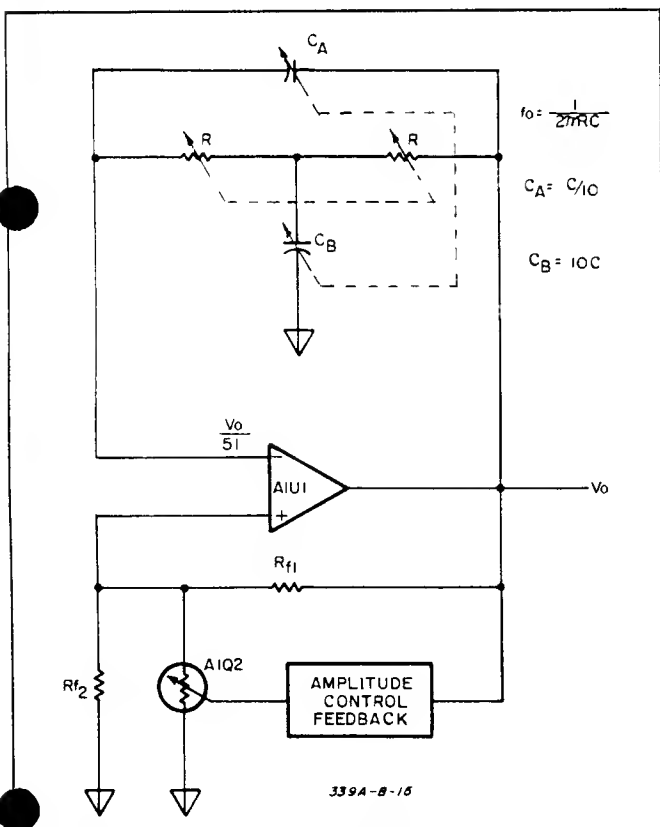


Figure 8-10. Simplified Oscillator Circuit.

8-43. Oscillator Circuit.

8-44. Frequency Generation. Figure 8-10 shows a simplified schematic diagram of the oscillator circuitry used in the Model 339A. The operating frequency of the circuit is determined by a "bridged T" filter network in the negative feed-back path of amplifier A1U1. At resonant frequency, the filter network is at maximum impedance and the negative feed-back to amplifier A1U1 is minimum. The frequency range of the oscillator circuit is determined by the selection of capacitors C_a and C_b while the particular operating frequency is controlled by the selection of resistors R .

8-45. Amplitude Control. The basic oscillator output level is determined by positive feed-back resistors R_{f1} and R_{f2} and is regulated by the amplitude control circuitry shown in Figure 8-11. The purpose of the amplitude control circuitry is to monitor the oscillator output level and derive an error signal to control the gain of amplifier A1U1. The oscillator output is sampled during the positive peaks by the peak detector circuit which stores a charge equal to the peak amplitude of the output signal on capacitor C_h . The charge on C_h is compared to a reference voltage by difference amplifier A1U2A. The output of A1U2A represents the instantaneous amplitude error of the oscillator signal. This signal is applied to integrator A1U2B and through the fast response bypass circuit to summing amplifier A1U2C. The output of the integrator (A1U2B) represents the average or long-term amplitude error while the signal from the fast response bypass circuit represents the amplitude error on a cycle-to-cycle basis. These two signals are added by summing amplifier A1U2C. The resulting output of A1U2C drives control FET A1Q2 which acts as a variable resistor in parallel with feed-back resistor R_{f2} to adjust the gain of oscillator amplifier A1U1.

8-46. Output Buffer and Attenuator. The oscillator signal is applied to the output buffer amplifier (A1U3) through the output LEVEL VERNIER control. The level vernier varies the output level of the buffer amplifier from approximately 6.5 V rms to 1.8 V rms. The output of the buffer amplifier is divided by the output attenuator in 10 dB V steps from 3 V rms full-scale to 3 mV rms full-scale into a 600 ohm load. The attenuator also includes an OFF position which disables the oscillator output and

terminates the OUTPUT terminals with a 600 ohm resistive load. The combination of the output attenuator and level vernier permit the selection of output levels from 1 mV rms to greater-than 3 V rms into 600 ohms. The oscillator output level may be monitored on the meter when the OSCillator LEVEL function is selected. A zener diode protection circuit protects the oscillator circuitry from the accidental application of voltage to the oscillator OUTPUT terminals.











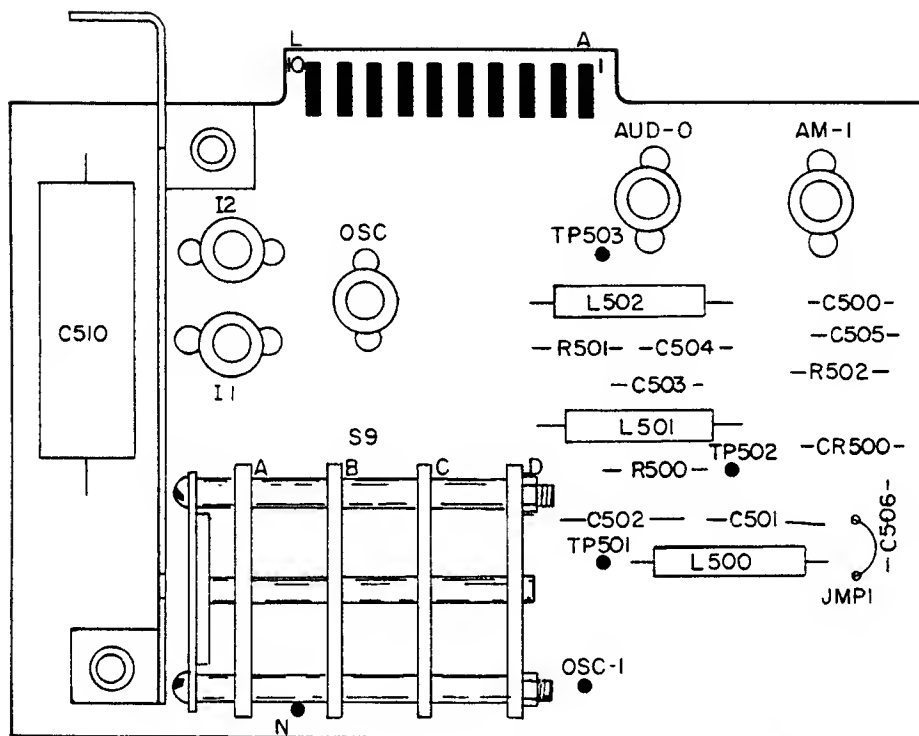


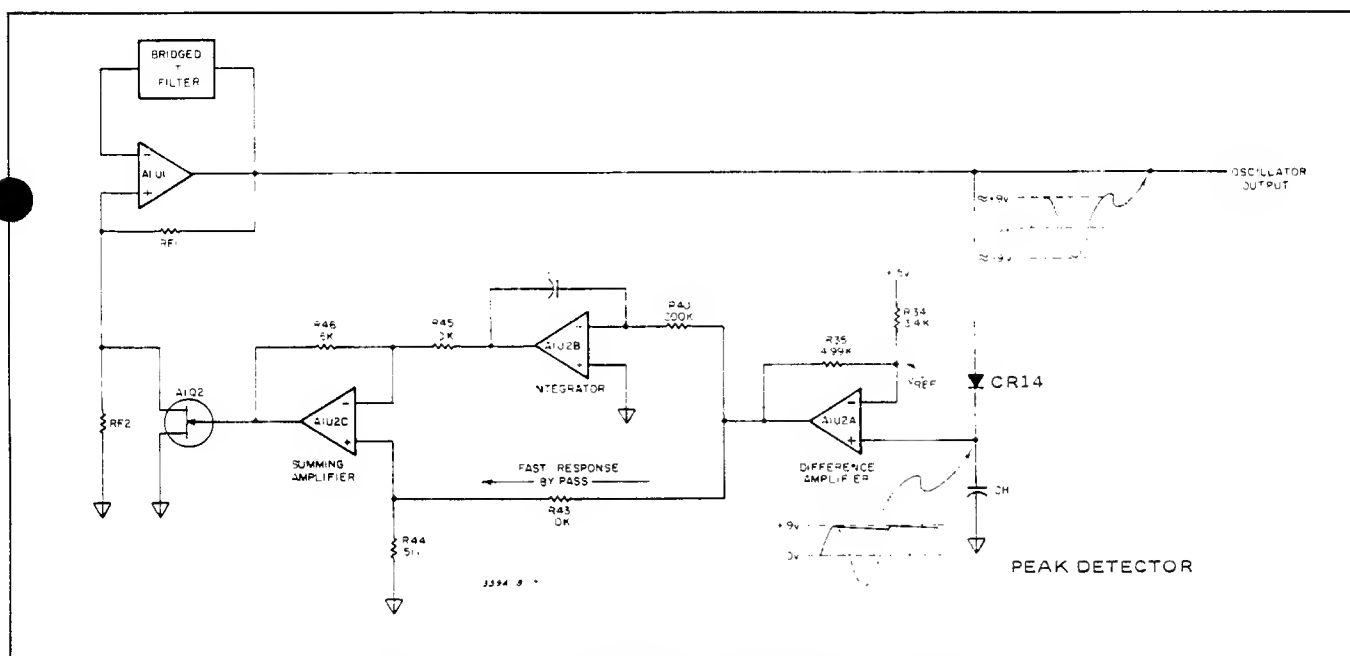Figure 8-11. Simplified Amplitude Control Circuit.



SCHEMATIC DIAGRAM NOTES

1. Partial component reference designations are shown. For complete reference designations, prefix with assembly designation. Example: R1 mounted on circuit assembly A1 becomes A1R1.
2. Unless otherwise noted, all resistance values are in ohms, all capacitance values are in microfarads.
3.  Denotes Earth Ground
4.  Denotes Chassis Ground
5.  Denotes Circuit Ground
6.  Denotes Assembly Borderline
7.  Denotes Main Signal Path
8.  Denotes Feedback Path
9.  Denotes Mechanical Connection
10.  Denotes Screwdriver Adjustment
11. * Denotes Factory Selected Component
Average Value shown on schematic
12. 947 Indicates wire colors. Color code same as resistors. For example, 947 indicates white base, yellow wide stripe, and violet narrow stripe
13.  Indicates numbered Test Point



339A-B-B

A5
00339-66505
Rev. B

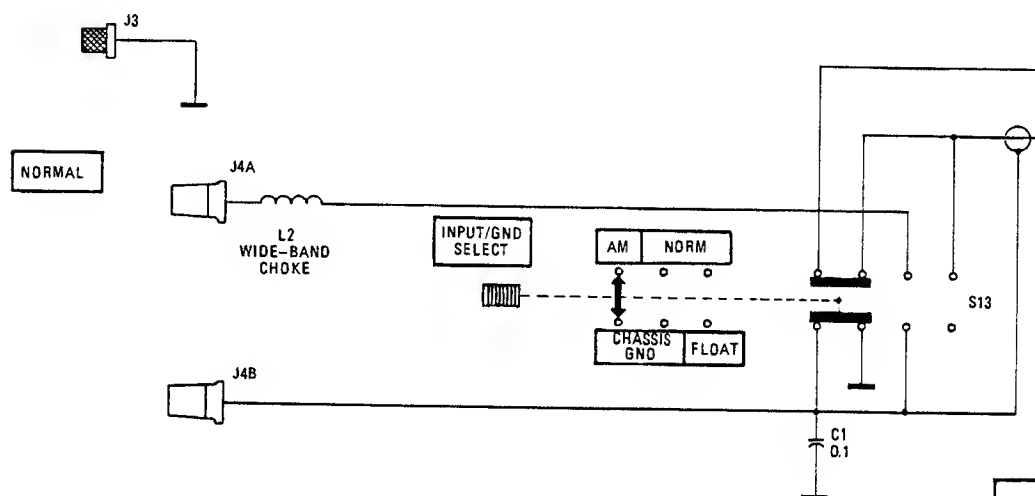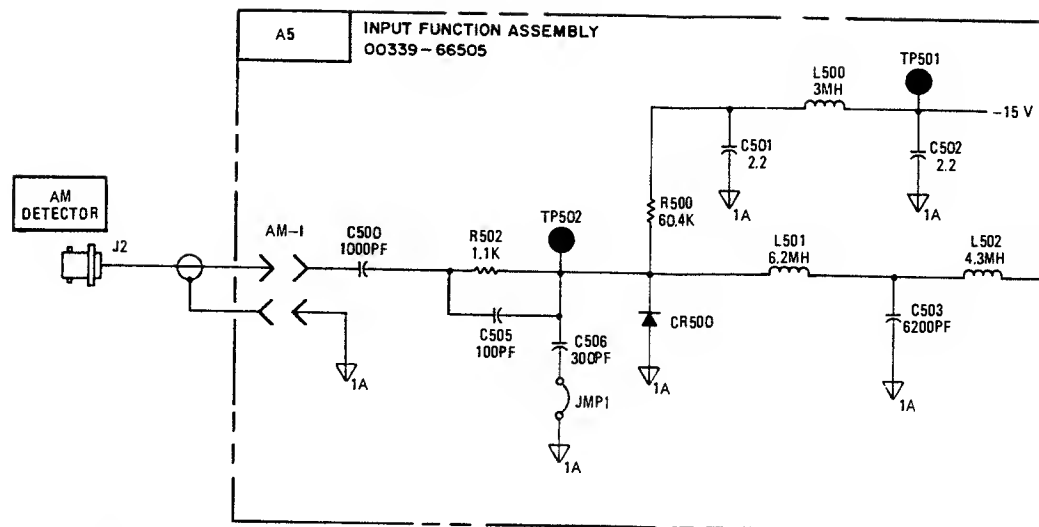


The diagram illustrates the internal wiring of the front panel for a 100 MHz spectrum analyzer. Key components and connections include:

- Power and Grounding:** A -15V supply is shown at the top left. Ground points are labeled 1A, 1, and 1A.
- TP503:** A test point located near the top left.
- Resistors and Capacitors:** C504 (1500PF) and R501 (1K) are shown in the top left. C510 (1.5K) is located in the upper right.
- Switches:**
 - AUD-D:** A switch in the top left.
 - S9A, S9B, S9C, S9D:** Multi-throw switches in the center.
 - LI-D:** A switch on the right side.
 - Filter Switch S11:** Located at the bottom right.
- Connectors and Joints:**
 - P/O J203:** A connector on the left side.
 - P/O P203:** A connector on the right side.
 - P/O J203:** A connector at the bottom right.
- Labels and Connections:**
 - FROM A1J5:** Input signal source.
 - OSC:** Oscilloscope output.
 - TO A3J100:** Output connection at the top right.
 - TO OS3 & OS4:** Output connection on the right.
 - TO A2U12:** Output connection on the right.
 - TO FILTER SWITCH S11:** Output connection on the right.
 - TO A1K1:** Output connection on the right.
 - TO A2K1:** Output connection on the right.
 - TO A2U8A & A2U9:** Output connection at the bottom right.
- FUNCTION:** A control knob with settings for OSC LEVEL, DISTORTION, INPUT LEVEL, and REL LEVEL.

Copyright 1977 by Hewlett-Packard Company.


Figure 8-12. AM Detector and Input Switching.
8-11/8-12

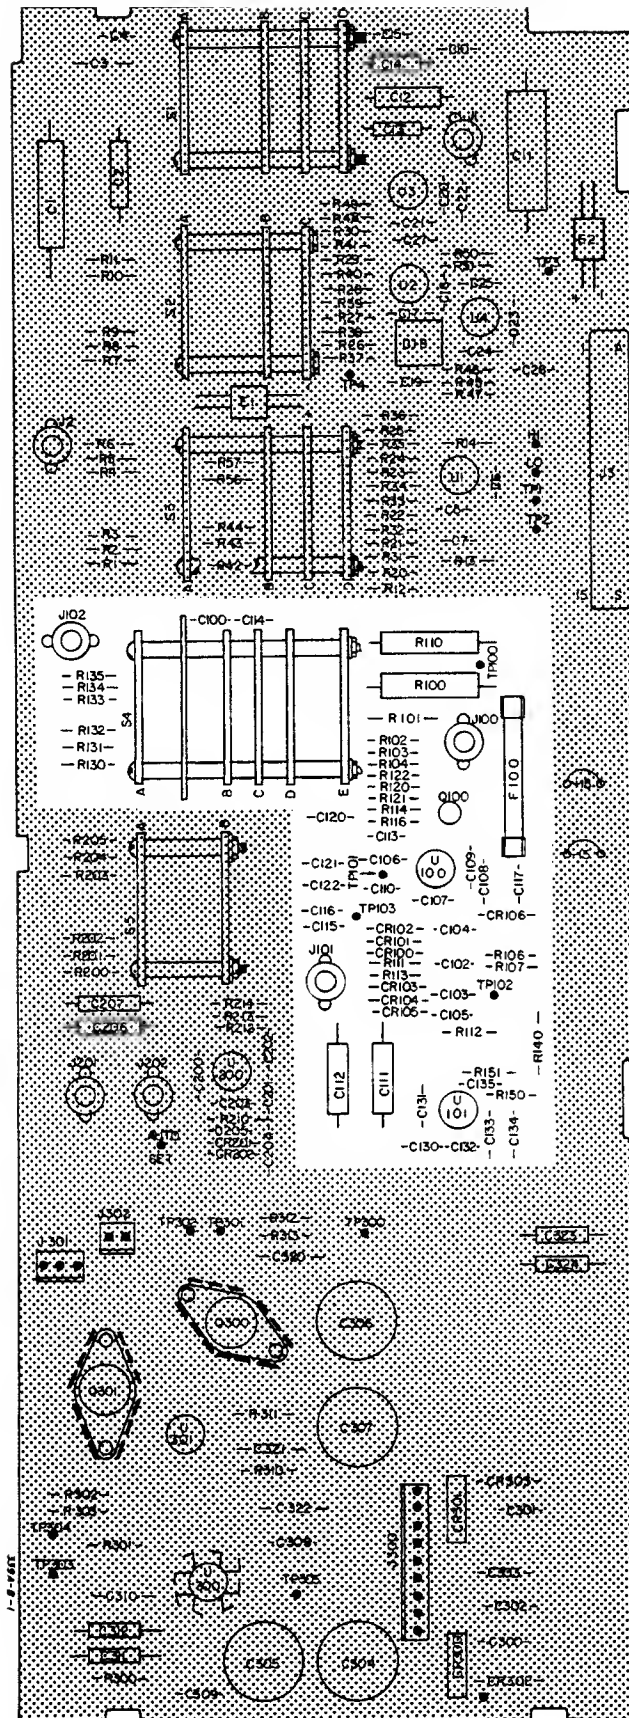



ΔA CAPACITOR A3C132 HAS BEEN CHAN
COMPONENT TO COMPENSATE FOR GA
FERENCES. IN AMPLIFIER A3U101 CAP,
FROM 4.7 pF TO 15 pF.

A3
00339-66503
Rev. B


ΔA CAPACITOR A3C132 HAS BEEN CHANGED TO A SELECTED COMPONENT TO COMPENSATE FOR GAIN BANDWIDTH DIFFERENCES. IN AMPLIFIER A3U101 CAPACITANCE RANGE IS FROM 4.7 pF TO 15 pF.

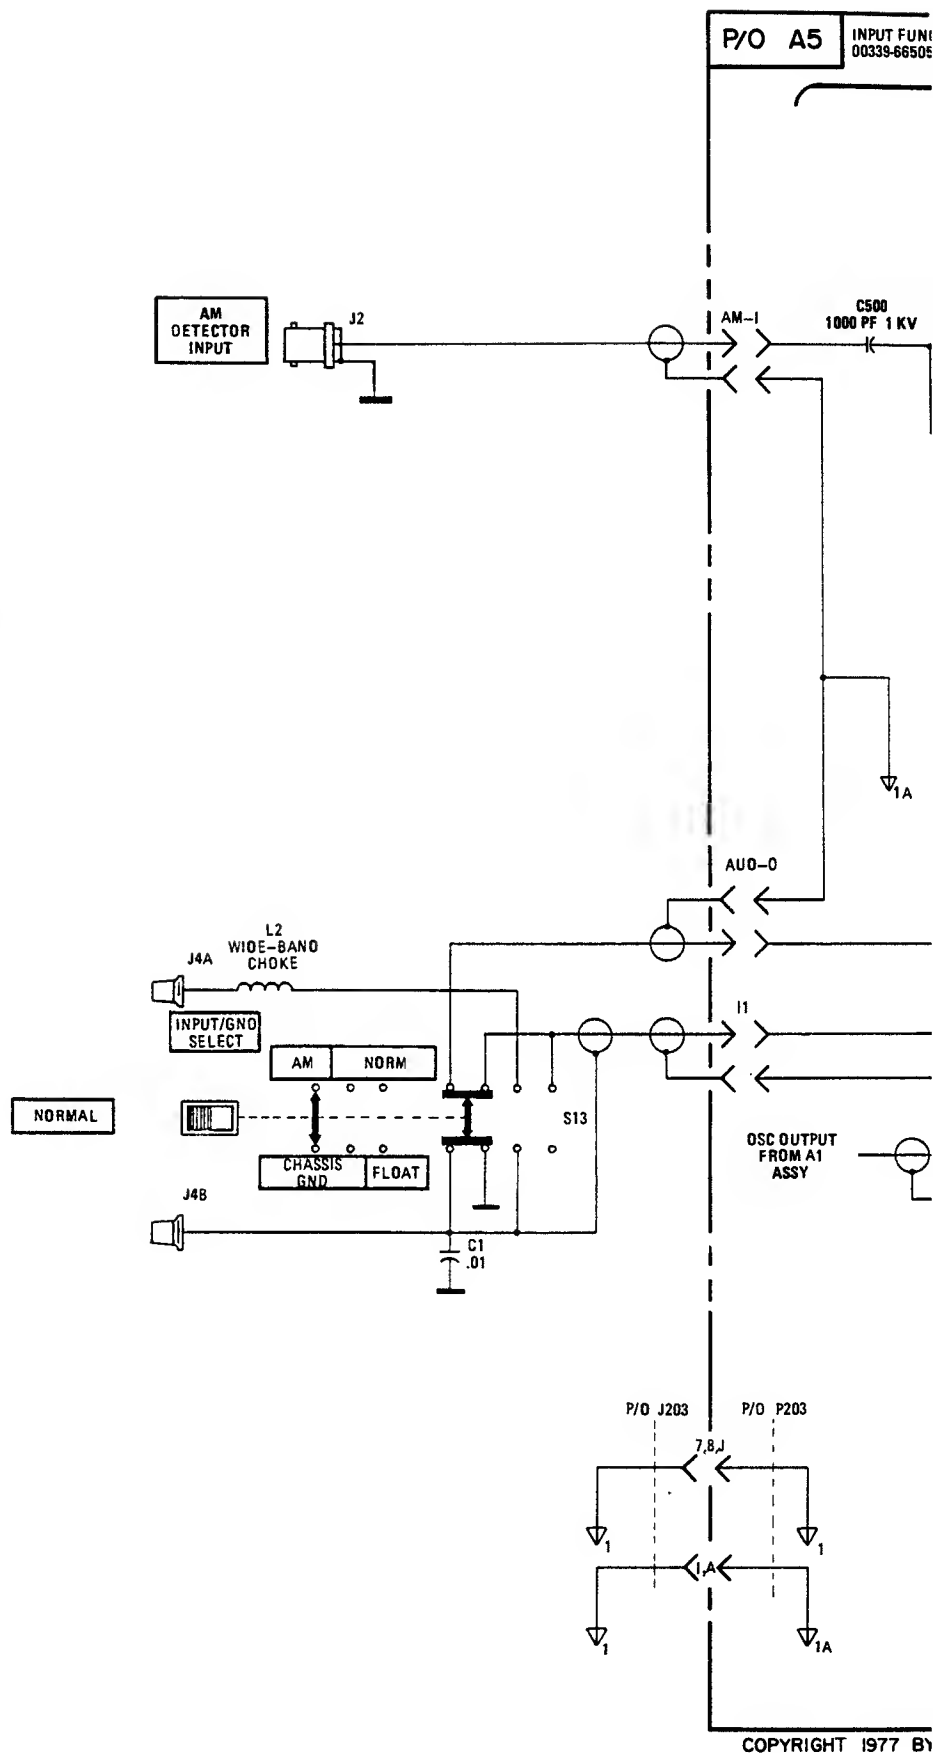


AM DETECTOR

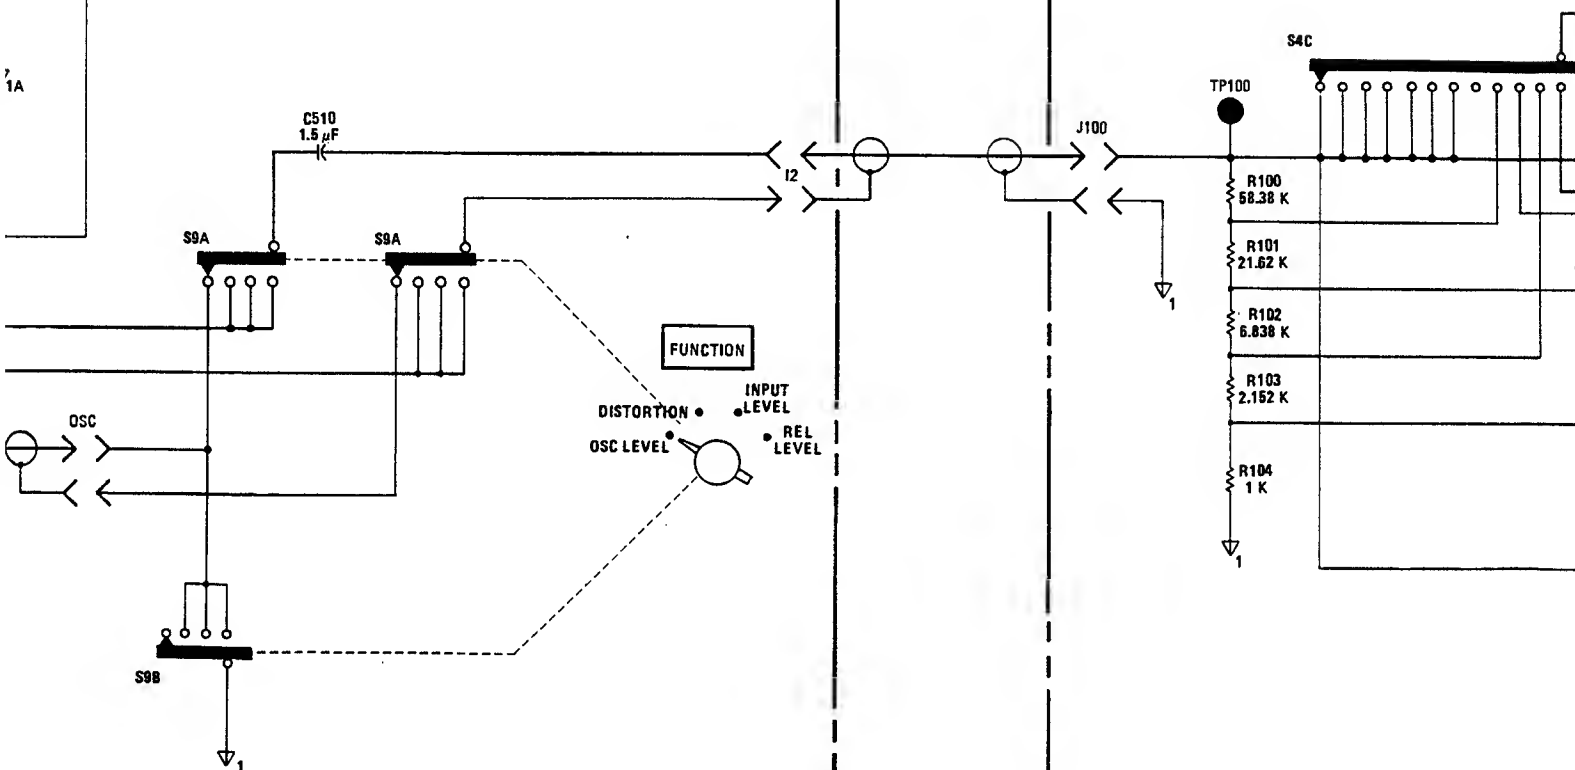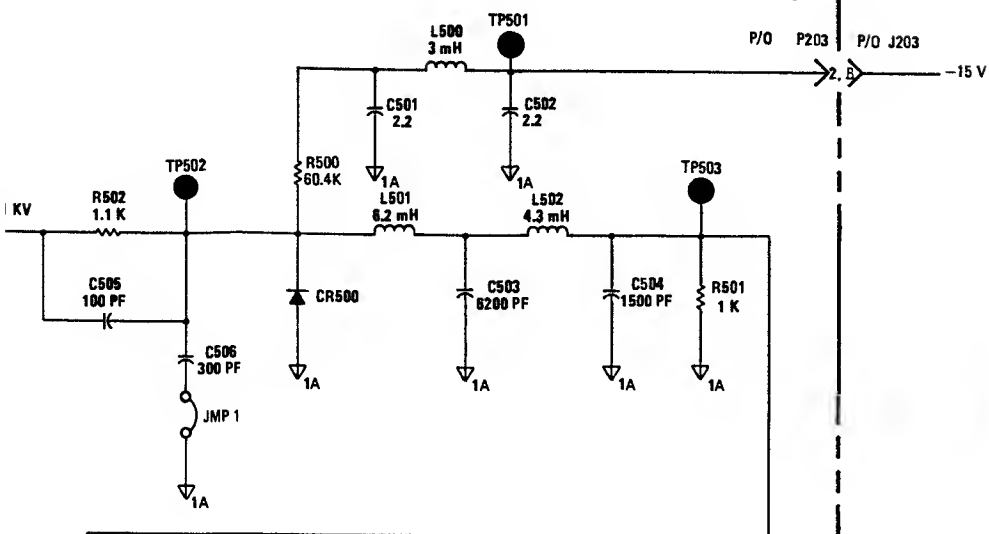

BY HEWLETT PACKARD COMPANY

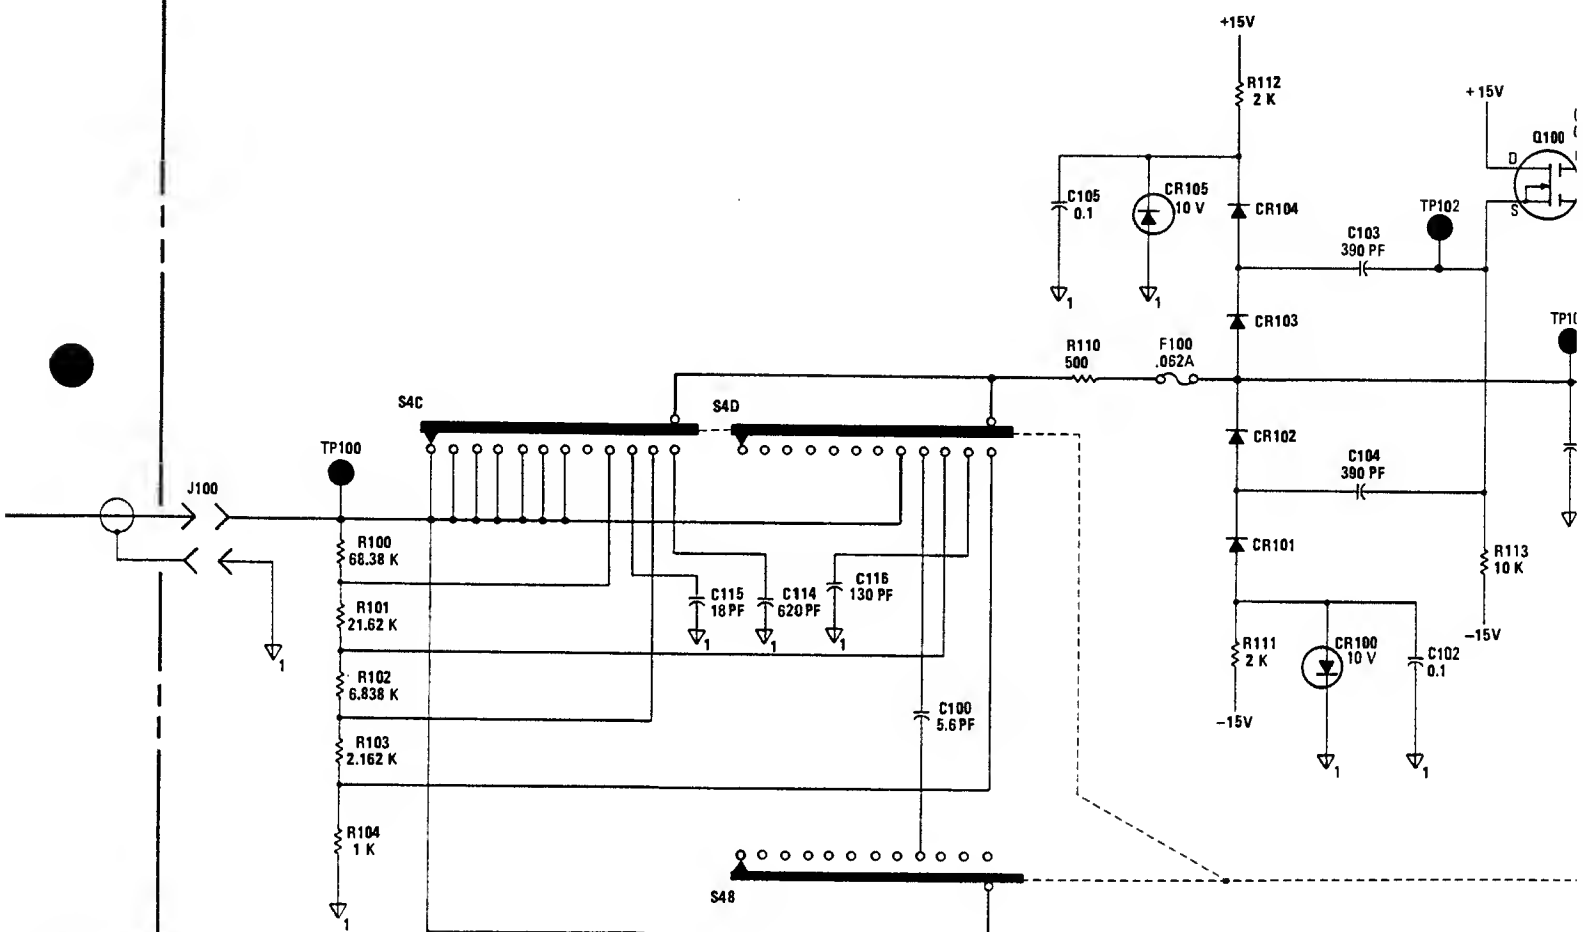

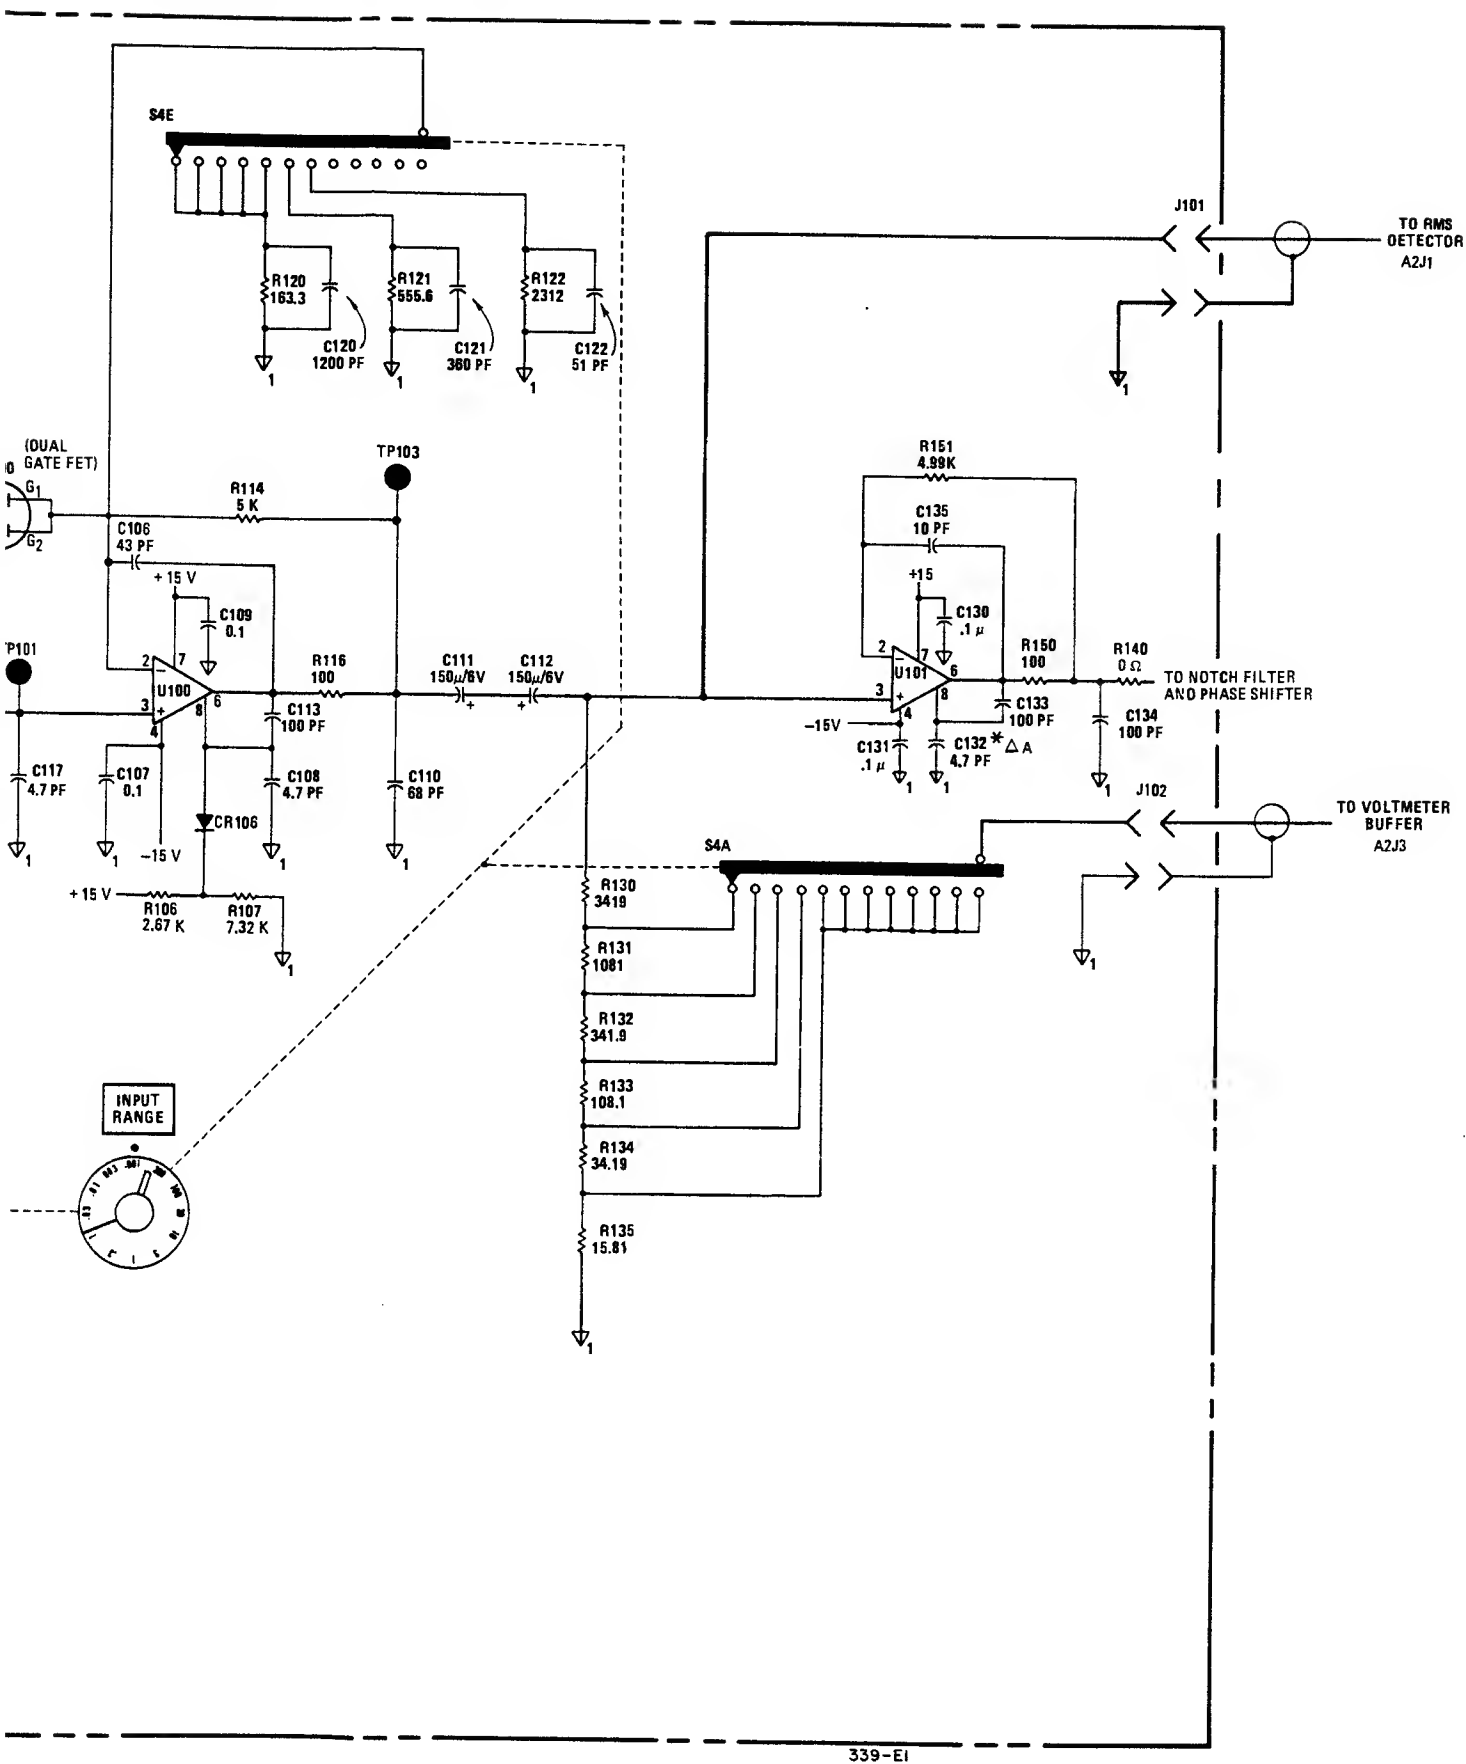

339-EI

Figure 8-13. Input Attenuator and Input Amplifier.
8-13/8-14

P/O A3


ANALYZER/POWER SUPPLY ASSEMBLY
00339-66503

NOTCH FILTER

FROM
BUFFER AMPLIFIER
A3U101


UNITS

TENTH

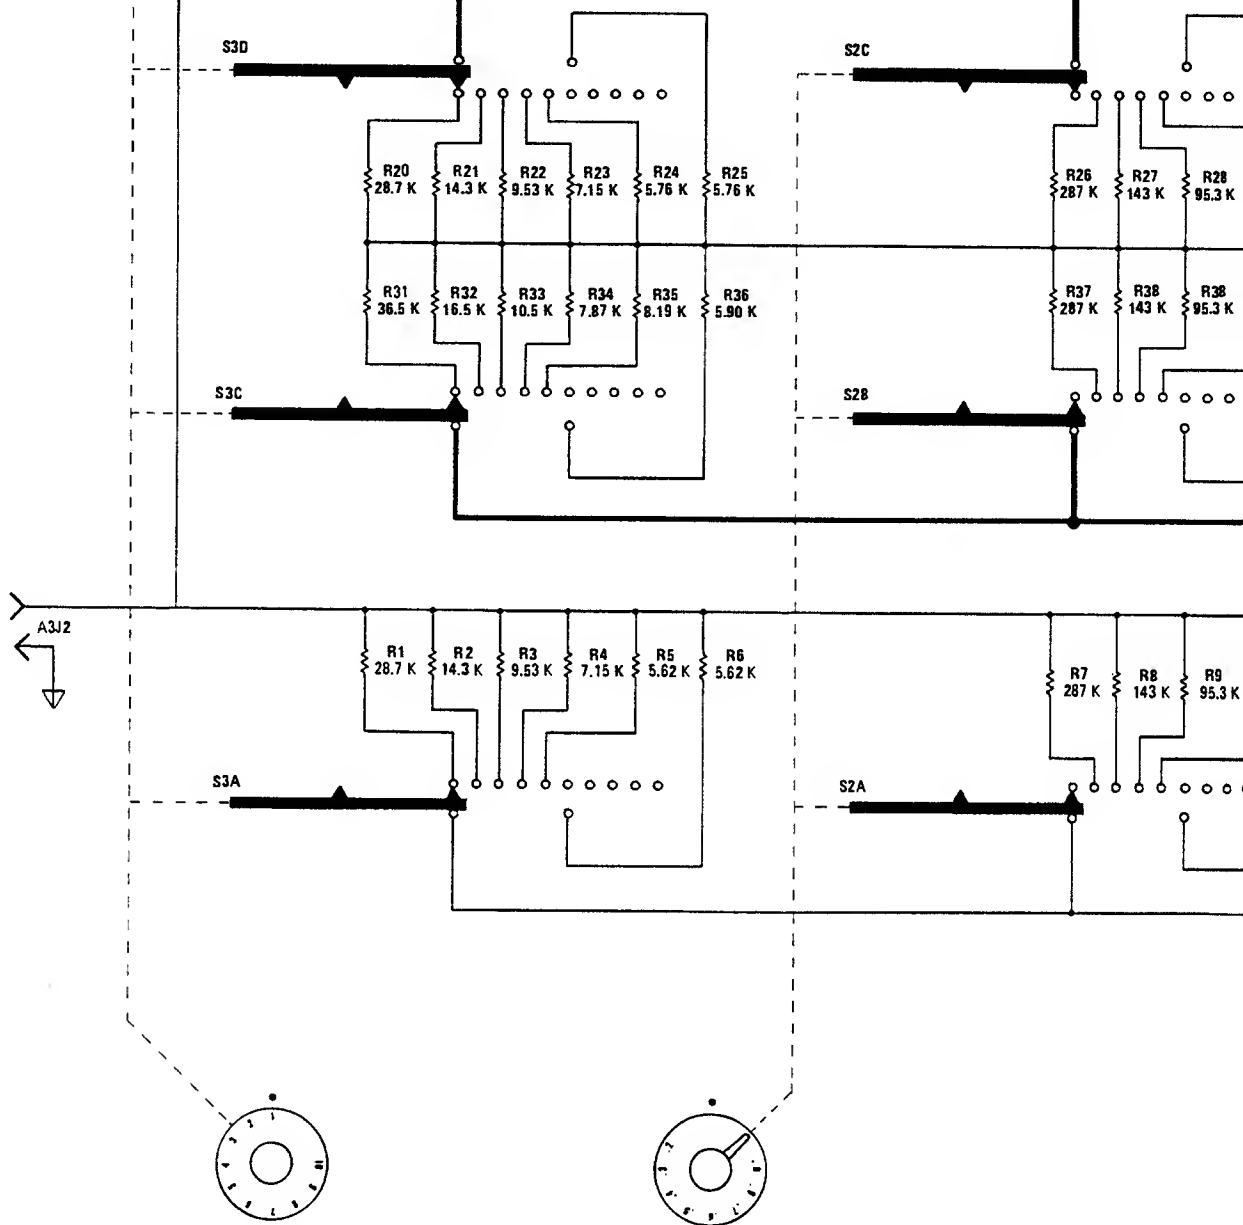


FREQUENCY


HS

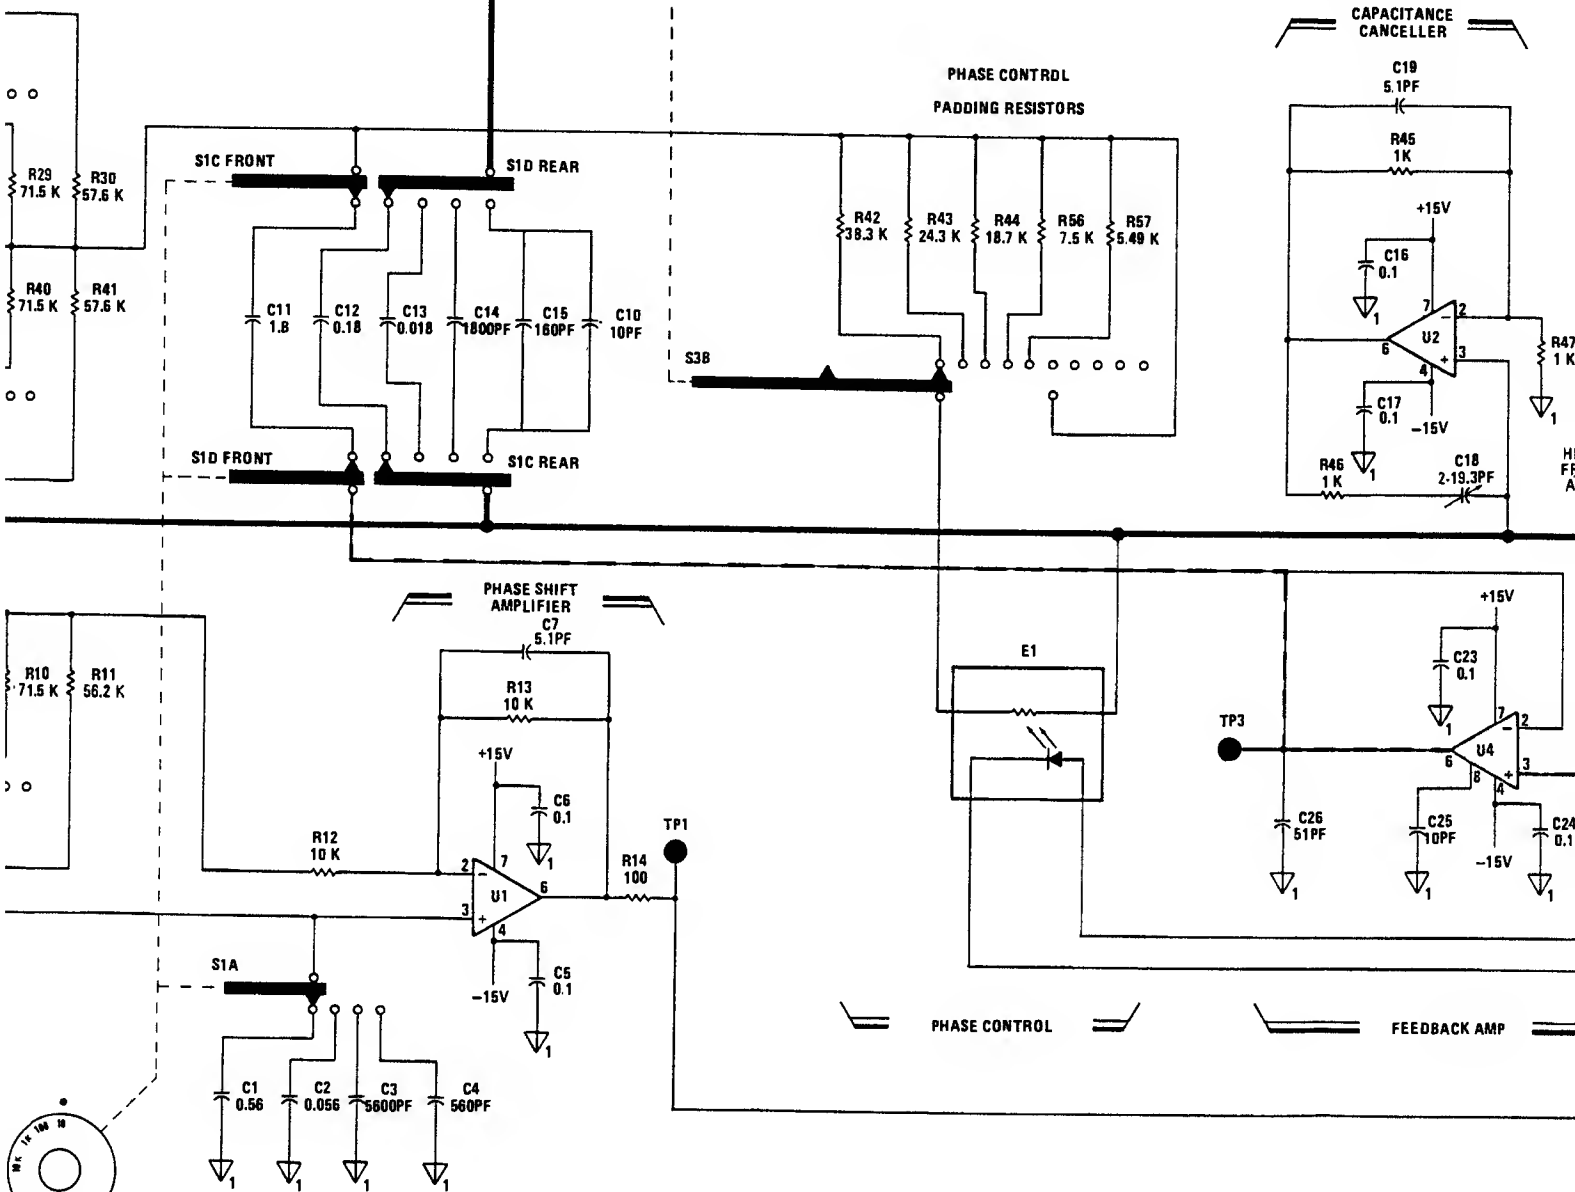


PHASE CONTROL

FEEDBACK AMP

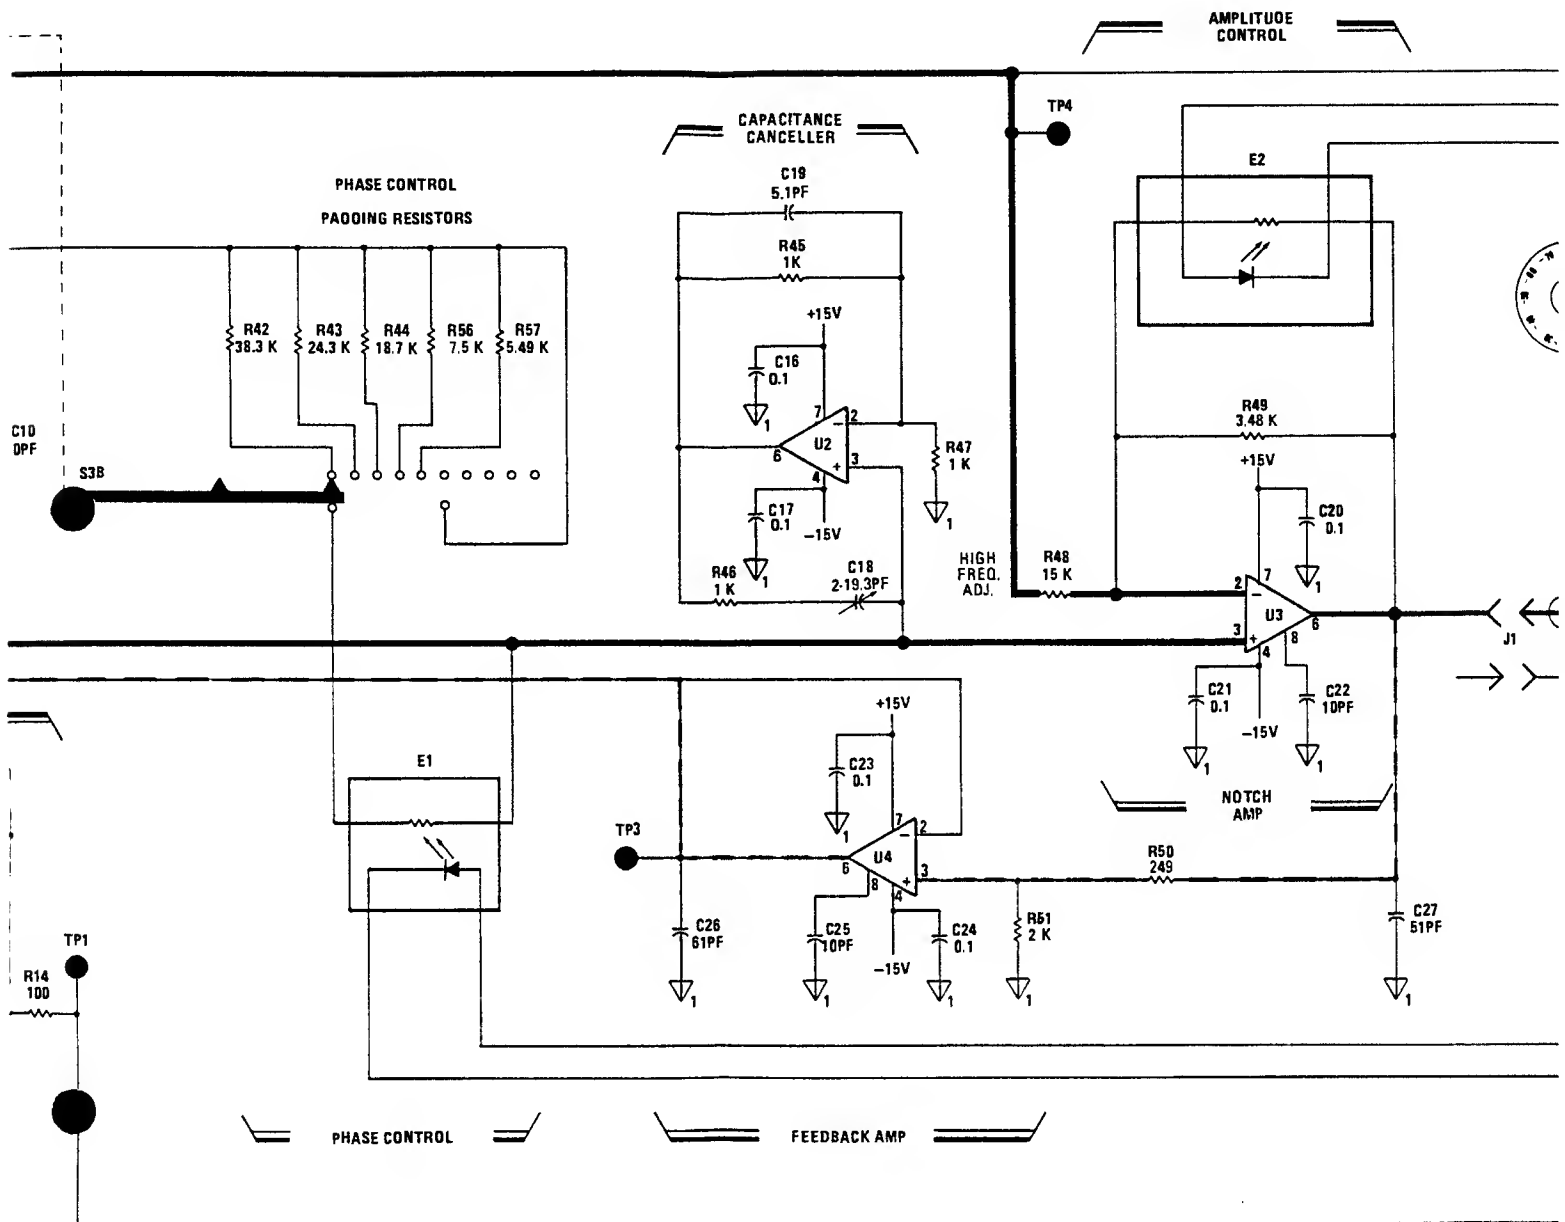


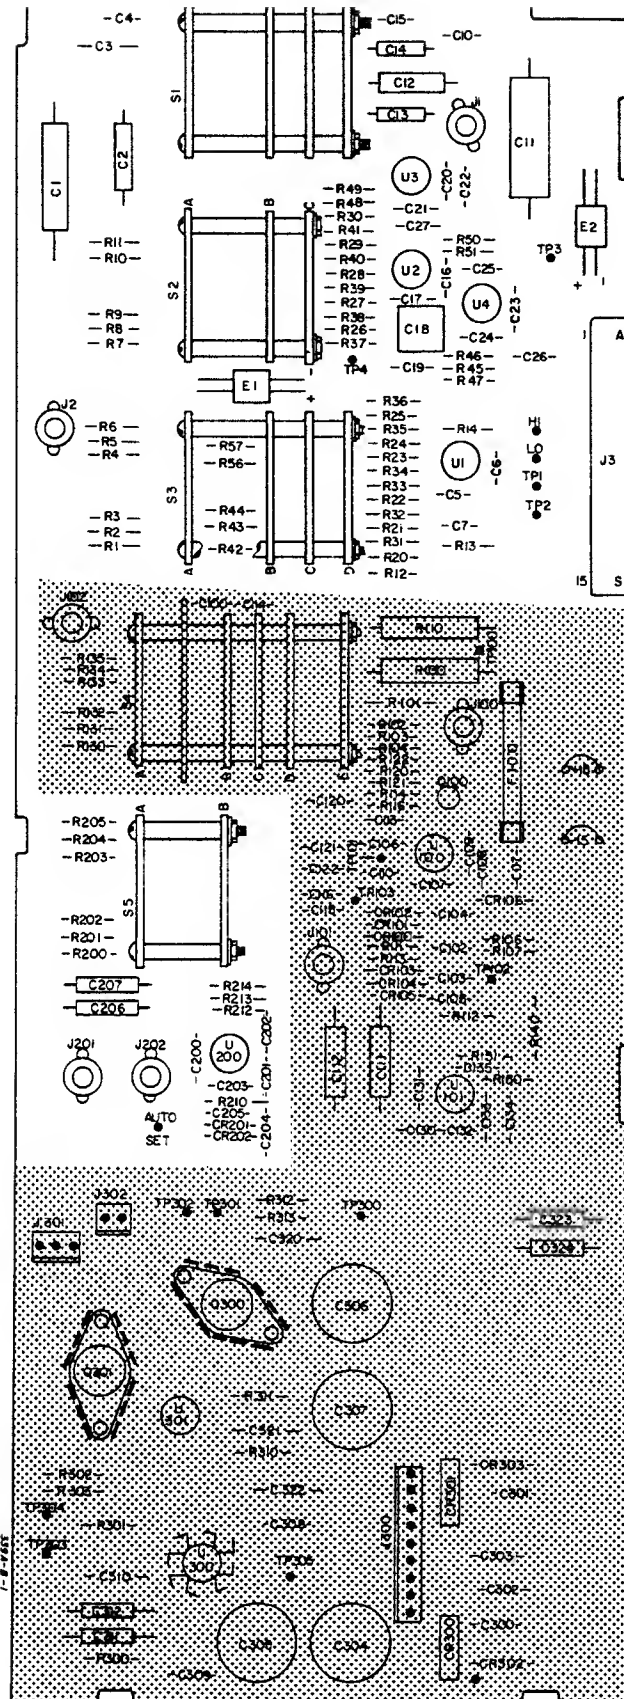


A3
00339-66503
Rev. B

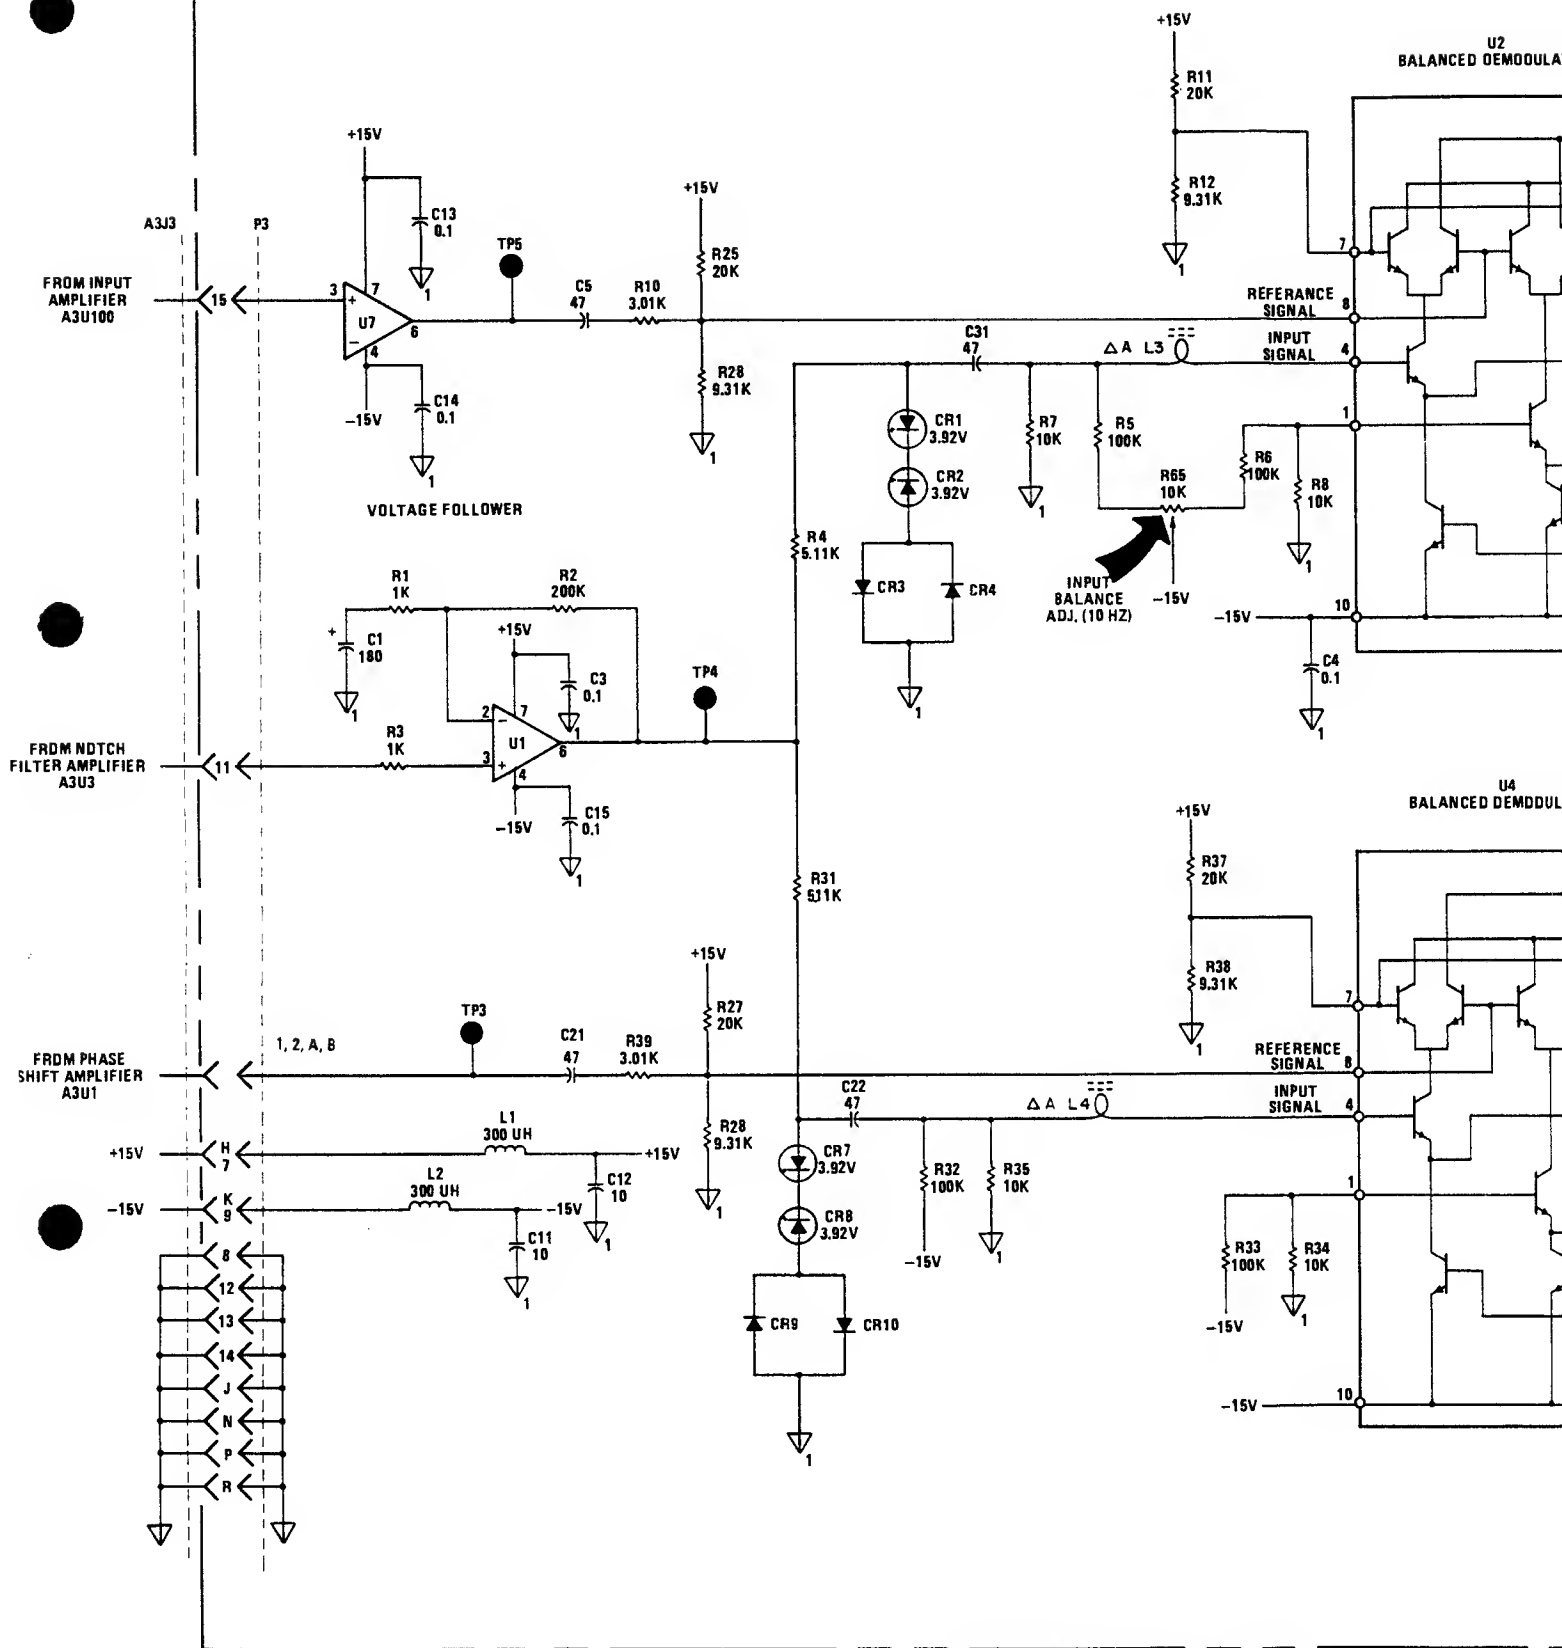


ULATOR

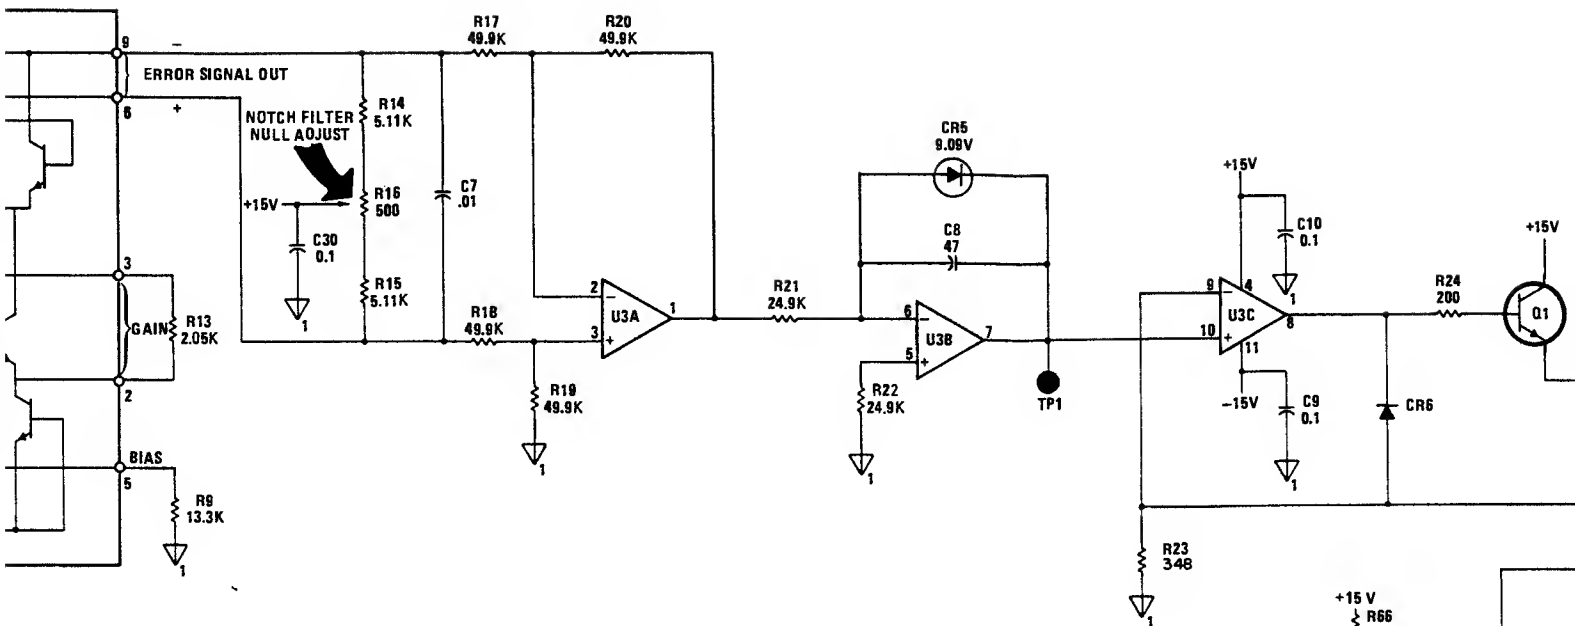

ULATOR

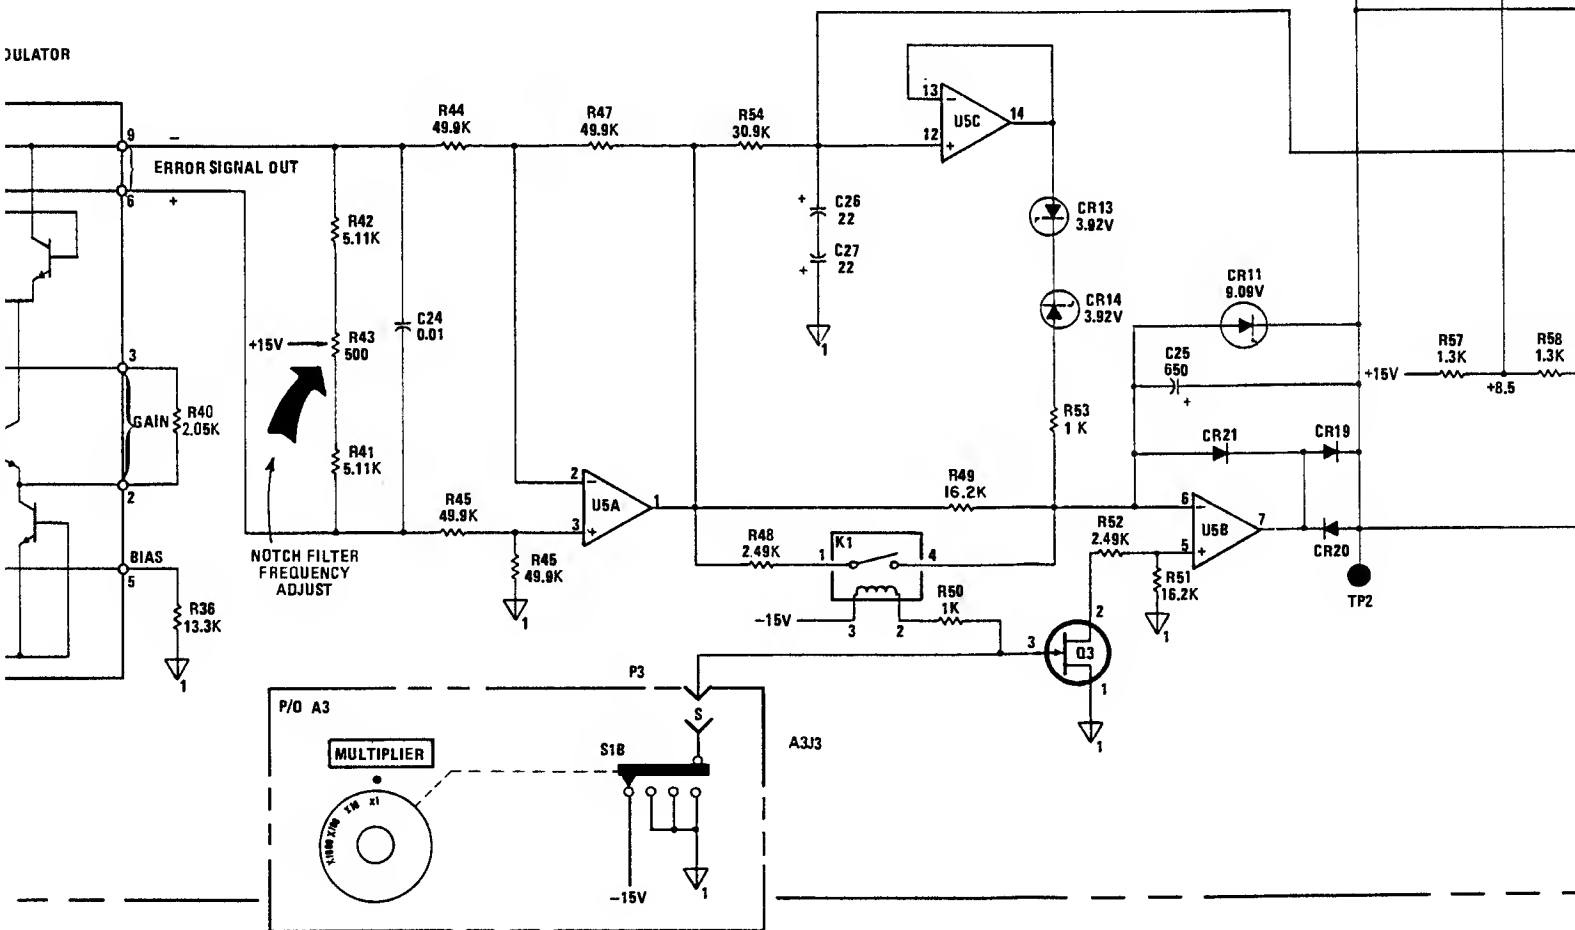

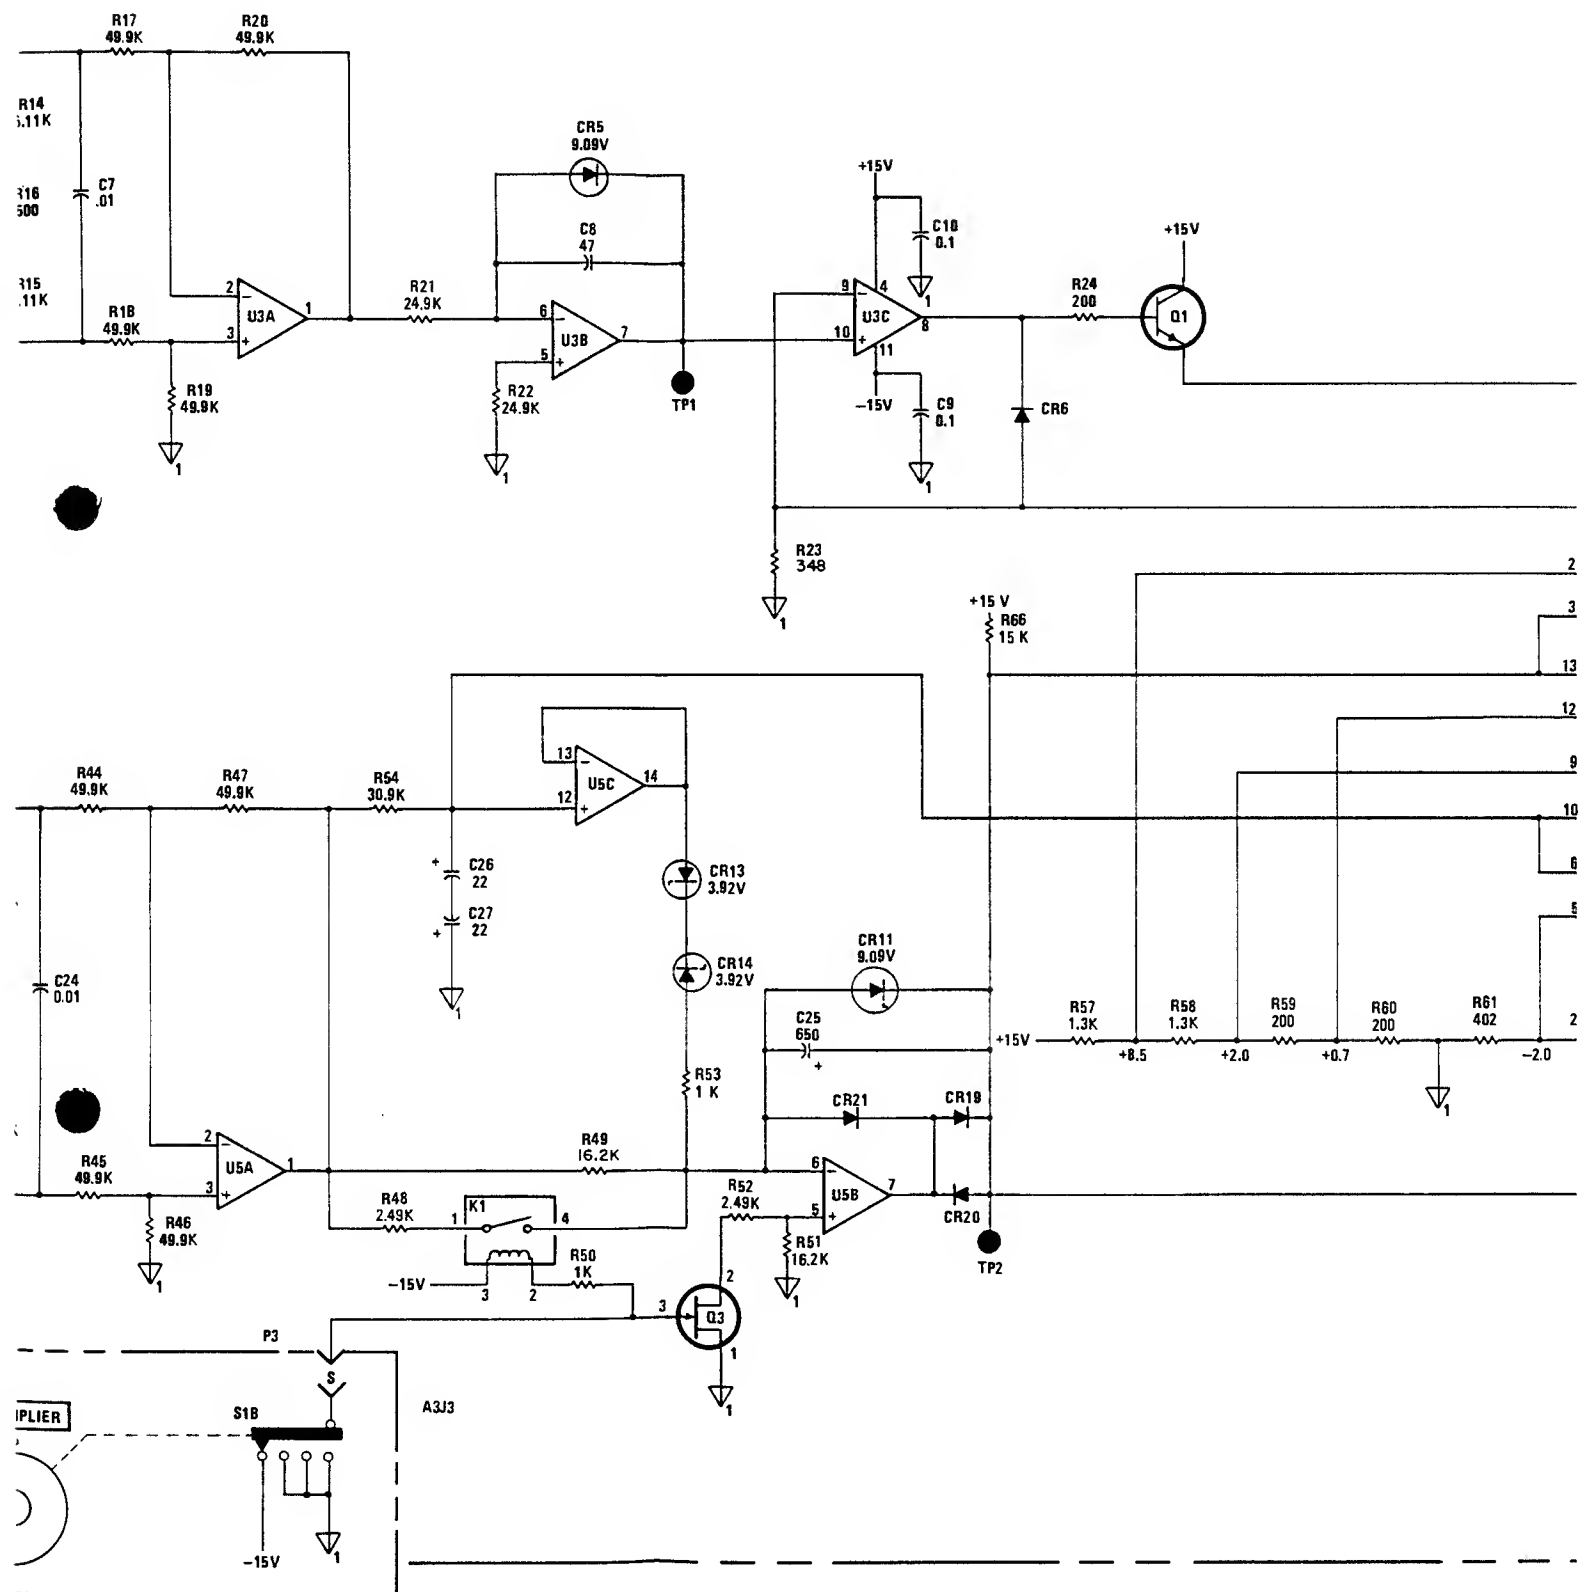



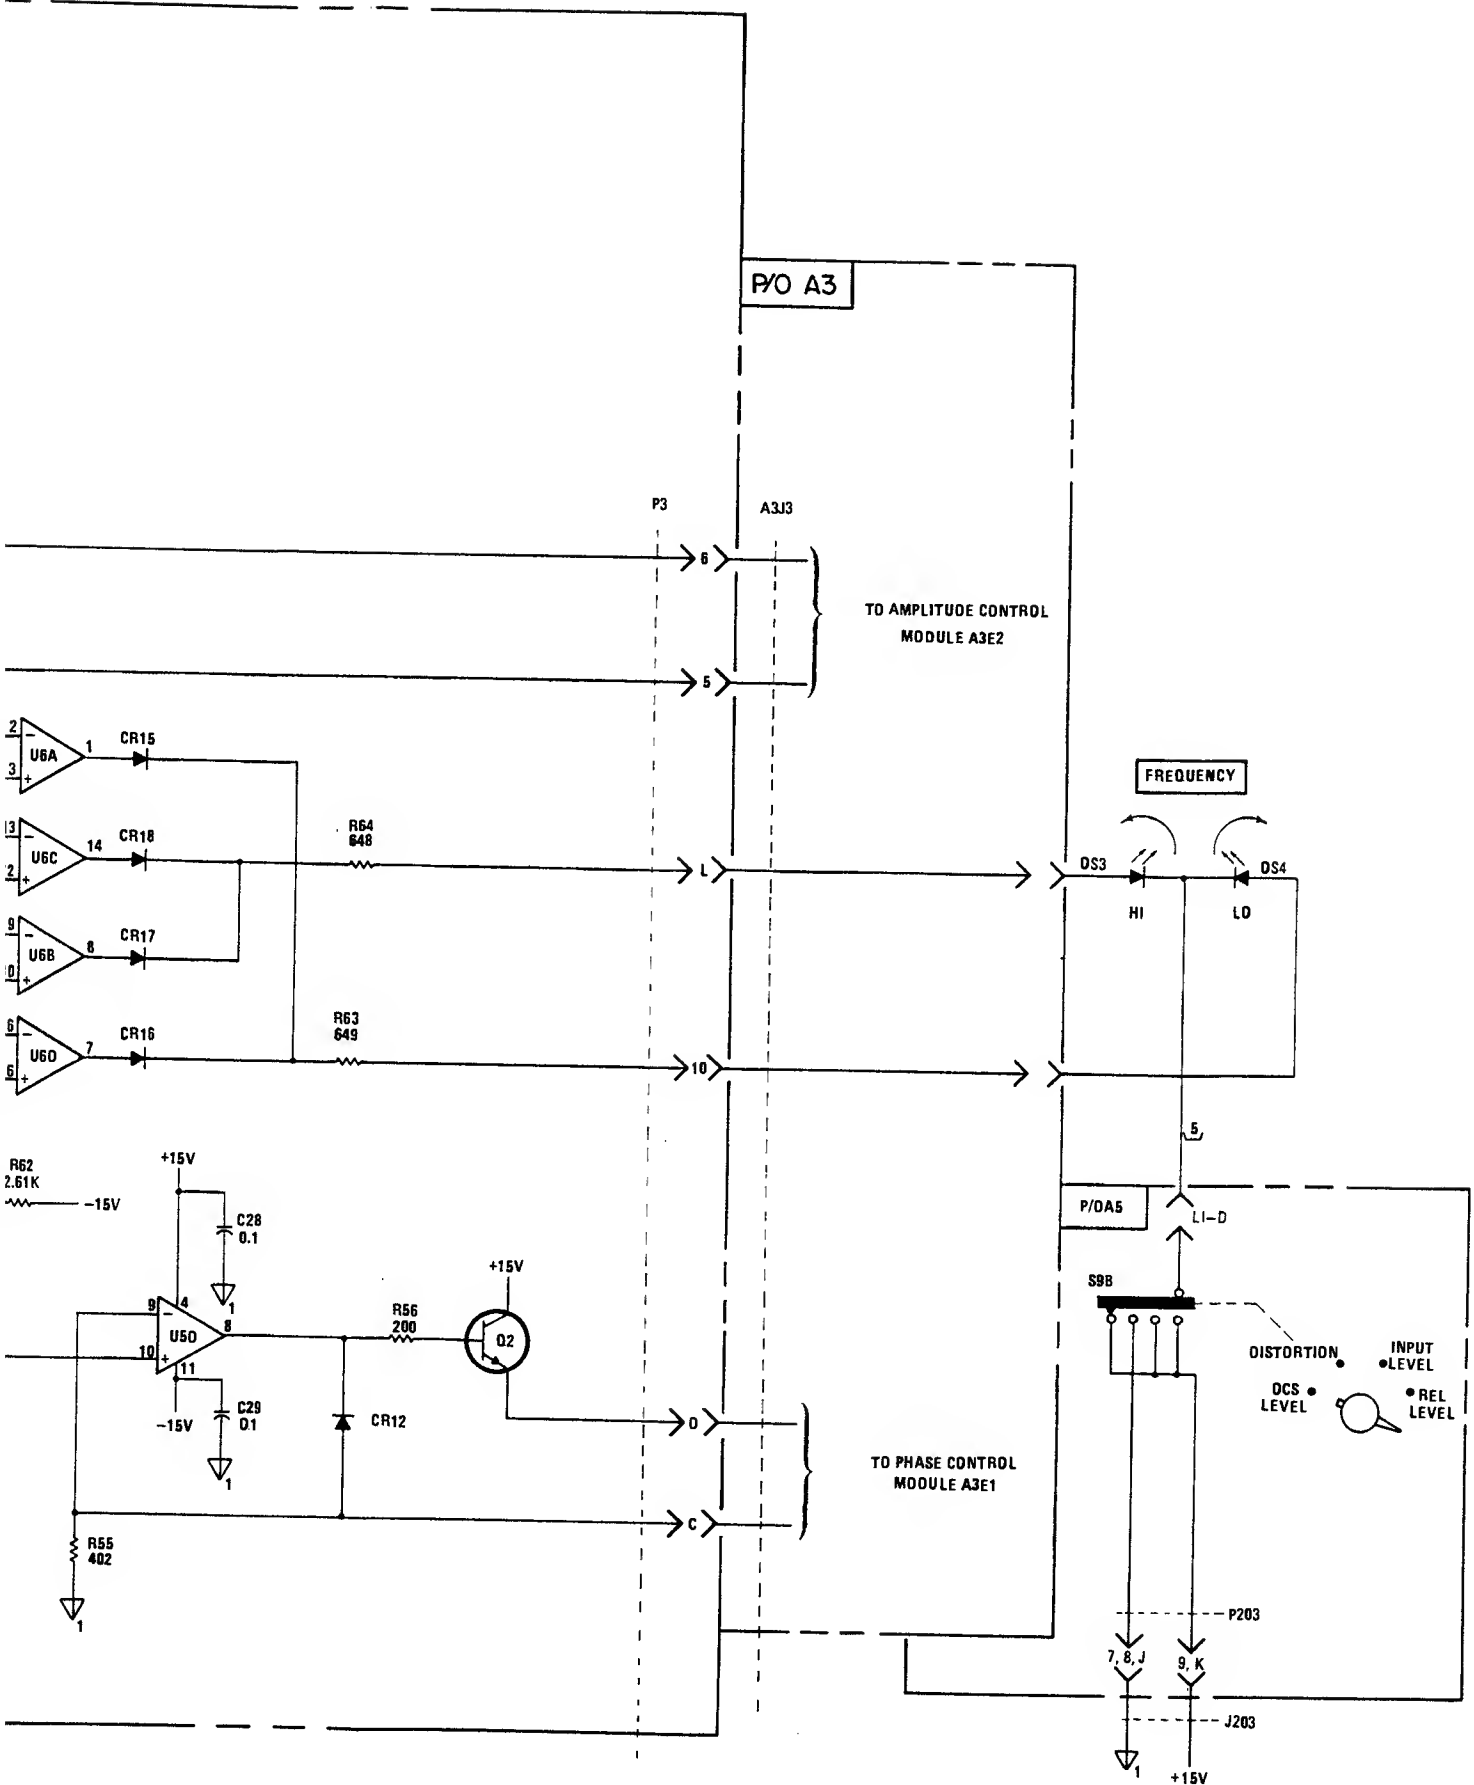


Figure 8-15. Error Detector Circuits.
8-17

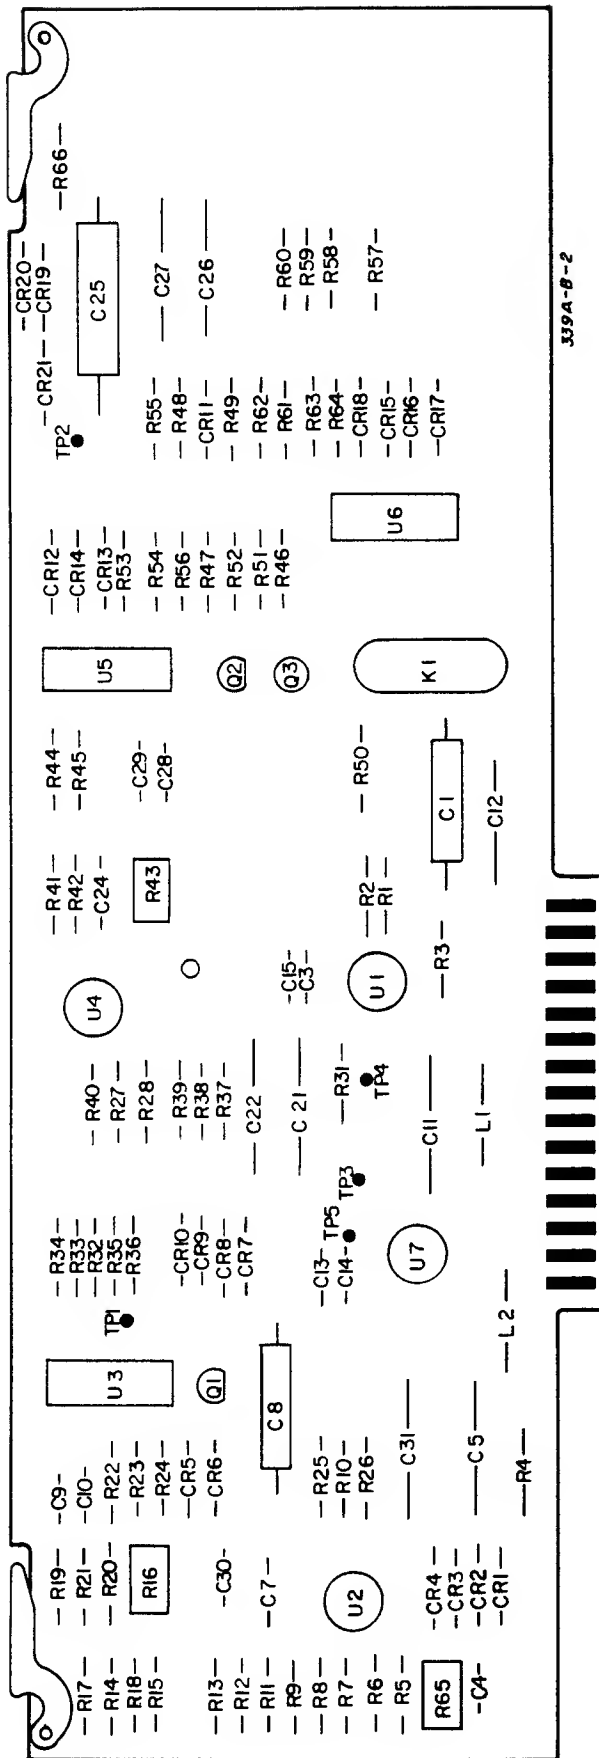

ΔΔ FERRITE BEADS (L3 & L4) HAVE BEEN ADDED TO PIN 4 OF U2 AND U4 TO PREVENT HIGH FREQUENCY OSCILLATIONS (APPROXIMATELY 300 MHz).


A4
00339 68504
Rev. C

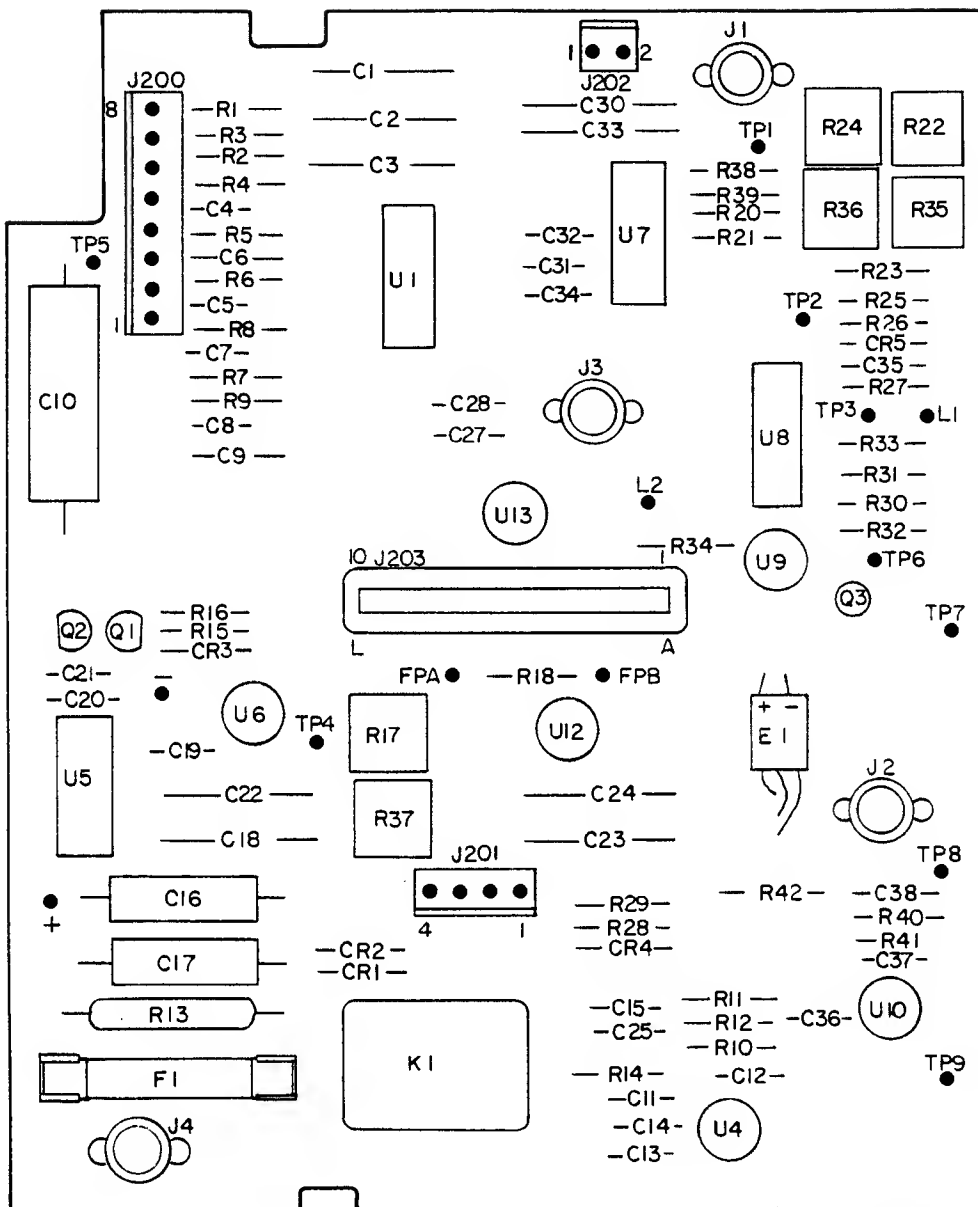


339A-B-4

A2
00339-66502
Rev. A

AUTO SET LEVEL

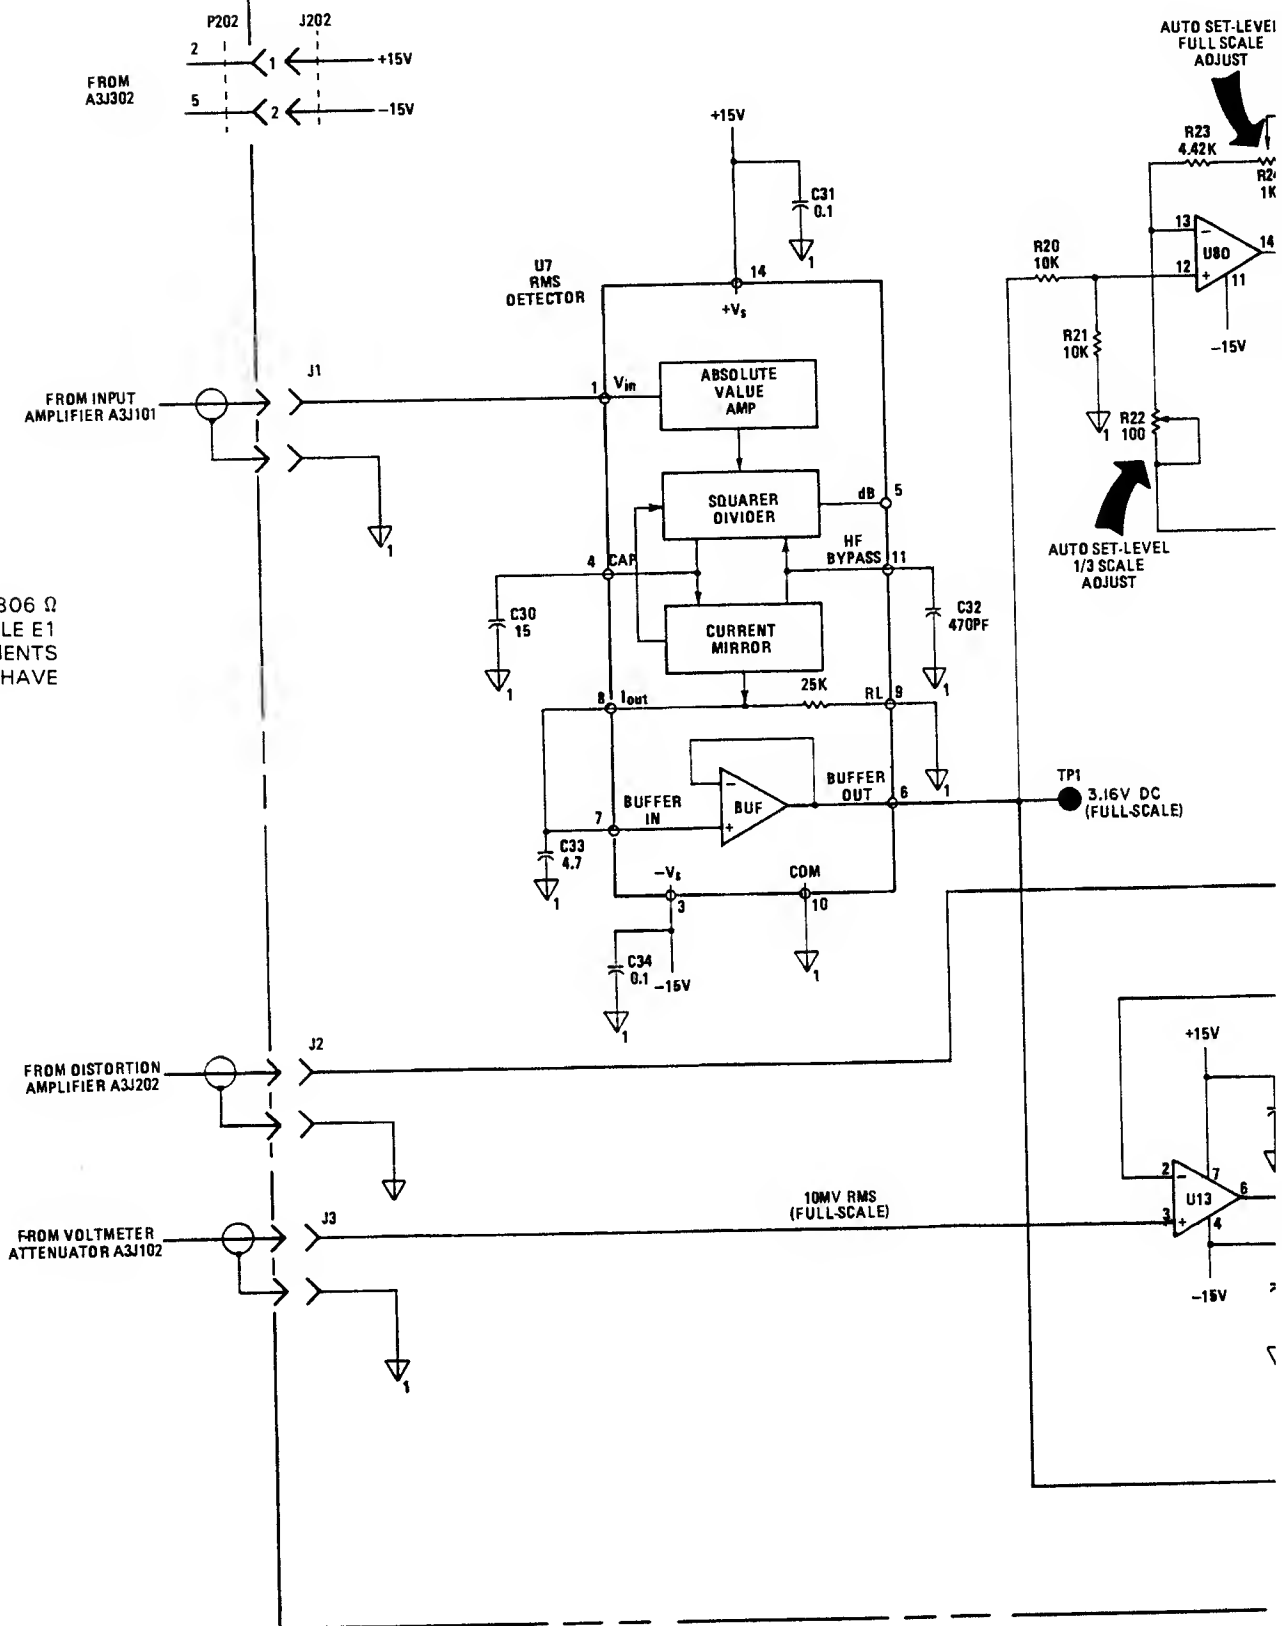

CHANGED FROM 1 k Ω to 806 Ω
DRIVE FOR PHOTO MODULE E1
CONDITIONS. INSTRUMENTS
0A00196 AND GREATER HAVE
D.

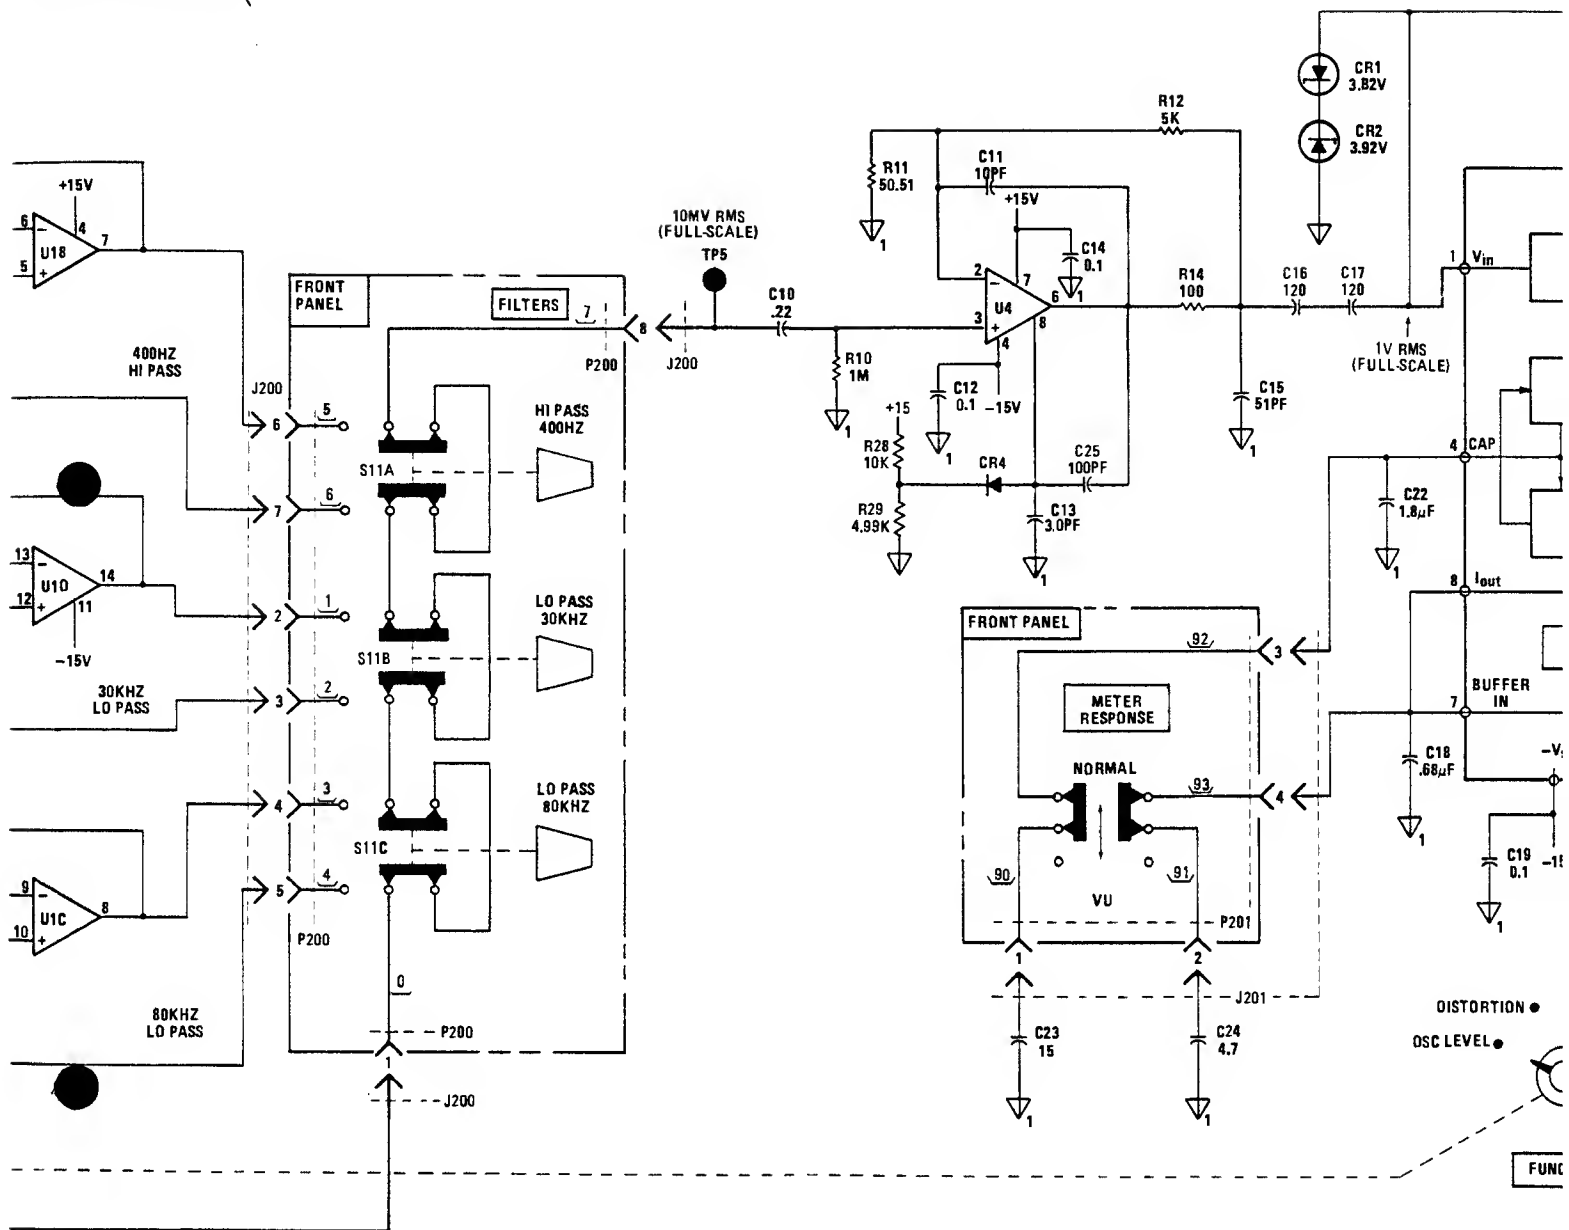


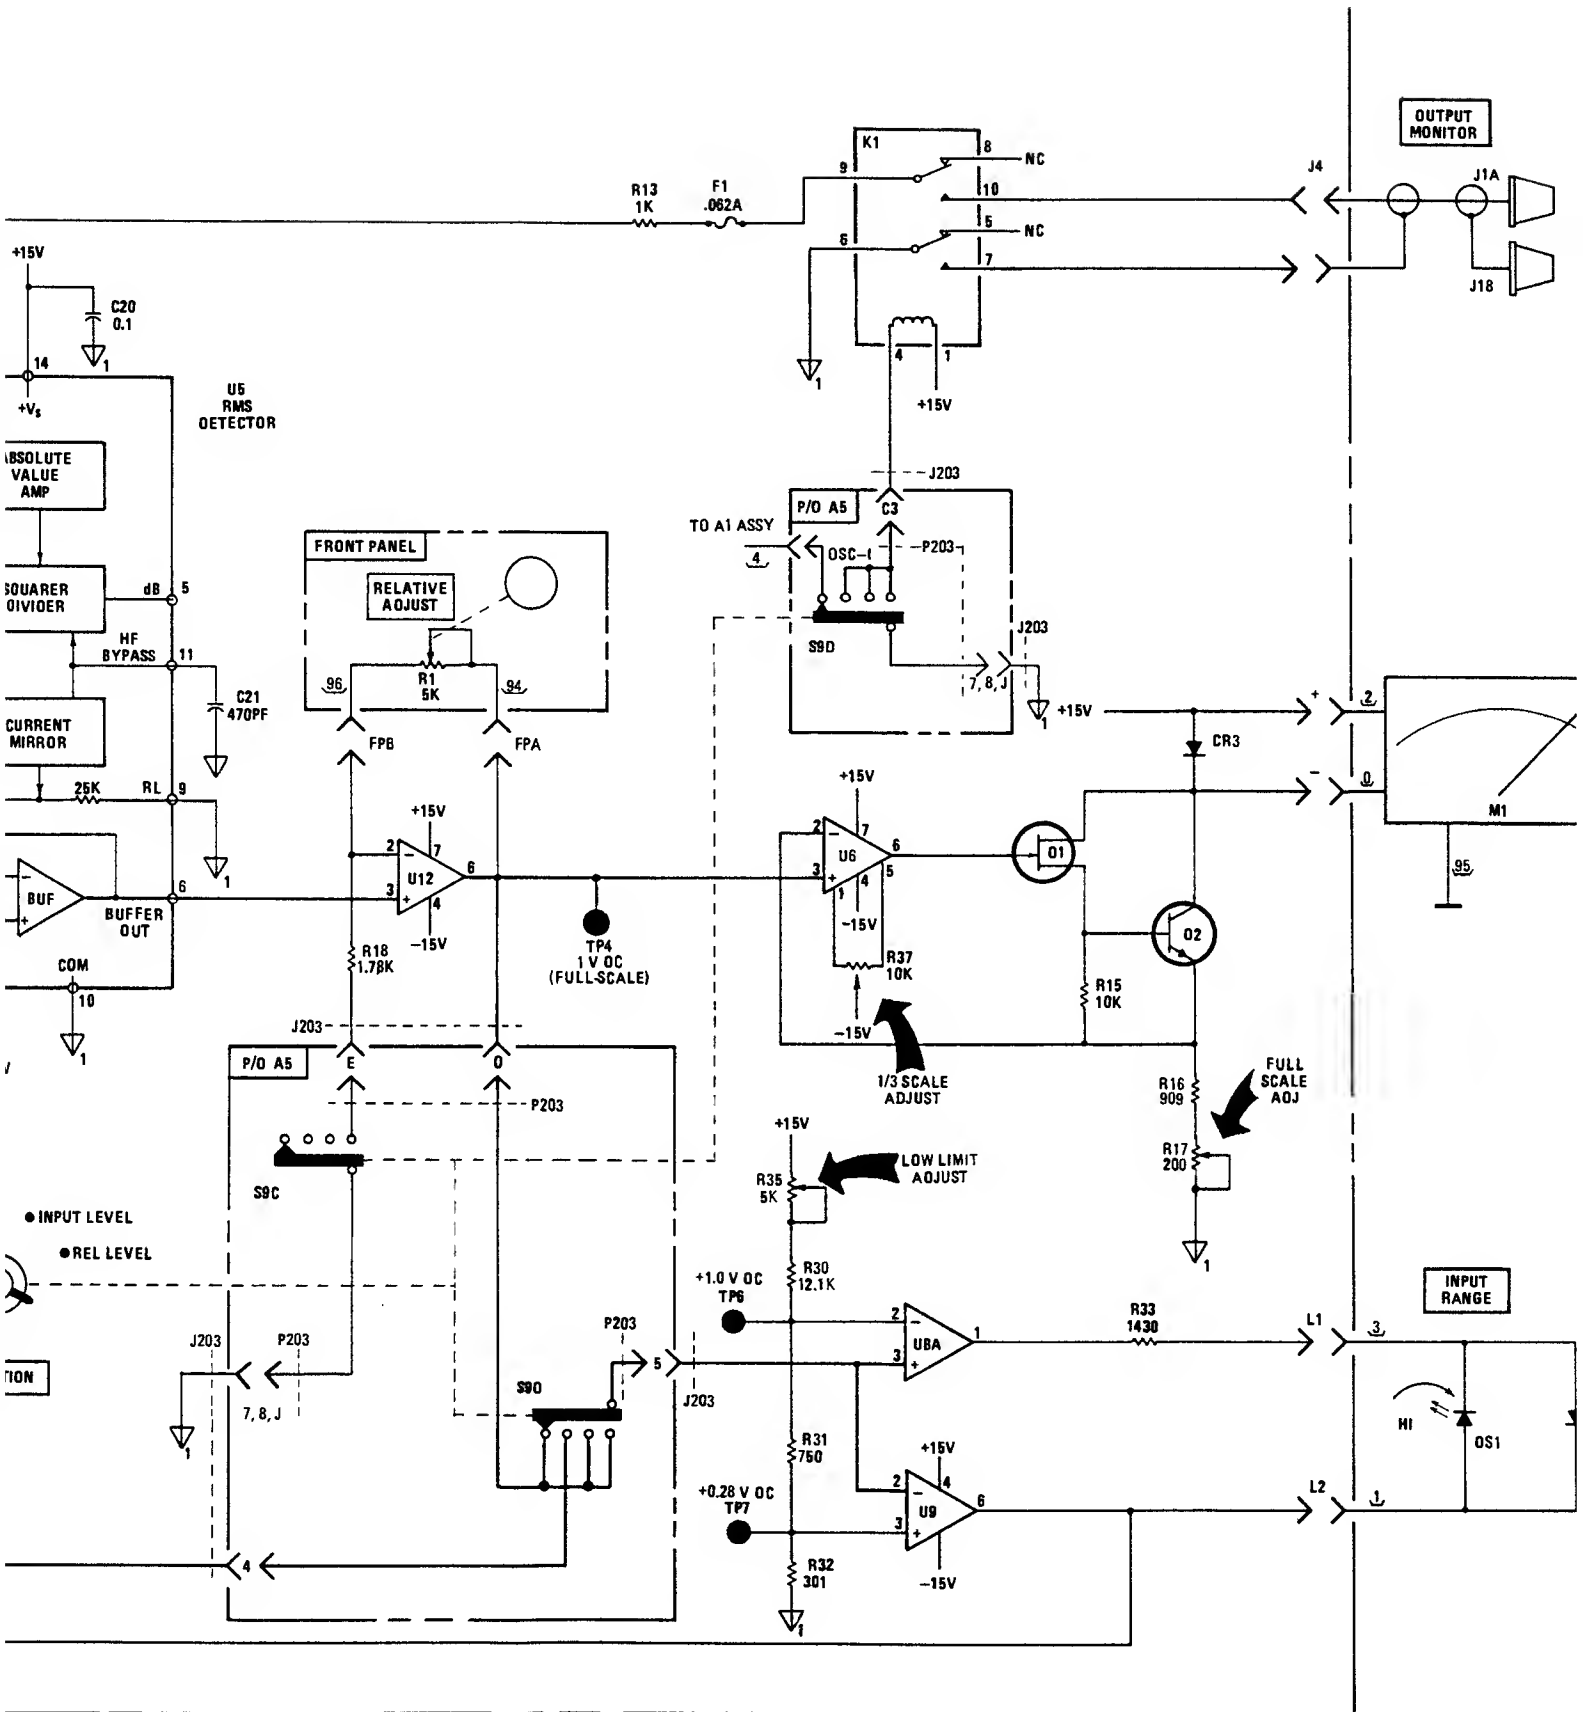


Figure 8-16. Auto Set-Level and Meter Circuit
8-19/1

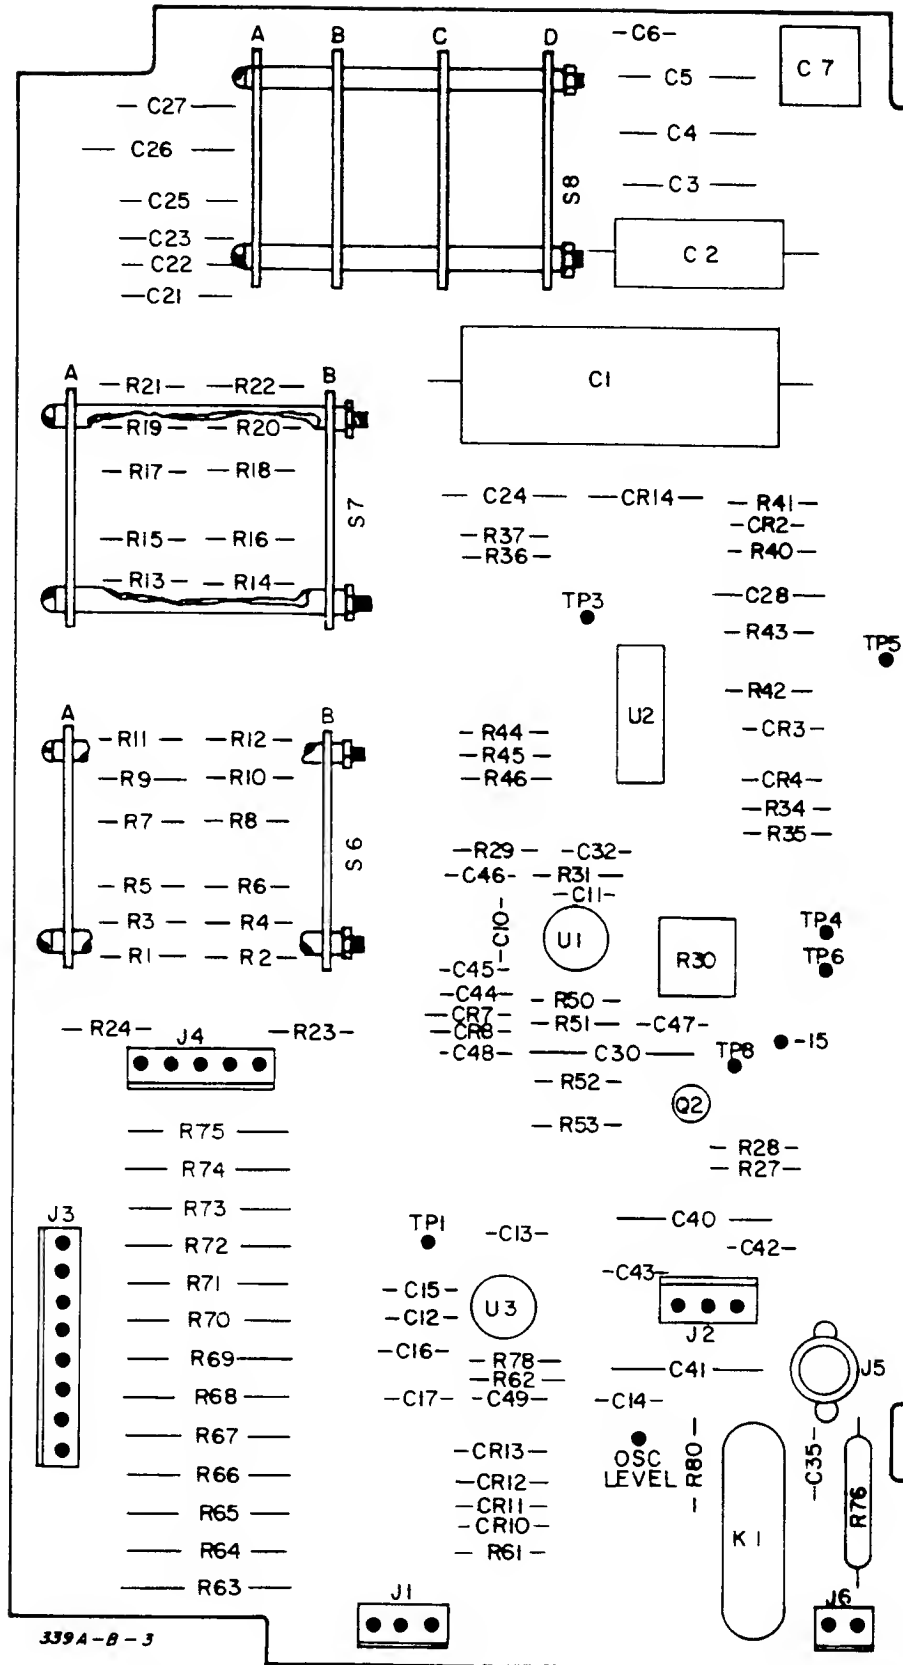



A1
00339.66501
Rev. D


A 1

OSCILLATOR ASSEMBLY
00339-66501

FREQUENCY

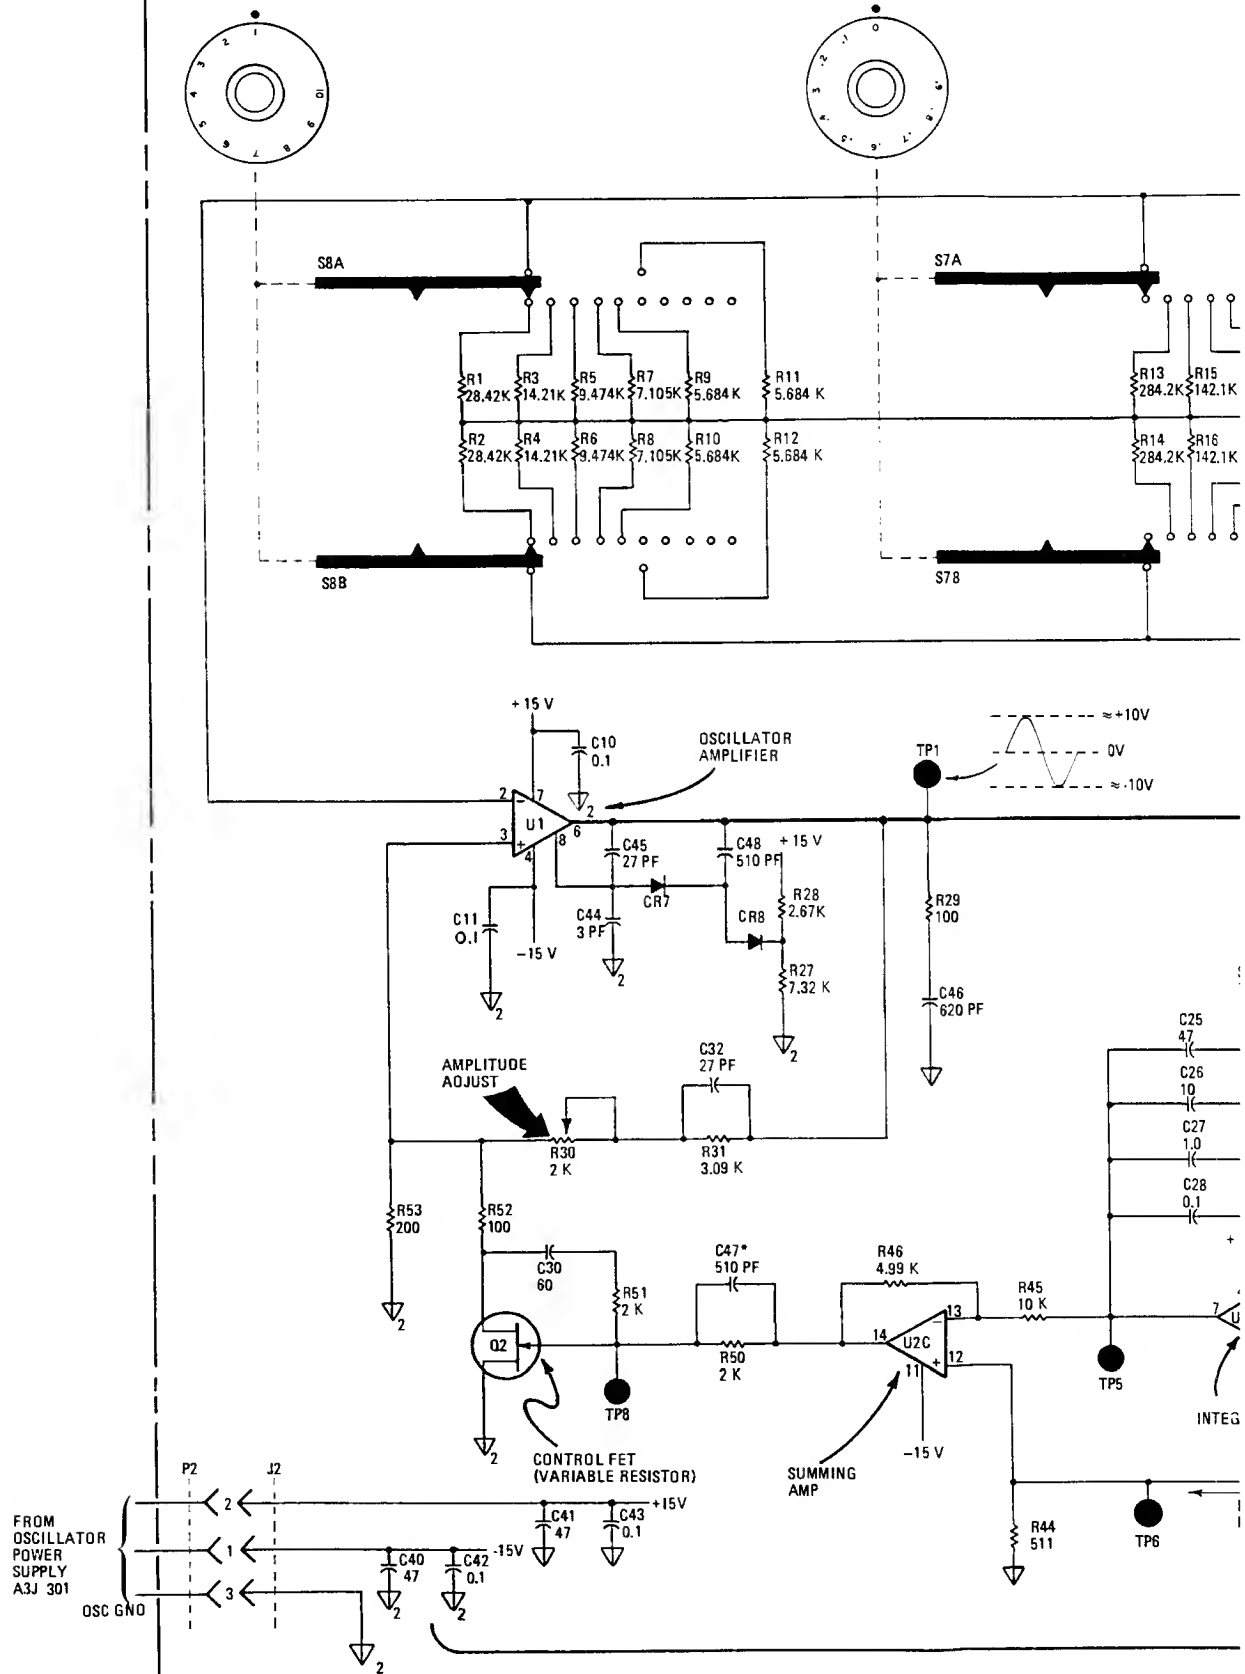

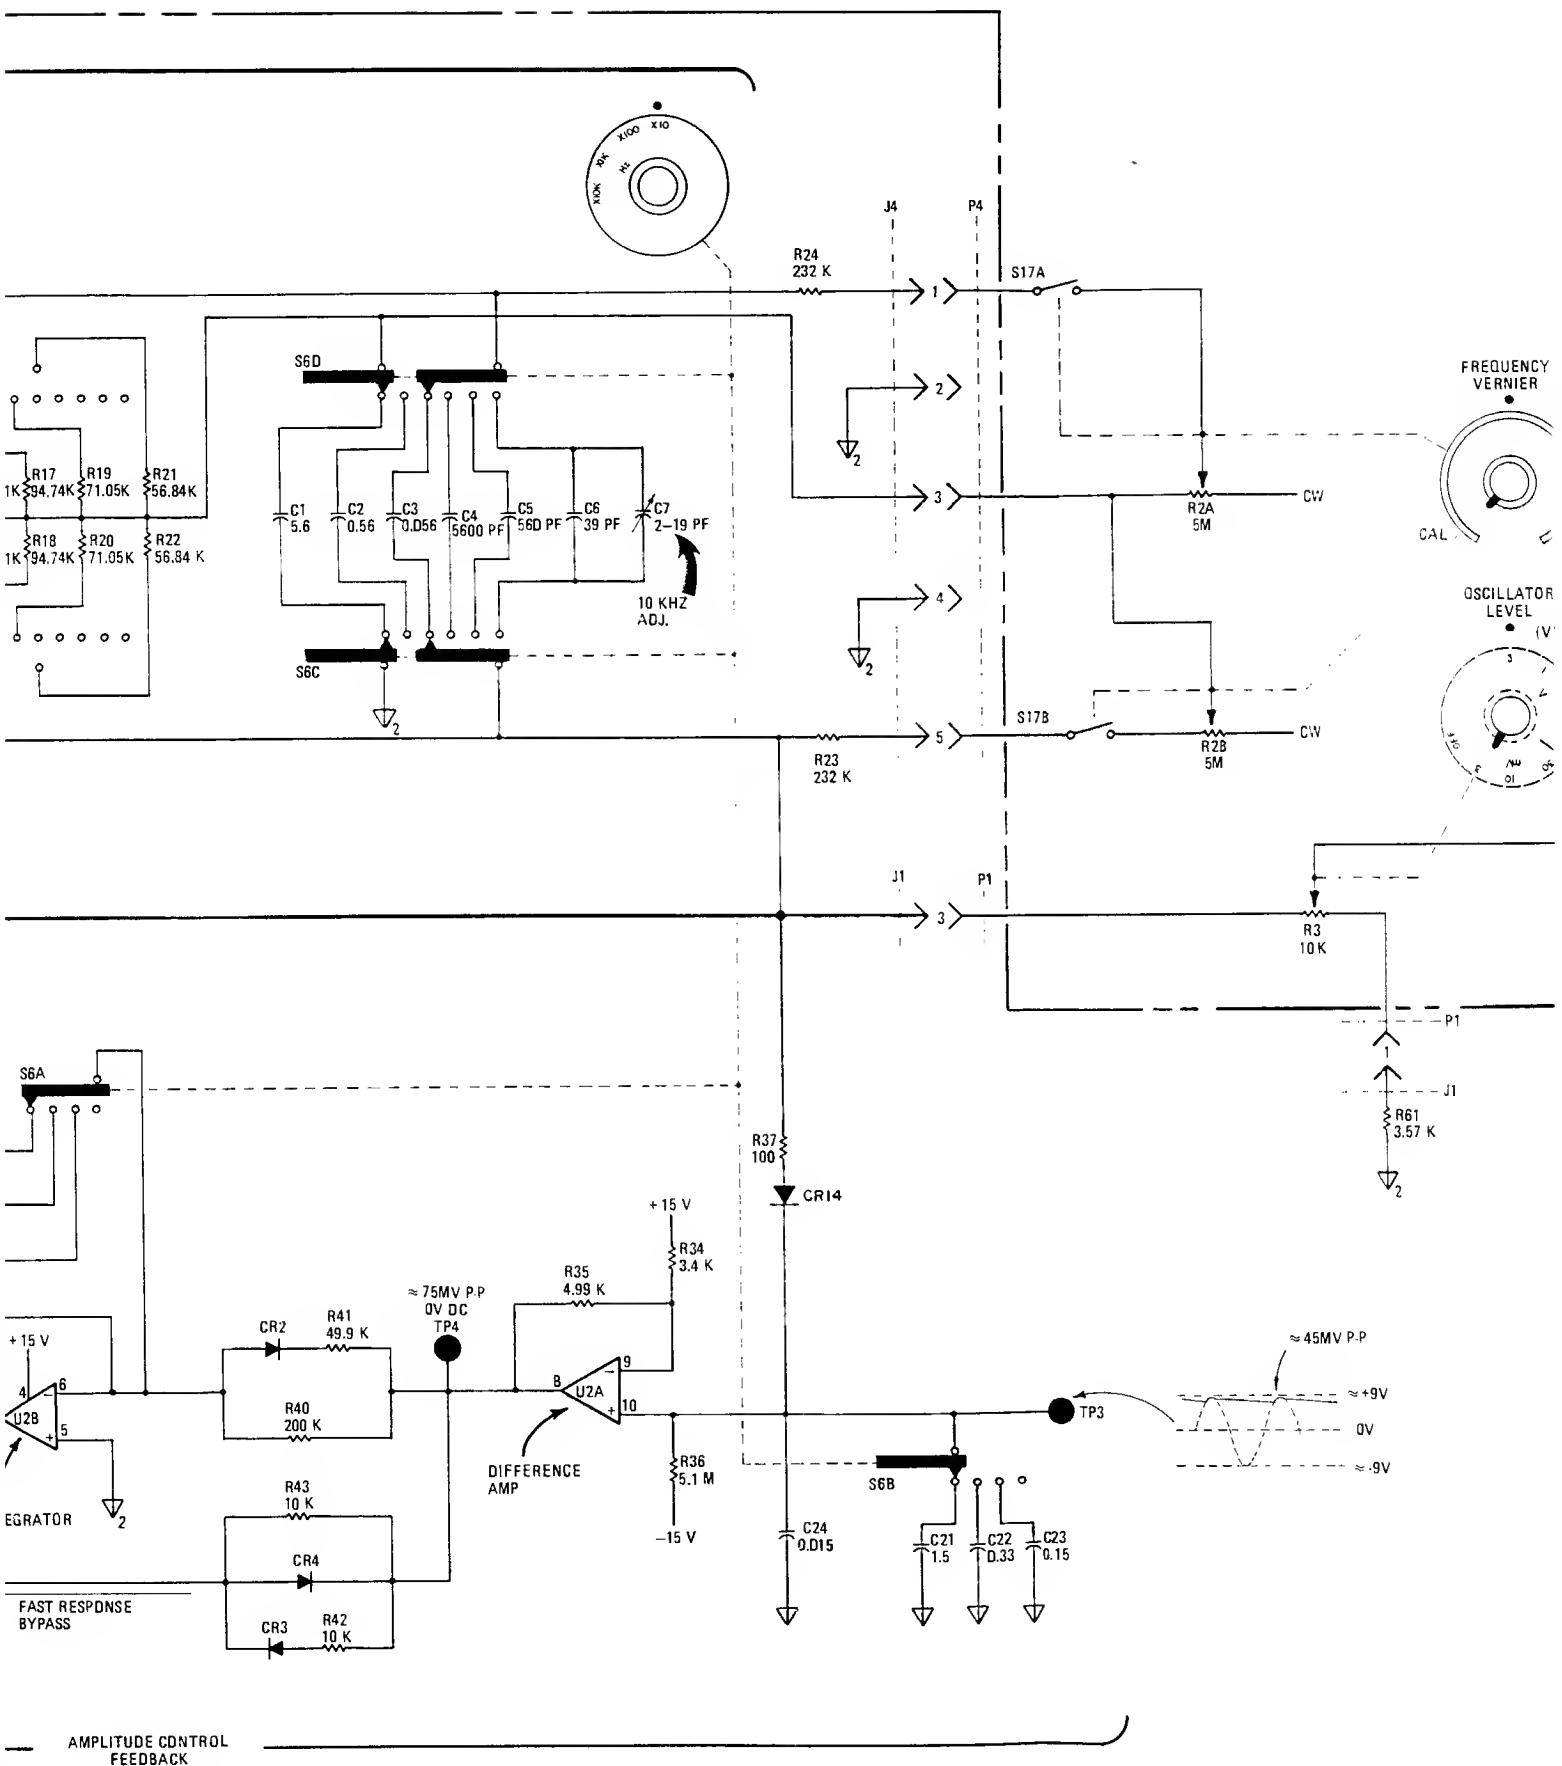

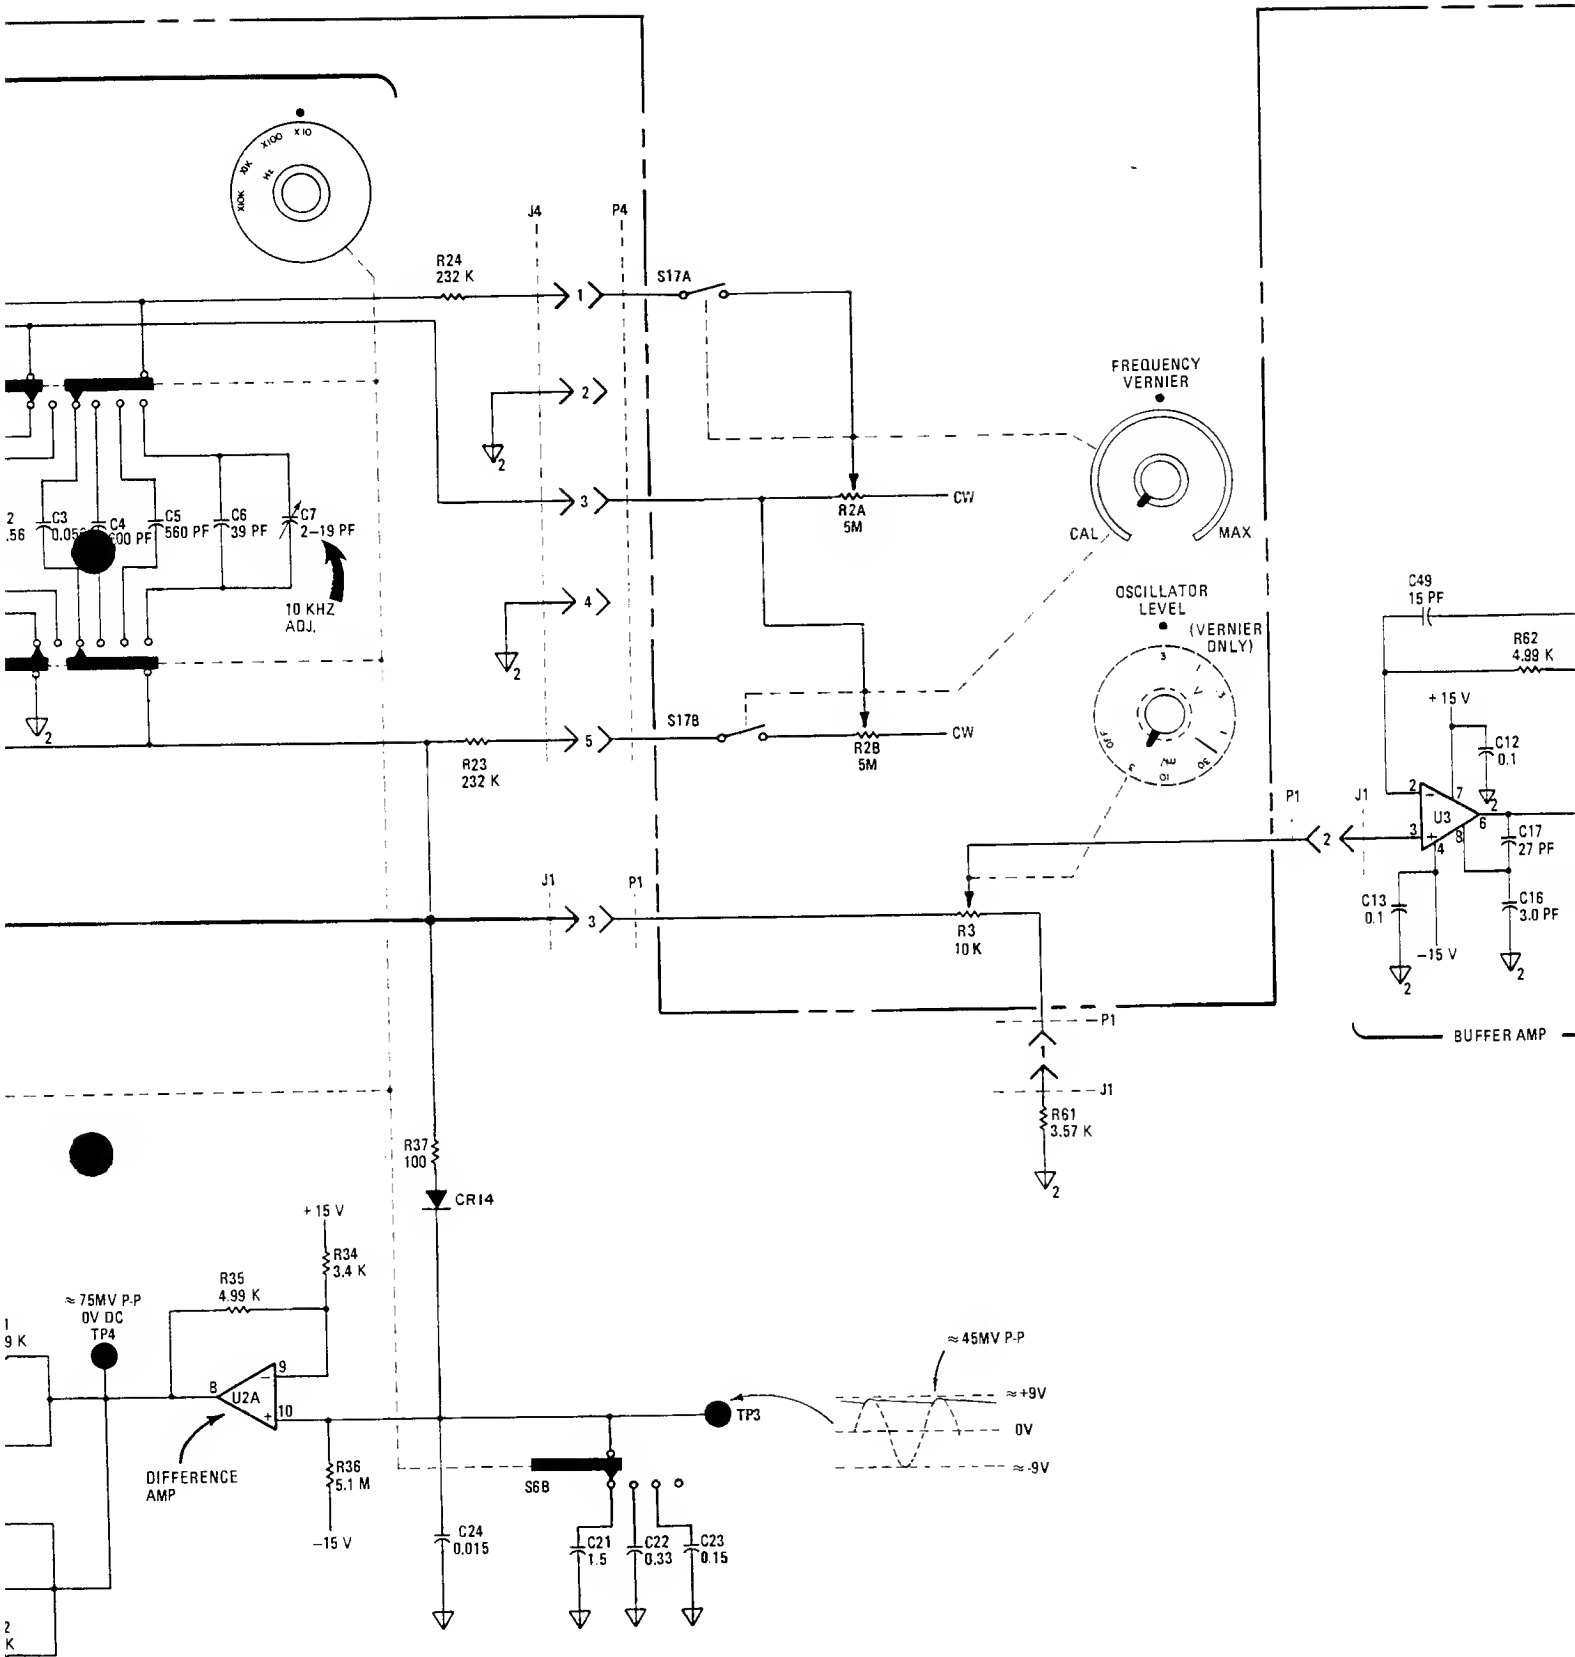




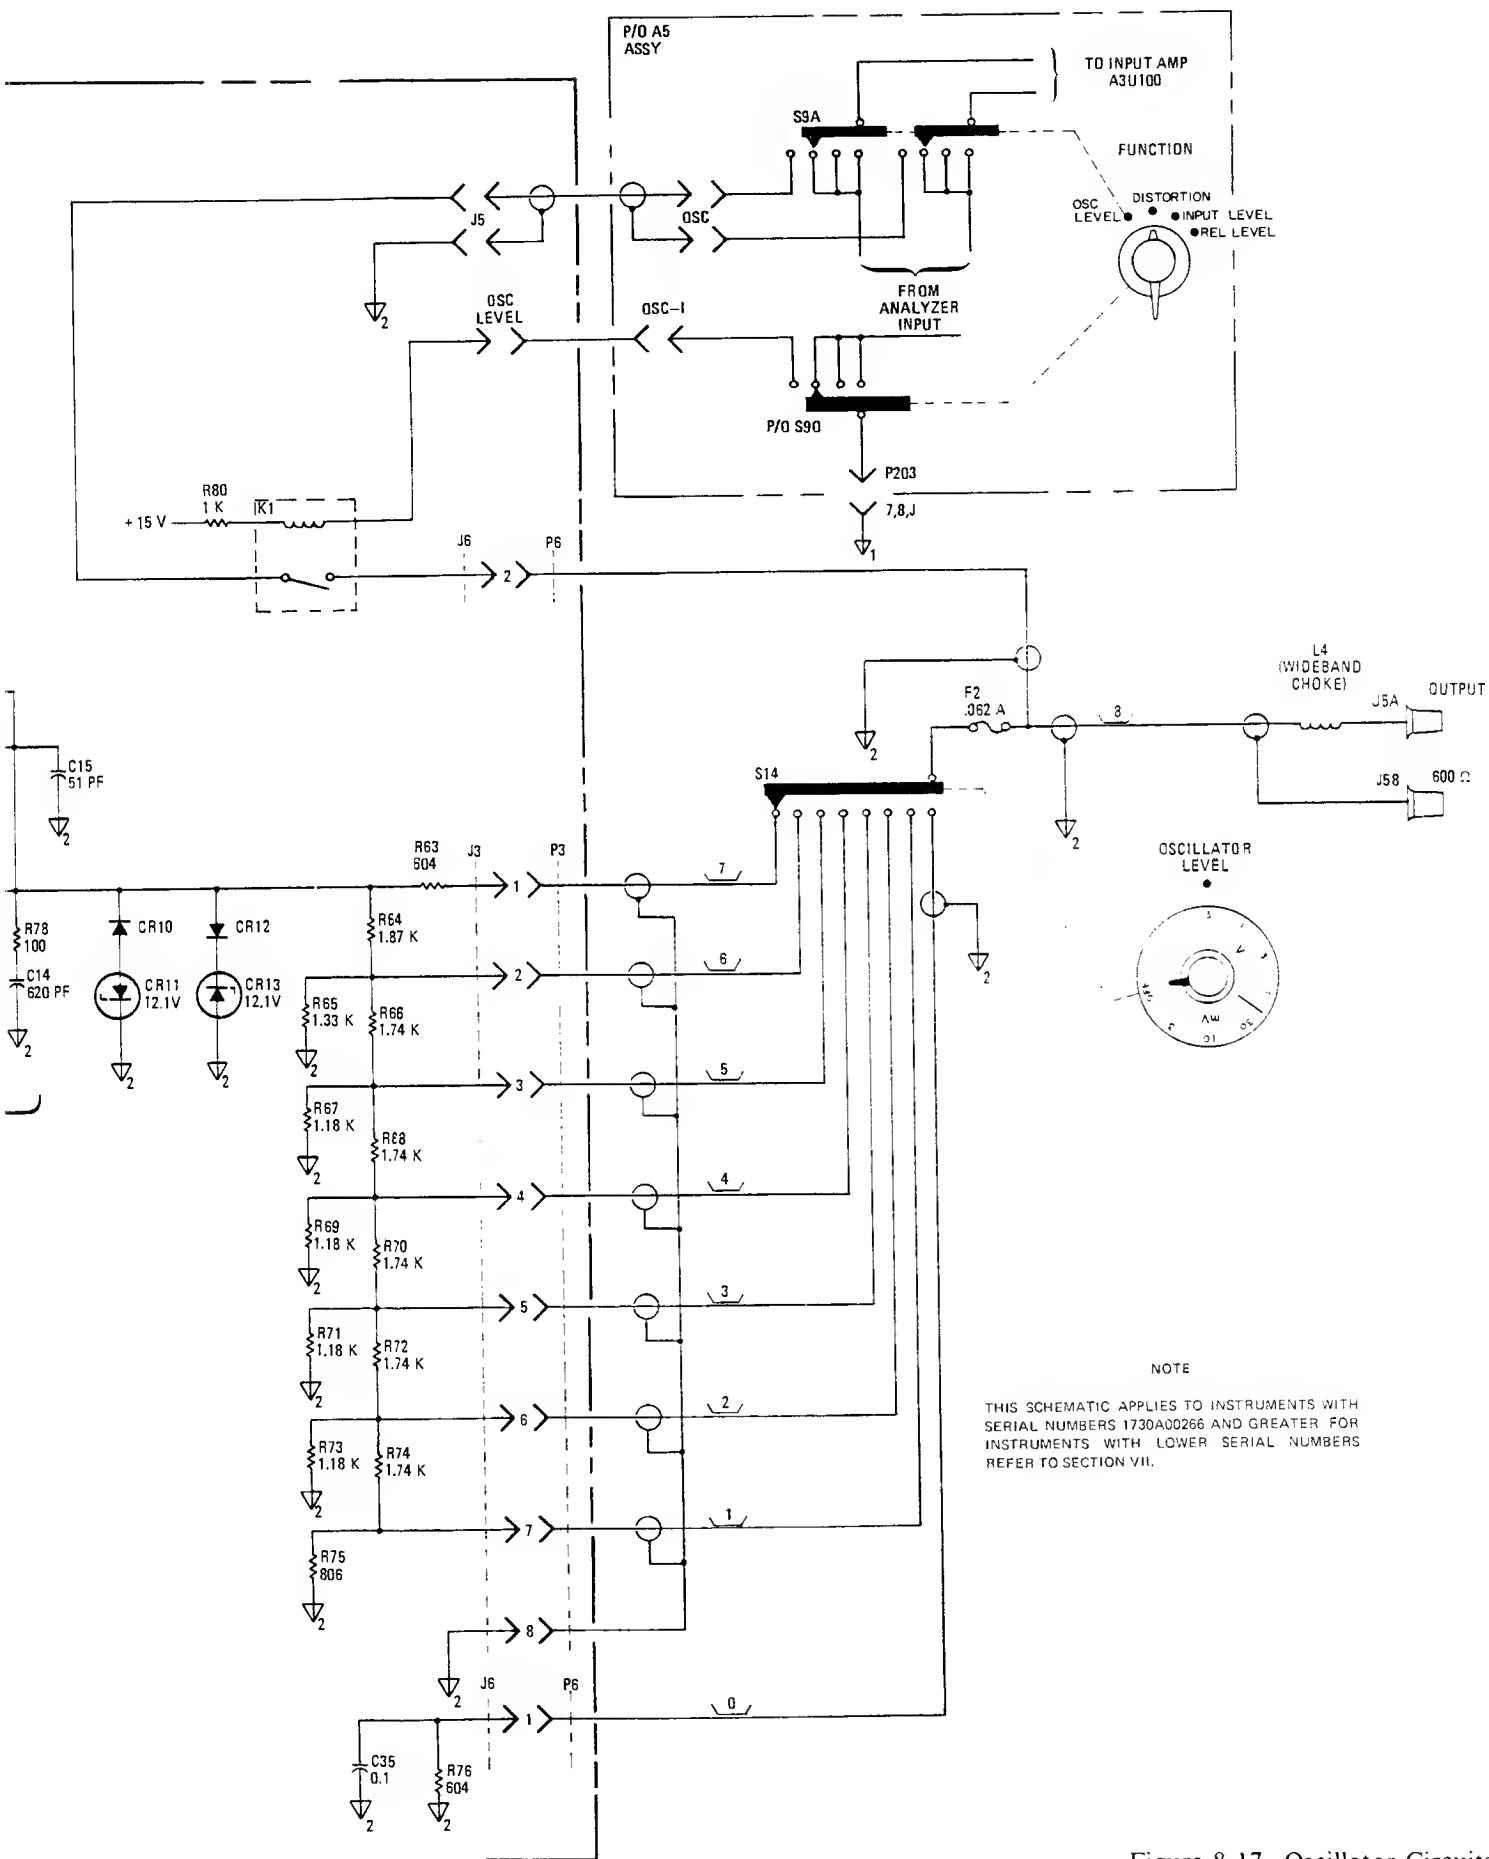


Figure 8-17. Oscillator Circuits.
8-21/8-22

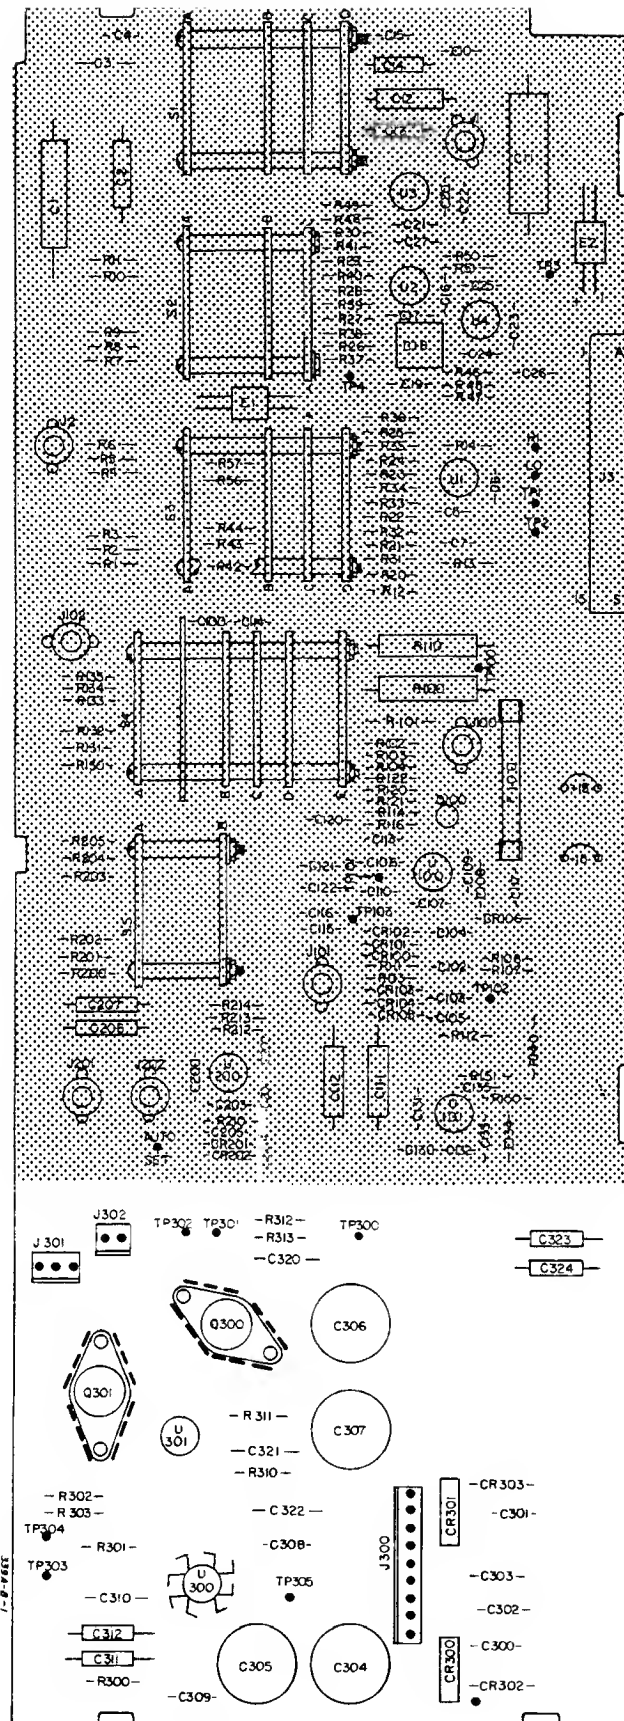

A3
00339-66503
Rev. B

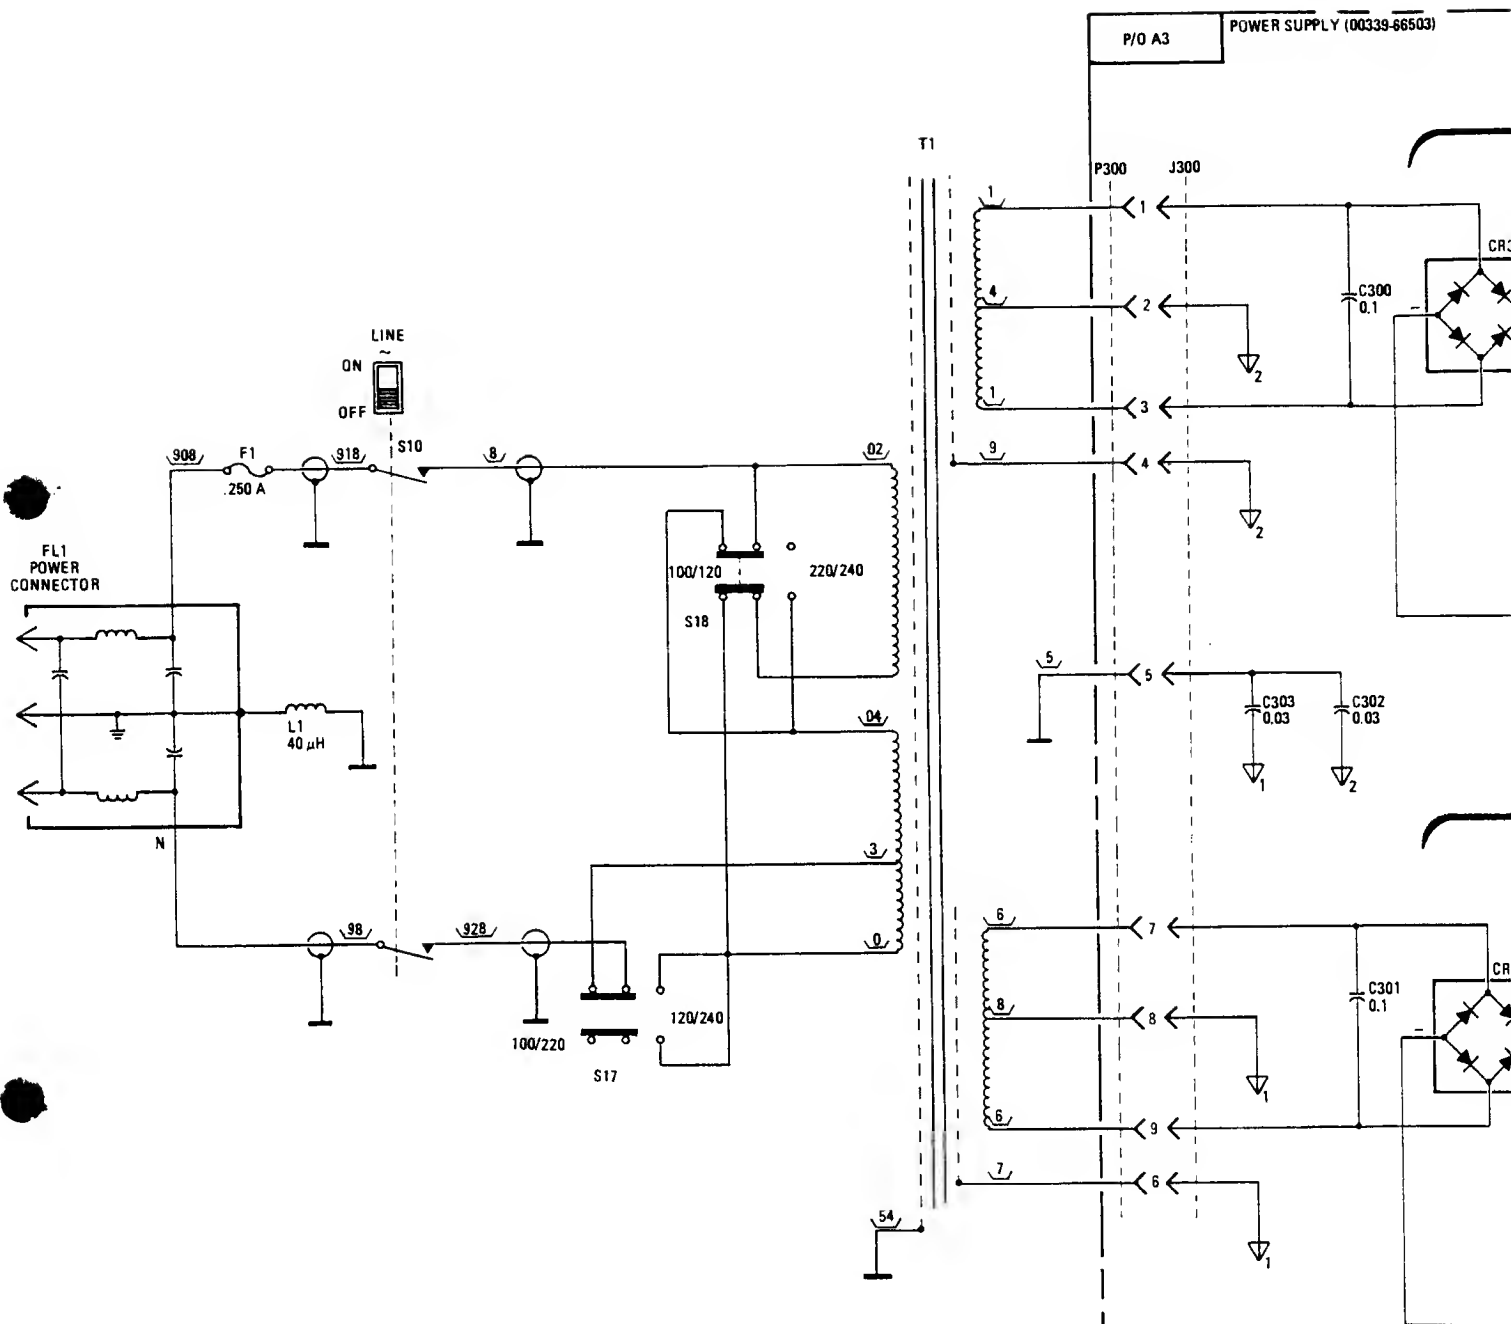

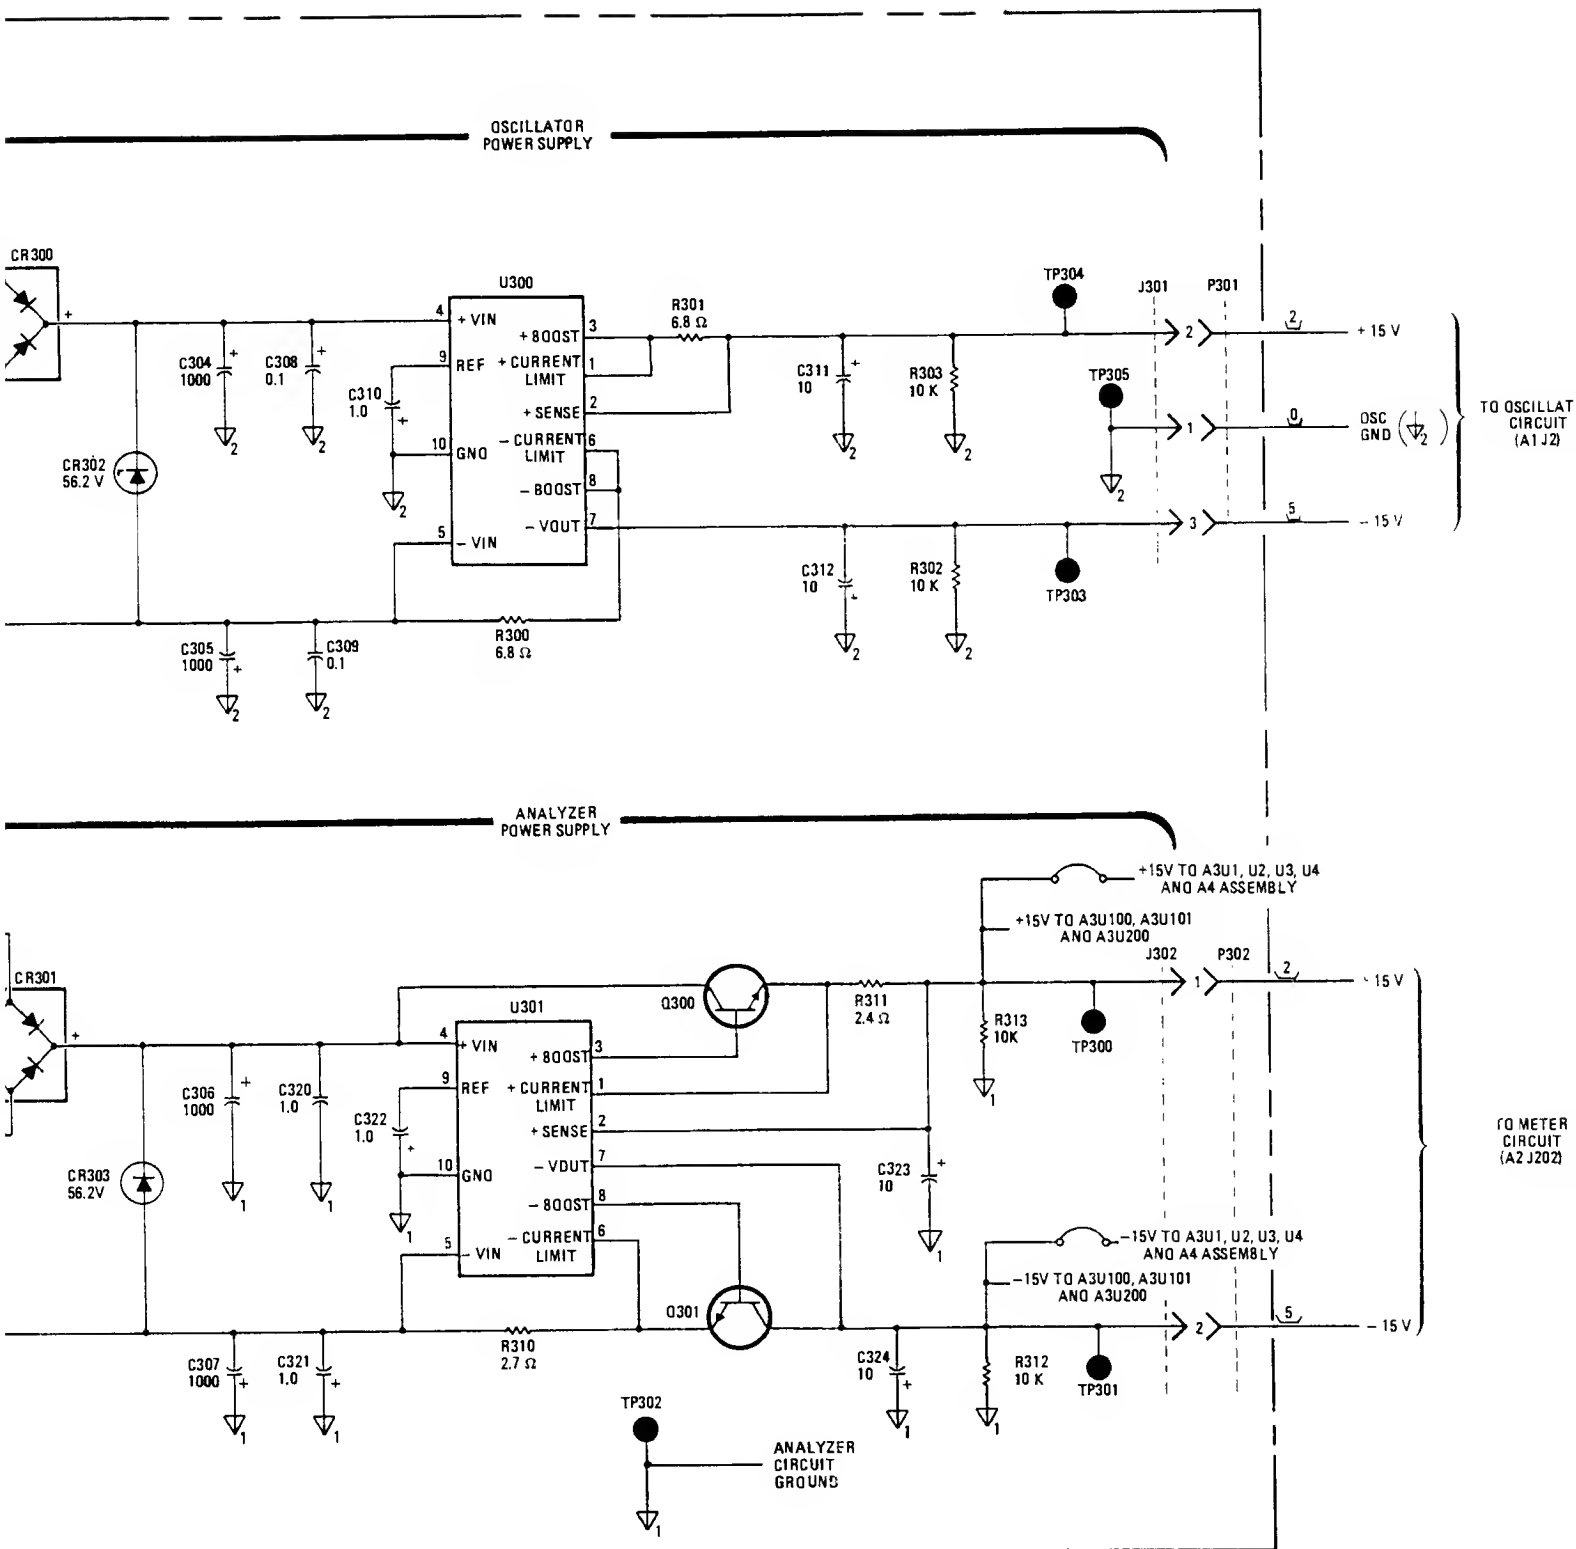

CKARD COMPANY

Figure 8-18. Power Supply
8-23/8-

DISTORTION MEASUREMENT SET

Manual Part Number 00339-90001

New or Revised Item

ERRATA.

Page 4-11, Figure 4-12. Change the part number of the SHIELD (item 7) from 1251-1073 to 1251-0173.

Page 4-11, Paragraph 4-25a. The INPUT RANGE should be 0.1V, not 1V.

Page 4-12, Paragraph 4-26b. The sentence should read, "Connect the equipment as shown in Figure 4-13 without the 100 kΩ series resistor."

8-11/8-12, Figure 8-12. Change the value of capacitor C1 from 0.01 mfd. to .01 mfd.

CHANGE NO. 1 (applies to instruments with serial numbers 1730A00266 and greater).

Page 6-9, Table 6-3. Delete parts A4L3 and A4L4 - hp, part number 9170-0894.

Page 6-10, Table 6-3. Add the following parts:

A4R67	0757-0407	Resistor 200 Ω 1% .125 W
A4R68	0757-0407	Resistor 200 Ω 1% .125 W

Page 8-17, Figure 8-15. Delete parts L3 and L4 from the schematic. Add resistors R67 and R68 as shown in Figure 1.

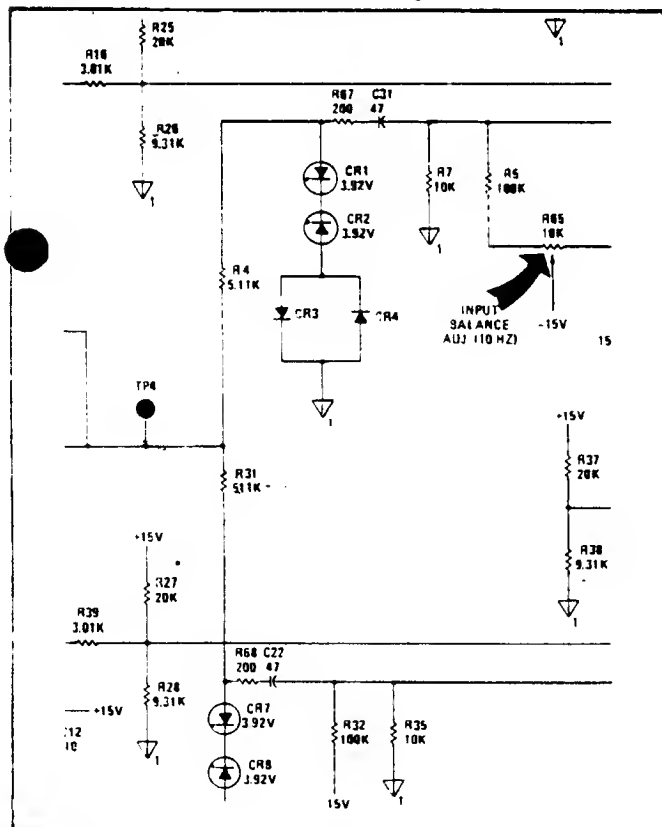


Figure 1.

Resistor, R67 and R68 have replaced L3 and L4 for the prevention of high frequency oscillation.

CHANGE NO. 2 (applies to instruments with serial numbers 1730A00409 and greater).

Page 6-5, Table 6-3. Change A2R22 from 2100-0568 Resistor Trimmer 100 Ω 10% to 2100-3212 Resistor Trimmer 200 Ω 10%.

Page 6-6, Table 6-3. Add the following part:

A2R43 0757-0400 Resistor 90.9 Ω 1% .125 W TC=0+ -100

Page 8-19/8-20, Figure 8-16. Change the value of resistor R22 from 100 Ω to 200 Ω on the schematic diagram. Add resistor R43 as shown in Figure 2.

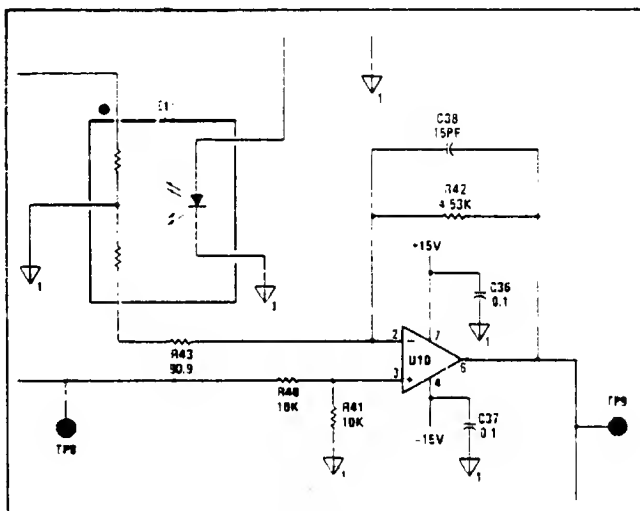


Figure 2.

Resistor R43 has been added and the value of R22 has been changed to compensate for possible tracking errors of the photo-resistors in photo-module E1

NOTE

Not all replacement photo-modules will work properly in instruments which do not have this modification.

CHANGE NO. 3 (applies to all instruments).

Page 6-8, Table 6-3. Change R113 to *R113 (selected component). Add the following padding list for *R113:

0757-0442	Resistor 10 K	1%	.125	W	F	TC = 0 ± 100
0757-0449	Resistor 20 K	1%	.125	W	F	TC = 0 ± 100
0757-0453	Resistor 30.1 K	1%	.125	W	F	TC = 0 ± 100
0698-3499	Resistor 40.2 K	1%	.125	W	F	TC = 0 ± 100

Page 8-13/8-14, Figure 8-13. Change R113 to *R113 and change the nominal value from 10 k Ω to 30.1 k Ω on the schematic diagram.

This change has been made to permit compensation for differences in the dynamic characteristics of FET's used for Q100. The value of *R113 is selected to minimize distortion introduced by the input amplifier stage.

CHANGE NO. 4 (applies to all instruments).

Page 8-10, Table 8-3. Change A4R23 from 0698-3445 Resistor 348 Ω 1% to 0698-4450 Resistor 324 Ω 1%. Change A4R55 from 0698-4453 Resistor 402 Ω 1% to 0698-3445 Resistor 348 Ω 1%.

Page 8-17, Figure 8-15. Change the value of R23 from 348 Ω to 324 Ω and the value of R55 from 402 Ω to 348 Ω on the schematic diagram.

These changes have been made to insure that the proper current is available to drive photo-modules A3E1 and A3E2.

CHANGE NO. 5 (applies to instruments with serial numbers 1730A00451 and greater).

Page 6-7, Table 6-3. Change capacitor A3C302 from 0000-2628 (.03 mfd.) to 0150-0052 (.05 mfd.).

Page 6-6, Table 6-3. Add the following resistor:

A3R314 0683-1035 Resistor 10 k Ω 5% 1/4 W

Page 8-23/8-24. Change the Power Supply schematic diagram as shown in Figure 3.

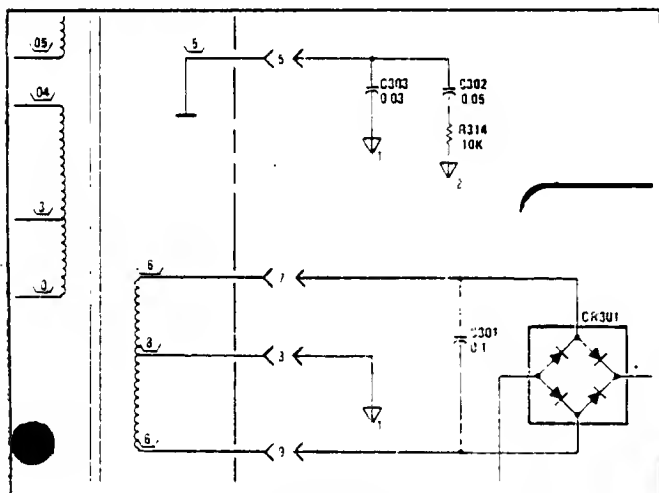


Figure 3.

CHANGE NO. 6 (applies to all instruments).

Page 6-10, Table 6-3. Change the part number and value of A4R59 from 0757-0407, 200 Ω to 0757-0410, 301 Ω . Change the part number and value of reference designator A4R60 from 0757-0407, 200 Ω to 0757-0401, 100 Ω .

Page 8-17, Figure 8-15. Change the schematic value of R59 from 200 Ω to 301 Ω and the value of R60 from 200 Ω to 100 Ω . Change the voltage level at the junction of R59 and R60 from +0.7 to +0.5 volts.

This change establishes a new reference for A4U6C to insure that the "HI" frequency indicator is extinguished when the proper range is selected.

NOTE

If it is necessary to change photo-module A3E1 be certain that A4R59 and A4R60 are the new values listed in this change.

CHANGE NO. 7. (applies to all instruments.)

Page 1-2, Table 1-1. Changed Fundamental Rejection specification for frequency range 50KHz to 110 KHz from >86 dB to >83 dB

Page 4-10, Table 4-6. Change table as shown.

Table 4-6. Fundamental Rejection and Induced Distortion Test

Test Frequency	Fundamental Rejection Specification	Induced Distortion Specification
10 Hz 100 Hz 1kHz 10kHz 20 kHz	> -100 dB	> -95 dB
30kHz		> -90 dB
50kHz	> -90 dB	> -85 dB
110kHz	> -83 dB	> -70 dB

Page 4-16. Change "Fundamental Rejection and Induced Distortion Test" form as shown.

Fundamental Rejection and Induced Distortion Test:

Test Frequency	339A Fundamental Rejection	Test Limit	339 Induced Distortion	Test Limit
10Hz				
100Hz				
1kHz		-100 dB		-95 dB
10kHz				
20kHz				
30kHz				-90 dB
50kHz		-90 dB		-85 dB
110 kHz		-83 dB		70 dB

CHANGE NO. 8 (applies to all instruments).

Page 6-14, Table 6-3. Change miscellaneous part MP12 part number to 00339-04111. Change miscellaneous part MP13 part number to 00339-04102. Add part number 5041-3155, quantity 10, description "SHAFT EXTENDER"

CHANGE NO. 9 (applies to all instruments).

Page 6-9, Table 6-3. Change the part number of A4C25 from 0180-2338 to 0180-2927. The new part is the same value but with a leakage specification of 0.6 μ A maximum after 2 minutes @ 9 VDC.

CHANGE NO. 10 (applies to all instruments).

Page 6-3, Table 6-3. Add the following list of part numbers and values to A1C47*:

0160-0356	CAPACITOR-FXD 18pF
0160-2306	CAPACITOR-FXD 27pF
0160-0204	CAPACITOR-FXD 47pF
0160-0376	CAPACITOR-FXD 68pF
0140-0193	CAPACITOR-FXD 82pF
0140-0194	CAPACITOR-FXD 110pF
0140-0198	CAPACITOR-FXD 200pF

Note that the value most often installed by the factory will be 200pF. The other values are possible alternatives. Selection of this value will optimize the high frequency (> 100kHz) distortion.

Page 8-21/8-22, Figure 8-17. Change the value listed on the schematic for C47* from 510pF to 200pF.

CHANGE NO. 11 (effective on serial numbers 1730A01182 to 1730A01958).

Page 6-3, Table 6-3. Add A4C32* and the following list of part numbers and values:

0160-2248	CAPACITOR-FXD 4.3pF
0160-2249	CAPACITOR-FXD 4.7pF
0160-2250	CAPACITOR-FXD 5.1pF
0160-2251	CAPACITOR-FXD 5.6pF
0160-2252	CAPACITOR-FXD 6.2pF

Note that the value most often installed by the factory will be 5.1pF. The other values are possible alternatives.

Page 8-17, Figure 8-15. Add capacitor C32* in parallel with R2. The value of C32* should be listed as 5.1pF.

This addition will provide phase shift at 110 kHz which will improve the fundamental rejection at that frequency.

(applies to all instruments)
(effective on serial number 1730A01956 and above)

The installed value for C32* is 6.2pF. Since the above list already includes this value a schematic change is all that is necessary.

**CHANGE NO. 12 (applies to all instruments)
(effective on serial number 1730A00596 and above).**

Page 6-5, Table 6-3. Change the part number of A2C23 from 0180-1746 to 0180-2944. The new part is the same value but has a leakage specification of 0.05 uA maximum @ 14 VDC.

C23 is used to slow the response time of the rms detector U5, which consequently slows the meter response in the NORMAL mode. In the VU mode C23 is switched out of the circuit. If the dc leakage through C23 exceeds .05uA a dc voltage offset occurs at pin 4 of U5 causing an erroneous meter reading.

Page 6-7, Table 6-3. Change the part number and value of A3C324 from 0180-0374, 10uF to 0180-0374, 15uF.

Page 6-23/6-24, Figure 8-18. Change the schematic value of C324 from 10uF to 15uF.

Raising the value of this capacitor will lower the ac impedance of the -15V power supply to the A2 board. This will improve the operation of the 80 kHz filter.

CHANGE NO. 13 (applies to all instruments) (effective on Serial Number 1730A00776 and above).

Page 6-3, Table 6-3. Change the part number and value of A1C21 from 0180-1745, 1.5uF to 0180-0197, 2.2uF.

Page 8-21/8-22, Figure 8-17. Change the schematic value of C21 from 1.0uF to 2.2uF.

This change reduces the 10Hz ripple in the amplitude control circuits. A large ripple voltage at TP4 can cause CR4 to turn on which causes harmonic distortion.

Page 6-5, Table 6-3. Delete all information on A2C21.

Page 8-19/8-20, Figure 8-16. Delete C21 from the schematic.

This part has been deleted because the newer rms detectors (A2U5) do not require its use.

(effective on serial numbers 1730A00776 to 2025A02646)

Page 6-4, Table 6-3. Change the part number and value of A2C13 from 0160-2244, 3pF to 0160-2236, 1pF.

Page 6-19/8-20, Figure 8-16. Change the schematic value of C13 from 3pF to 1pF.

This change has come about to increase the bandwidth of A2U4. The old rms detector, A2U5, had a peak in the response at 110kHz which compensated for the reduced bandwidth of A2U4. The new detectors (marked AD536AJ) don't have this peak in their frequency response.

(applies to all instruments)
(effective on serial numbers 2025A02646 and above)

Page 6-4, Table 6-3. Delete all information on reference designators A2C11 and A2C13.

Page 8-19/8-20, Figure 8-16. Delete schematic symbols, values, and designators for C11 and C13.

(effective on serial numbers 1730A00776 to 2025A02226)

Page 6-6, Table 6-3. Change the part number and value for A3C114 from 0160-0363, 620pF to 0160-2209, 360pF.

Page 8-13/8-14, Figure 8-13. Change the schematic value of C114 from 620pF to 360pF.

(applies to all instruments)
(effective on serial number 2025A02226 and above)

Page 6-6, Table 6-3. Change the part number and value of reference designator A3C114 from 0160-2209, 360 pF to 0160-0341, 640pF.

Page 8-13/8-14 Figure 8-13. Change the schematic value of C114 from 360pF to 640pF.

**CHANGE NO. 14 (applies to all instruments)
(effective on serial number 1730A00844 and above).**

Page 6-10, Table 6-3. Change the part number and value for A4R48 and A4R52 from 0698-4435, 2.49kΩ to 0698-3515, 5.9kΩ.

Page 6-17, Figure 8-15. Change the schematic values of R48 and R52 from 2.49kΩ to 5.9kΩ.

This change is being done to decrease the lock-in time of the notch. Low level 120Hz line signals could beat with the fundamental when the 339 is tuned to 100Hz causing "out of specification" distortion readings at 100Hz.

CHANGE NO. 15 (applies to all instruments)
(effective on serial number 1730A00916 and above).

Page 6-8, Table 6-3. Change the part number and value of A3C132* from 0160-2249, 4.7pF to the following list:

0160-2251	CAPACITOR-FXD 5.6pF
0160-2253	CAPACITOR-FXD 6.8pF
0160-2254	CAPACITOR-FXD 7.5pF
0160-2255	CAPACITOR-FXD 8.2pF
0160-2256	CAPACITOR-FXD 9.1pF
0160-2257	CAPACITOR-FXD 10pF
0160-2259	CAPACITOR-FXD 12pF
0160-2261	CAPACITOR-FXD 15pF

Note that the value most often installed by the factory is 10pF. This change is to prevent U101 from oscillating.

Page 8-13/8-14, Figure 8-13. Change the schematic value of C132* from 4.7pF to 10pF.

The two gates of Q100 should be connected to pin 3 of U100 instead of pin 2 as shown. On the schematic break the line between the gates common point and the feedback loop of U100 and draw a new line straight down to TP101 and pin 3 of U100.

Source-follower Q100 keeps the voltage across the input protection diodes constant. Prior to this change the bootstrap voltage came from the feedback network of U100 (pin 2) rather than the input signal, causing distortion at higher frequencies due to the delay in the feedback signal.

CHANGE NO. 18 (effective on serial numbers 1730A00916 to 1730A02436).

Page 6-8, Table 6-3. Add A3R60, part number 2100-3210, value 10KΩ.

Page 8-15/8-18, Figure 8-14. Add R60, a 10k variable resistor, in series with A3E1 photoresistor.

(applies to all instruments)
(effective on serial number 1730A02436 and above)

Page 6-8, Table 6-3. Delete all information on A3R60.

Page 8-15/8-18, Figure 8-14. Remove R60 and replace with a wire jumper.

This was installed to insure that phase control (which runs the error lights) would not pull down to as low a bridge resistance as the amplitude control and the LO frequency lamp always lights to signal when the frequency is too low. It was later removed because it was seldom used.

CHANGE NO. 17 (applies to all instruments) (effective on serial numbers 1730A00850 to 1730A00858 and 1730A00986 and above).

Page 6-6, Table 6-3. Add reference designator A3C28, part number 0160-2264, value 20pF.

Page 6-8, Table 6-3. Change the part number and value for the following reference designators:

A3R42	from 0698-3161 38.3kΩ	to 0757-0454 33.2kΩ
A3R43	from 0757-0451 24.3kΩ	to 0698-3158 23.7kΩ
A3R48	from 0757-0446 15kΩ	to 0757-0452 27.4kΩ
A3R49	from 0698-3152 3.48kΩ	to 0757-0439 6.81kΩ

Page 8-15/8-18, Figure 8-14. Change the schematic values of the resistors above as shown. Add C28, value 20pF in parallel with R49.

The addition of C28 and the change in value of R49 is to eliminate a 5MHz oscillation in A3U3. The other resistor changes allow the

photocells A3E1 and A3E2 to pull the notch in through a wider range of frequencies. Prior to this change, photocells which met specifications but were at the limits would not work.

CHANGE NO. 18 (applies to all instruments)
(effective on serial number 1730A01488 and above)

Page 6-12, Table 6-3. Change the part number of reference designator F2 from 2110-0384 to 2110-0612.

The old fuse caused 3rd order harmonic distortion at low frequencies due to its thermal properties.

CHANGE NO. 19 (effective on serial numbers 1730A01758 to 2025A03427)

Page 6-8, Table 6-3. Change the part number and value of A3C100 from 0160-2251, 5.6pF to 0140-0209, 5pF.

Page 8-13/8-14, Figure 8-13. Change the value of C100 from 5.6pF to 5pF.

This change eliminates the possibility of a short from 10V to ground.

(applies to all instruments)
(effective on serial number 2025A03427 and above)

Page 6-6, Table 6-3. Change the part number and value of A3C100 from 0140-0209, 5pF to 0160-2244, 3pF.

Page 8-13/8-14, Figure 8-13. Change the value of C100 from 5pF to 3pF.

CHANGE NO. 20 (applies to all instruments)
(effective on serial number 2025A02226 and above)

Page 6-6, Table 6-3. Change the part number and value of the following reference designators as shown below:

A3C115	from 0160-2263 18pF	to 0140-0190 39pF
A3C116	from 0140-0195 130pF	to 0160-0134 220pF

Page 8-13/8-14, Figure 8-13. Change the value of C115 from 18pF to 39pF and of C116 from 130pF to 220pF.

Page 6-5, Table 6-3. Add A2C50 and A2C51 whose part numbers are 0160-4571 and values are .1uF.

Page 6-6, Table 6-3. Add reference designators A2R50 and A2P51 whose part numbers are 0757-0401 and values are 100Ω.

Page 8-19/8-20, Figure 8-16. Add R50, R51, C50, and C51 to the schematic as shown in Figure 4.

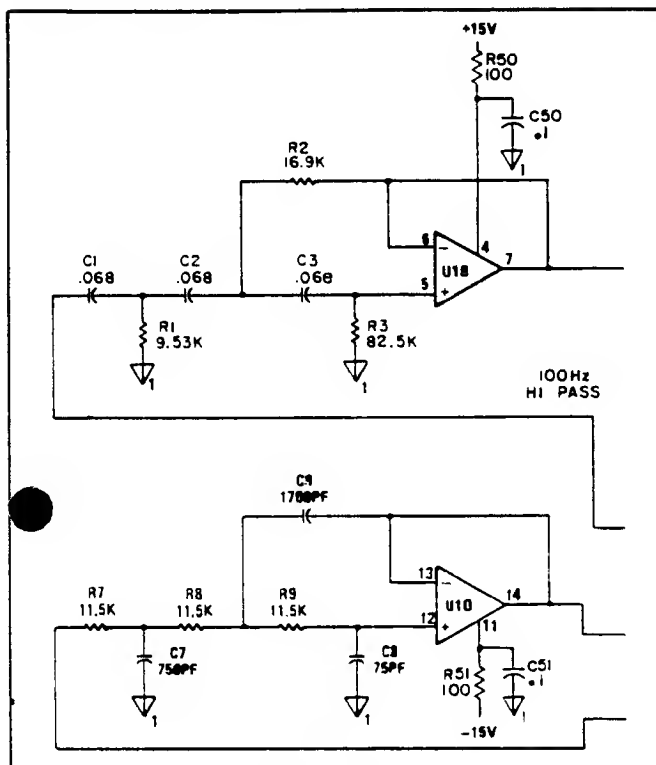


Figure 4

This change is to decouple power supplies on A2U1 to reduce the affect of internal oscillation on the 80kHz filter response. The values of C114, C115 and C116 are changed to compensate for the stray capacitance in the new 00339-26513 printed circuit board. (See change no. 13 for information on C114).

(effective on serial number 2025A02226 to 2025A02436)

Page 8-9, Table 8-3. Change the part number of A3U200 from 1826-0109 to 1826-0413.

(effective from serial number 2025A02226 to 2025A02786)

Page 6-7, Table 6-3. Change the part number and value of A3C205 from 0160-2264, 20pF to 0160-2200, 43pF.

Page 8-15/8-18, Figure 8-14. Change the value of C205 from 20pF to 43pF.

(effective on serial number 2025A02436 to 2025A02786)

Page 6-9, Table 8-3. Change the part number for A3U200 from 1826-0413 to 1826-0081.

(applies to all instruments)
(effective on serial number 2025A02786 and above)

Page 6-9, Table 6-3. Change the part number for A3U200 from 1826-0081 to 1826-0413.

Page 6-7, Table 6-3. Change the part number and value of A3C205 from 0160-2200, 43pF to 0160-2198, 20pF.

Page 8-15/8-18, Figure 8-14. Change the value of C205 from 43pF to 20pF.

These changes reduce noise in the Analyzer Mode due to the LM-318 Op Amp. Meter readings at 1kHz with a clean source are typically -94dB. With the HA 2605 the meter typically reads -96dB.

CHANGE NO. 21 (applies to all instruments)
(effective on serial number 2022A02156 and above).

Page 8-14, Table 8-3. Change the part numbers for the following miscellaneous parts:

MP9 from 00339-00603 to 00339-00613
MP10 from 00339-00601 to 00339-00611
MP11 from 00339-00602 to 00339-00612
MP14 from 00339-00604 to 00339-00614
MP15 from 00339-00605 to 00339-00615

(effective on SN 1730A02156 and above)

Page 6-13, Table 6-3. Add part number 00339-23201, Qty 5. Coupler, Shaft.

CHANGE NO. 22 (applies to all instruments)
(effective on serial number 2025A02296 and above).

Page 6-4, Table 6-3. Change the part number of A1U2 from 1826-0315 to 1826-0557.

Page 6-6, Table 8-3. Change the part number of A2U8 from 1826-0315 to 1826-0557.

Page 6-7, Table 8-3. Delete all information on A3J2.

Page 6-10, Table 6-3. Change the part number of A4U3, A4U5, and A4U6 from 1826-0315 to 1826-0557.

(effective on serial numbers 1730A02156 to 2025A03716)

Page 8-8, Table 8-3. Change the part number for A2U1 from 1826-0315 to 1826-0557.

The change of IC part numbers is to a ceramic part to prevent field failures due to phosphorus contamination.

(applies to all instruments)
(effective on Serial Number 2025A03718 and above)

Page 8-8, Table 8-3. Change the part number of A2U1 from 1826-0557 to 1826-0323.

CHANGE NO. 23 (applies to all instruments)
(effective on serial number 2025A02366 and above).

Page 6-11, Table 6-3. Add part number 00339-00616, "SHIELD, PCB".

CHANGE NO. 24 (applies to all instruments)
(effective on serial number 1730A02438 and above).

Page 6-7, Table 8-3. Change the part number and value for A3F100 from 2110-0011, .062A to 2110-0236, .1A.

Page 8-13/8-14, Figure 8-13. Change the value of F100 from .062A to .1A.

CHANGE NO. 25 (effective on serial numbers 2025A02436 to 2025A02786).

Page 6-7, Table 6-3. Delete all information on A3C202, A3C203, A3C204, A3CR200, and A3CR201.

Page 6-15/8-18, Figure 8-14. Delete schematic symbols, values, and designators for C202, C203, C204, CR200, and CR201.

(applies to all instruments)
(effective on serial number 2025A02786 and above)

Page 6-7, Table 6-3. Add the following reference designators, part numbers, and values:

A3C204 0160-2201 51pF
A3CR200 1901-0040 Diode
A3CR201 1901-0040 Diode

Page 6-15/8-18, Figure 8-14. Replace C204, CR200 and CR201 where they were in the schematic originally.

The end result is to delete C202 and C203.

CHANGE NO. 26 (applies to all instruments).

Page 6-13, Table 6-3. Change the description of part number 00339-04004 from "KNOB, TENS" to "KNOB, UNITS". Change the description of part number 00339-04005 from "KNOB, UNITS" to "KNOB, TENS".

CHANGE NO. 27 (applies to all instruments)
(effective on serial number 1730A02716 and above).

Page 6-12, Table 6-3. Just above the listing of W4 add part number 00339-61915, "SWITCH ASSY." and move the reference designator W4 up to the new listing. Just above the listing of W5 add part number 00339-61916, "SWITCH ASSY." and move the reference designator W5 up to the new listing.

Page 6-13, Table 6-3. Just above the listing of W10 add part number 00339-61917, "SWITCH ASSY." and move the reference designator W10 up to the new listing.

CHANGE NO. 28 (effective on serial numbers 2025A02646 to 2025A03716).

Page 6-4, Table 6-3. Change the part number and value of the reference designators below as listed:

A2C4 from 0160-0341 640pF to 0160-2940 470pF
A2C5 from 0160-2201 51pF to 0140-0192 68pF

Page 6-19/8-20, Figure 8-16. Change the value of C4 from 640pF to 470pF and that of C5 from 51pF to 68pF.

(applies to all instruments)
(effective on serial number 2025A03716 and above)

Page 6-4, Table 6-3. Change the part number and value of the reference designators below as listed:

A2C4 0160-2940 470pF to 0140-0234 500pF
A2C5 0140-0192 68pF to 0160-3083 62pF

Page 6-19/8-20, Figure 8-16. Change the value of C4 from 470pF to 500pF and that of C5 from 68pF to 62pF.

This change improves, 1) gain above 100kHz, and 2) 80kHz filter response. Changing A2R6 is part of this update. See change no. 29.

(applies to all instruments)
(effective on serial number 2025A02646 and above)

Page 6-4, Table 6-3. Change the part number and value of A2C15 from 0160-2201 51pF to 0160-2204 100pF.

Page 8-19/8-20, Figure 8-16. Change the value of C15 from 51pF to 100pF.

Page 6-13, Table 6-3. Change the part numbers and descriptions of the following items:

from 2110-0465 to 2110-0564 FUSEHOLDER
from 2110-0467 to 2110-0565 CAP, FUSEHOLDER
from 2110-0470 to 2110-0569 NUT, FUSEHOLDER

CHANGE NO. 29 (applies to all instruments)
(effective on serial number 2025A03716 and above).

Page 6-13, Table 6-3. Change the part number of W7 from 00339-61607 to 00339-61612 and that of W7S10 from 3101-1656 to 3101-2216. The description for W7S10 should read "SWITCH POWER". Below that listing delete all information on part number 5040-5932 and add 8120-0593, "CABLE SHIELD".

Page 6-14, Table 6-3. Change the part number of MP1 from 00339-00201 to 00339-00211 and that of MP2 from 00339-00202 to 00339-00212.

Page 6-5, Table 6-3. Change the part number and value for A2R6 from 0698-4445, 5.76kΩ to 0698-3382, 5.49kΩ.

Page 8-19/8-20, Figure 8-16. Change the value of R6 from 5.76kΩ to 5.49kΩ.

This is part of the change to improve, 1) gain above 100kHz, and 2) 80kHz filter response. See change no. 28.

CHANGE NO. 30 (applies to all instruments)
(effective on serial number 2025A03786 and above).

Page 6-11, Table 6-3. Change the part number 3100-3423 to 3100-1663.

When PN 3100-3423 went from hill-and-valley to a unidex indexer it was necessary to change part numbers. The new and old PNs are completely interchangeable.

CHANGE NO. 31 (applies to all instruments)
(effective on serial number 2025A02716 and above).

Page 6-6, Table 6-3. Change the part number and value of A3C110 from 0140-0192, 68pF to 0140-0190, 39pF

Page 6-9, Table 6-3. Add cable assy 00339-61613 at the end of the listings for the A3 board.

Page 8-13/6-14, Figure 8-13. Change the value of C110 from 68pF to 39pF.

These changes improve range-to-range accuracy.

Page 6-14, Table 6-3. Add part number 5041-3124, PUSH ROD.

CHANGE NO. 32 (applies to all instruments).

Page 6-7, Table 6-3. Change the part number of A3Q100 from 1855-0360 to 1855-0458.

This change is being made because PN 1855-0360 is being discontinued by the vendor.

Page 6-6, Table 6-3. Add "SOCKET, 14 PIN IC", part number 1200-0638 to the replaceable parts list at the end of the listings for the A2 board.

Page 6-5, Table 6-3. Add "HOLD DOWN SPRING", part number 1460-1581 to the replaceable parts list after the listing of A2K1.

Prior to this change this part could only be ordered as part of the relay.

CHANGE NO. 33 (applies to all instruments)
(effective on serial number 2025A03571 and above).

Page 6-10, Table 6-3. Change the part number of A4U2 and A4U4 from 1820-0427 to 1826-0934.

A separate PN for Signetics part was established because PN 1820-0427 will no longer give the fundamental rejection required by the 339A.

CHANGE NO. 34 (applies to all instruments).

Page 6-6, Table 6-3. Change the part number of A3C16 and A3C17 from 0160-3622 to 0150-0084. The value does not change.

Change the part number and value of A2R35 from 2100-0567, 2k Ω to 2100-3252, 5k Ω .

CHANGE NO. 35 (applies to all instruments).

Page 6-3, Table 6-3. Change the part number of A1 from 00339-66501 to 00339-66511.

Page 6-4, Table 6-3. Change the part numbers of the components listed below:

A1S6 from 00339-61902 to 00339-61906
A1S7 from 00339-61903 to 00339-61907
A1S8 from 00339-61904 to 00339-61908
A2 from 00339-66502 to 00339-66512

Add to the description of part number 3100-3421 (under A1S6) "MULTIPLIER". Change the description of A1S7 from "UNITS" to "TENTHS". Add to the description of part number 3100-3422 (under A1S7) "TENTHS". Change the description of A1S8 from "TENTHS" to "UNITS".

Page 6-6, Table 6-3. Change the part number of A3 from 00339-66503 to 00339-66513.

Page 6-9, Table 6-3. Change the part numbers of the components listed below:

A3S1 from 00339-61905 to 00339-61901
A3S2 from 00339-61906 to 00339-61902
A3S3 from 00339-61907 to 00339-61903
A3S4 from 00339-61908 to 00339-61904
A3S5 from 00339-61909 to 00339-61905

Page 6-11, Table 6-3. Change the part number for A5S9 from 00339-61901 to 00339-61909.

Page 6-13, Table 6-3. Delete the part number 0370-2990 KNOB, RND W/8AR.

Page 6-14, Table 6-3. Change the part number of MP16 from 00339-00606 to 00339-00616. Add the part number 5041-0531, KEY CAP.

CHANGE NO. 36 (applies to all instruments)
(effective on serial number 1730A01956 and above).

Page 6-9, Table 6-3. Change the part number and value of A4R2 from 0757-0472, 200k Ω to 0698-4211, 158k Ω .

At the bottom of the page, change the note to read "with serial numbers 1730A00196 to 1730A00266."

Page 6-17, Figure 8-15. Change the value of R2 (feedback on U1) from 200k to 158k.

Page 6-10, Table 6-3. Change the following part numbers and values:

A4R21 from 0698-4486 24.9k to 0698-3243 178k
A4R22 from 0698-4486 24.9k to 0698-3243 178k
A4R49 from 0757-0447 16.2k to 0698-3228 49.9k
A4R51 from 0757-0447 16.2k to 0698-3228 49.9k
A4R53 from 0757-0280 1.0k to 0757-0273 3.01k

Page 6-17, Figure 8-15. Change the values on the schematic as listed above.

These changes were made to reduce internally generated 2nd harmonic distortion. These changes slow down the 339A response as shown below:

Frequency	Pull-in Time	
	Before Change	After Change
10Hz	10 sec.	12 sec.
1Hz	4 sec.	9 sec.
100kHz	3 sec.	6 sec.

CHANGE NO. 37 (applies to all instruments)
(effective on serial number 2025A03556 and above).

Page 6-13, Table 6-3. Change the following part numbers as listed:

Old	New	
00339-04001	00339-04007	KNOB, DISTORTION RANGE
00339-04002	00339-04008	KNOB, INPUT RANGE
00339-04003	00339-04009	KNOB, OSC LEVEL
00339-04004	00339-04010	KNOB, UNITS
00339-04005	00339-04011	KNOB, TENTHS
00339-04006	00339-04013	KNOB, MULTIPLIER
0370-1099	0370-3054	KNOB, POINTER
0370-2994	0370-3055	KNOB, POINTER

CHANGE NO. 38 (applies to all instruments).

In Section V, Adjustments, make the following changes:

Page 5-2. Add paragraph 5-14d to read, "Set the frequency multiplier control to each range and verify that the voltage level at A1TP8 remains negative."

Paragraph 5-17. Under Equipment Required, Low Distortion Oscillator, (-hp- Model 339A) should read "(-hp- Model 239A)."

Page 5-3, Paragraph 5-17b. On the listing INPUT RANGE...3V, the "3V" should have listed beside it, "(+10dBV)".

Paragraph 5-17c should read, "Set the controls of the 239A signal source to obtain a 1kHz (1.0 x 1k) signal. Adjust the output level for a full scale meter indication of 0 dBV on the instrument under test."

Add a paragraph between 5-17g and 5-17h that reads, "Set the 239A level controls for a -10dB indication on the 3571A."

Page 5-4. Paragraph 5-17k should read, "Adjust the output of the 239A for a full scale meter indication on the unit under test."

Paragraph 5-17a should read, "Set the frequency of the 239A to 10Hz (1.0 x 10). Adjust the output level for a full scale meter indication on the instrument under test."

Paragraph 5-17e should have added to the end of it, "This reading must be >-95dB."

Paragraph 5-18. Under Equipment Required, Low Distortion Oscillator, (-hp-Model 339A) should read "(-hp- Model 239A)".

Paragraph 5-18e should read, "Adjust the 239A signal source to provide a 10kHz, 1V signal."

Page 5-7/5-8, Figure 5-3. Switch the part designators and adjustment descriptions on A2R37 and A2R17 shown in the lower left corner of the drawing.

CHANGE NO. 39

(effective on serial numbers 2025A04006 thru 2025A04160)

Page 6-7, Table 6-3. Change the part number of A3Q100 from 1855-0458 to 1855-0269.

This change was made because the vendor discontinued the part.

CHANGE NO. 40 (applies to all instruments)

(effective on serial numbers 2025A04161 and above)

Page 6-7, Table 6-3. Change the part number of A3Q100 from 1855-0269 to 1855-0230.

This change was made because the input circuit has better distortion performance with a depletion mode MOSFET. This part should be used in all instruments.

Page 6-5, Table 6-3. Change the part number and value of A2R16 from 0757-0422, 909 ohms to 0757-0420, 750 ohms. Change the part number and value of A2R17 from 2100-3212, 200 ohms to 2100-0554, 500 ohms.

Page 8-19/8-20, Figure 8-16. Change the schematic value of R16 from 909 to 750 and that of R17 from 200 to 500.

This change was made to give control over a larger percentage of full scale deflection of the meter. This allows meters to be used from the full range of the meter specification.

CHANGE NO. 41 (applies to all instruments)

Page 6-5, Table 6-3. Under A2K1, change HOLD DOWN SPRING 1460-1581 to RELAY HIDDENSP 1460-1612.

Page 1-3, Table 1-1. In the OSCILLATOR section under *Distortion*, change the table of specifications to read as below:

10 Hz to 20 kHz	< -93 dB (0.0022%)THD
20 kHz to 30 kHz	< -85 dB (0.0056%)THD
30 kHz to 50 kHz	< -80 dB (0.01%)THD
50 kHz to 80 kHz	< -70 dB (0.032%)THD
80 kHz to 110 kHz	< -65 dB (0.056%)THD

Page 4-8, Table 4-5. Change the table to read as below.

339A Frequency	THD Specification
10 Hz	< -93 dB
100 Hz	< -93 dB
1 kHz	< -93 dB
10 kHz	< -93 dB
20 kHz	< -93 dB
30 kHz	< -85 dB
50 kHz	< -80 dB
80 kHz	< -70 dB
109 kHz	< -65 dB

Note: The change to this table reflects the specification change and a change in relative symbols which was an error in the original manuscript (-94 dB is less than, not >, -93 dB).

Page 4-10, Table 4-6. Change all "greater than" signs to "<". (See note above.)

Page 4-15, Performance Test Record, Oscillator Total Harmonic Distortion Test: Change the table to read as below:

339A Output Frequency	Calculated THD	Test Limit
10 Hz		-93 dB
100 Hz		-93 dB
1 kHz		-93 dB
10 kHz		-93 dB
20 kHz		-93 dB
30 kHz		-85 dB
50 kHz		-80 dB
80 kHz		-70 dB
109 kHz		-65 dB

MANUAL CHANGES

-hp- MODEL 339A OPTION 001

DISTORTION MEASUREMENT SET

Manual Part No. 00339-90001

I New or Revised Item

How To Use This Change Sheet.

This change sheet, unlike most, is designed to be a supplement to your 339A Operating and Service Manual rather than a list of corrections or changes. Included is a description of Option 001 for the 339A along with specifications, performance test, replaceable parts, theory of operation, and schematics which apply to instruments with Option 001 installed.

Unless noted inside this supplement, specifications, performance test, and other data published in your Operating and Service Manual for the standard -hp- 339A will apply to Option 001 instruments.

Description.

An -hp- 339A with Option 001 installed is a standard 339A Distortion Measurement Set with two additional voltmeter input ranges. These ranges are .3mV and .1mV full scale. Measurements capabilities are from .1mV rms full scale to 3mV rms full scale in a frequency range of 10Hz to 80kHz, and from .001V rms full scale to 300V rms full scale in a frequency range of 10Hz to 110kHz.

When switched to the .3mV range, the voltmeter attenuator is set to 0dB. When switched to the .1 mV range, the voltmeter attenuator remains at 0dB and 10dB of gain is added to the input amplifier. This gives the required input for full scale deflection on the front panel voltmeter.

These changes in voltmeter range have been accomplished by adding two additional positions on S4 of the Analyzer/Power Supply printed circuit assembly.

Specifications.

Table 1-1a is a supplement to Table 1-1 in the standard instrument Operating and Service Manual.

Recommended Test Equipment.

Equipment listed in Table 1-3 of the 339A Operating and Service Manual is also used on Option 001 instruments. In addition, to allow Full-Scale Accuracy and Frequency Response testing, the equipment listed in Table 1-3a is needed for Option 001 instruments.

Table 1-1a. Specifications.

Voltage Range:			
standard:	1mV rms full scale to 300V rms full scale (-60dB to +50dB full scale, meter calibrated in dBV and dBm into 500 ohm).		
option 001:	.1mV rms full scale to 300 V rms full scale (-80dB to +50dB full scale, meter calibrated in dBV and dBm into 600 ohm).		
Accuracy (% of range setting):			
standard:	20Hz to 20kHz	± 2%	@ INPUT RANGE .001V to 300V
	10Hz to 110kHz	± 4%	
option 001:	20Hz to 20kHz	± 2%	@ INPUT RANGE .001V to 300V
	10Hz to 110kHz	± 4%	
	20Hz to 20kHz	± 2%	@ INPUT RANGE 1mV and .3mV
	10Hz to 30kHz	± 4%	
	30kHz to 80kHz	+ 10%, - 30%	
Internal Noise Floor:			
option 001:	Filter Setting	Noise Level	
	30kHz	6uV	
	80kHz	8uV	

Table 1-3a. Recommended Test Equipment.

Instrument	Critical Specification	Recommended Model	Use
Resistors	100k ohm 1% metal film	-hp- Part No. 0757-0465	P
	100 ohm 1% metal film	-hp- Part No. 0757-0401	P
P = performance test			

Operation.

The ac voltmeter section of the Model 339A Option 001 measures the true rms value of input voltages from .1mV full scale to 300V full scale in fourteen ranges. Frequency range of the meter section is 10Hz to 80kHz for the .1mV and .3mV input ranges, and 10Hz to 110kHz for the .001V to 300V input ranges.

FUNCTION	INPUT LEVEL
FILTERS	OFF (out)
METER RESPONSE	VU
INPUT RANGE1mV
INPUT/GND SELECT	DIS. AN/
(center position)	

Performance Test.

All the performance test given in the standard 339A Operating and Service Manual are valid for use on instruments with Option 001. The following test is added to allow verification of Full-Scale Accuracy and Frequency Response of instruments with Option 001 installed.

Full-Scale Accuracy and Frequency Response Test (Option 001).**Equipment Required:**

ac calibrator (-hp- Model 745A)
 100k ohm resistor (-hp- Part No. 0757-0465)
 100 ohm resistor (-hp- Part No. 0757-0401)

a. Set the 339A controls as follows:

b. Set-up the test equipment as shown in Figure 4-1a.

c. Set the AC Calibrator controls for an output of .1V @ 10Hz.

d. The 339A .1mV 10Hz meter indication should be within the Test Limits listed in Table 4-1a.

e. Using the AC Calibrator, verify the 339A Voltmeter accuracy for each .1mV Test Frequency in Table 4-1a.

f. Set the 339A controls as follows:

INPUT RANGE3mV

g. Set the AC Calibrator controls for an output of .3mV @ 10Hz.

h. The 339A .3mV 10Hz meter indication should be within the Test Limits listed in Table 4-1a.

i. Using the AC Calibrator, verify the 339A Voltmeter accuracy for each .3mV Test Frequency in Table 4-1a.

Table 4-1a. Full-Scale Accuracy and Frequency Response Test Limits for Option 001.

Input Range & Input Level	FREQUENCY							
	10Hz	20Hz	100Hz	1kHz	10kHz	20kHz	30kHz	80kHz
	TEST LIMITS							
	($\pm 4\%$)	($\pm 2\%$)				($\pm 4\%$)		($\pm 10\%$, -30%)
.0001V	.000096-.000104	.000098-.000102				.000096-.000104		.000070-.00011
.0003V	.000288-.000312	.000294-.000306				.000288-.000312		.00021-.00033

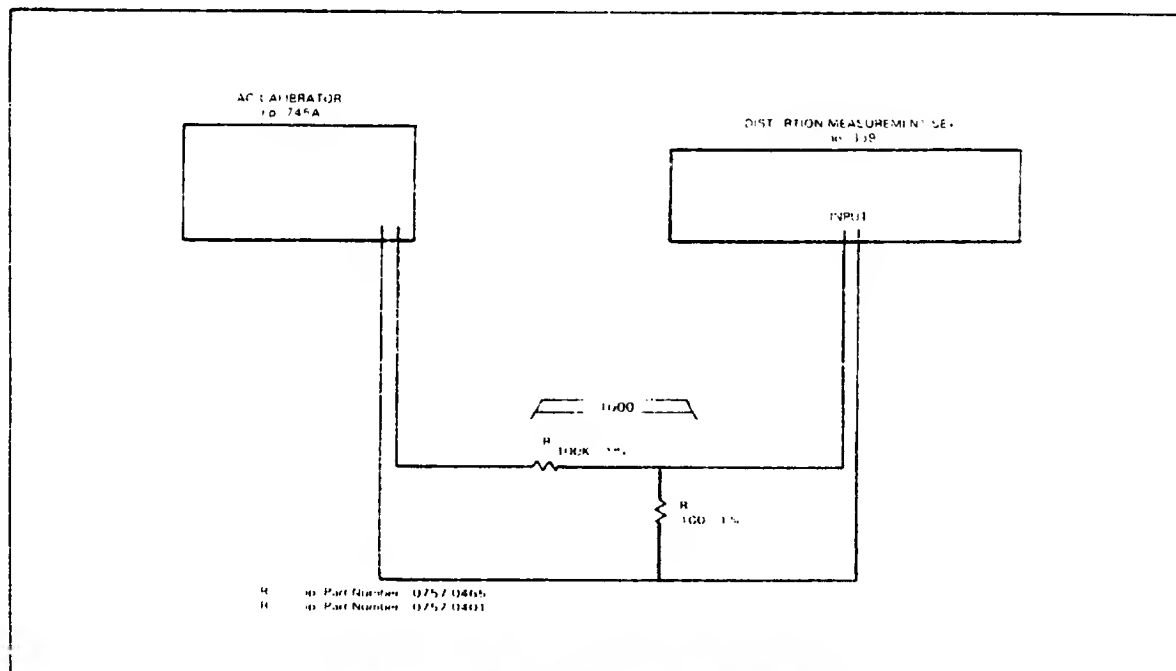


Figure 4-1a. Full-Scale Accuracy and Frequency Response Test Equipment Set-up For Option 001.

VOLTMETER PERFORMANCE (Option 001).

Full-Scale Accuracy and Frequency Response Test:				
339A Input Level	339A Input Range	339A 20Hz Reading	30kHz Reading	Test Limits ($\pm 4\%$)
.0001	.0001			.000096-.000104
.0003	.0003			.000288-.000312

Input Level	339A Input Range	339A 20Hz Reading	339A 100Hz Reading	339A 1kHz Reading	339A 10kHz Reading	339A 20kHz Reading	Test Limits ($\pm 2\%$)
.0001	.0001						.000098-.000102
.0003	.0003						.000294-.000306

Input Level	339A Input Range	339A 80kHz Reading	Test Limits ($\pm 10\%$, -30%)
.0001	.0001		.000070-.00011
.0003	.0003		.00021 -.00033

Replaceable Parts:

The -hp- 339A Distortion Measurement Set with option 001 installed uses an A53 Analyzer/Power Supply assembly instead of an A3 Analyzer/Power Supply. The boards are electrically the same with the following exceptions:

1. S4 has been changed to accommodate the two additional voltmeter input ranges. R127, 50.51 Ω , R126, 10k Ω and C126, 100pF are included as part of the switch assembly.

2. C323, C324, and R314 have changed values.

Table 6-3a. Replaceable Parts

Reference Designator	-hp- Part No.	Qty	Description
A53	00339-66553	1	Analyzer/Power Supply Assy.
S4	00339-61914	1	Switch Assy, Rotary
	3100-1657	1	Switch, Rotary
R126	0757-0442	1	Resistor-fxd 10k .01 1/8
C126	0160-4801	1	Capacitor-fxd 100pF 100V
R127	0699-0053	1	Resistor-fxd 50.51 Ω .25
	00339-04014	1	Knob Assy, INPUT RANGE
	1500-0580	2	Coupler, Flex
	3130-0552	1	Detent
C323	0180-0339	2	Capacitor-fxd 50uF 16V
C324	0180-0339	2	Capacitor-fxd 50uF 16V
R314	0683-1025	1	Resistor-fxd 1k .05 1/4

Theory of Operation

The Input Amplifier operation for instruments with option 001 is the same as that of standard instruments except that two simple modifications have been added to allow for the two additional input ranges.

First, a fourteen position switch replaces the twelve position switch of the standard instrument. This allows the output attenuation to go to 0dB when either .1mV or .3mV input ranges of the voltmeter are selected.

Second, R127 (a 50.51 Ω resistor) is included as part of the fourteen position switch to add 10dB of gain to the input amplifier when the .1mV input range of the voltmeter is selected.

Other A53 board changes:

The value of R314 decreased to 1k Ω to reduce 120Hz pulses picked up on the .1mV scale (due to imbalance in power supply bypassing).

The values of C323 and C324 are increased to improve bypassing and stability in the 25kHz to 50kHz region.


C126 and R126 provide input compensation needed to prevent oscillation on the 0.1mV range with a high impedance source. They cancel the negative input impedance effects of U100.

Figure 8-2A is a simplified block diagram of the input amplifier of Option 001 instruments. The schematic is a revised version of Figure 8-13 found in the standard instrument Operating and Service Manual. It shows the electrical modifications performed to generate an -hp- 339A Option 001 instrument.


Other board changes:

Because a different (shaft) coupler is used on the INPUT RANGE assembly, C40 on the oscillator board needs to be repositioned as per figure below. When ordering a replacement oscillator assembly for the 339A option 001, use part number 00339-66551. This part will come with C40 in the proper place.

00339-66511

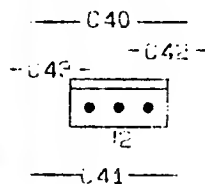

00339-66551

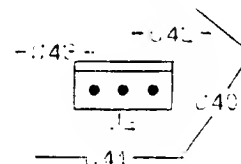


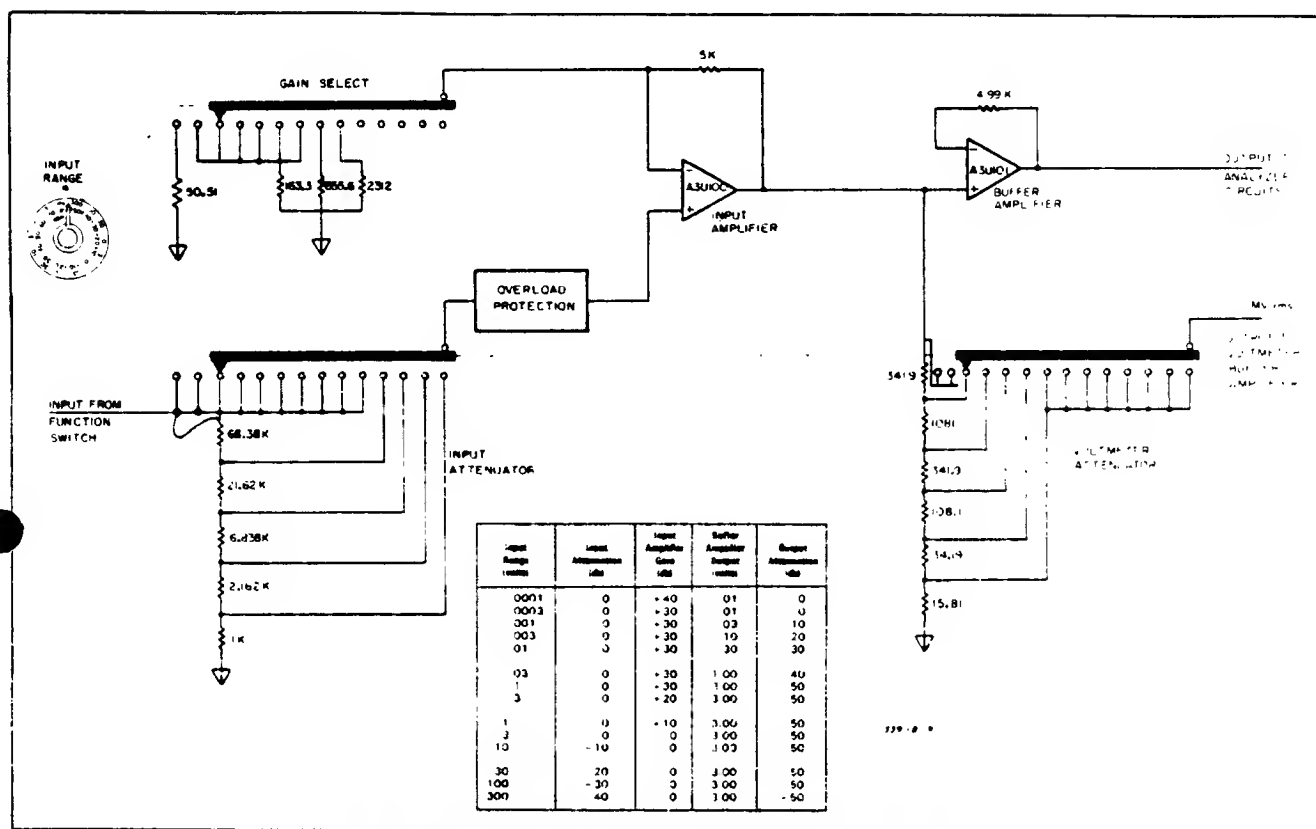


Figure 8-2a. Simplified Input Amplifier Schematic For Option 001 Instruments.

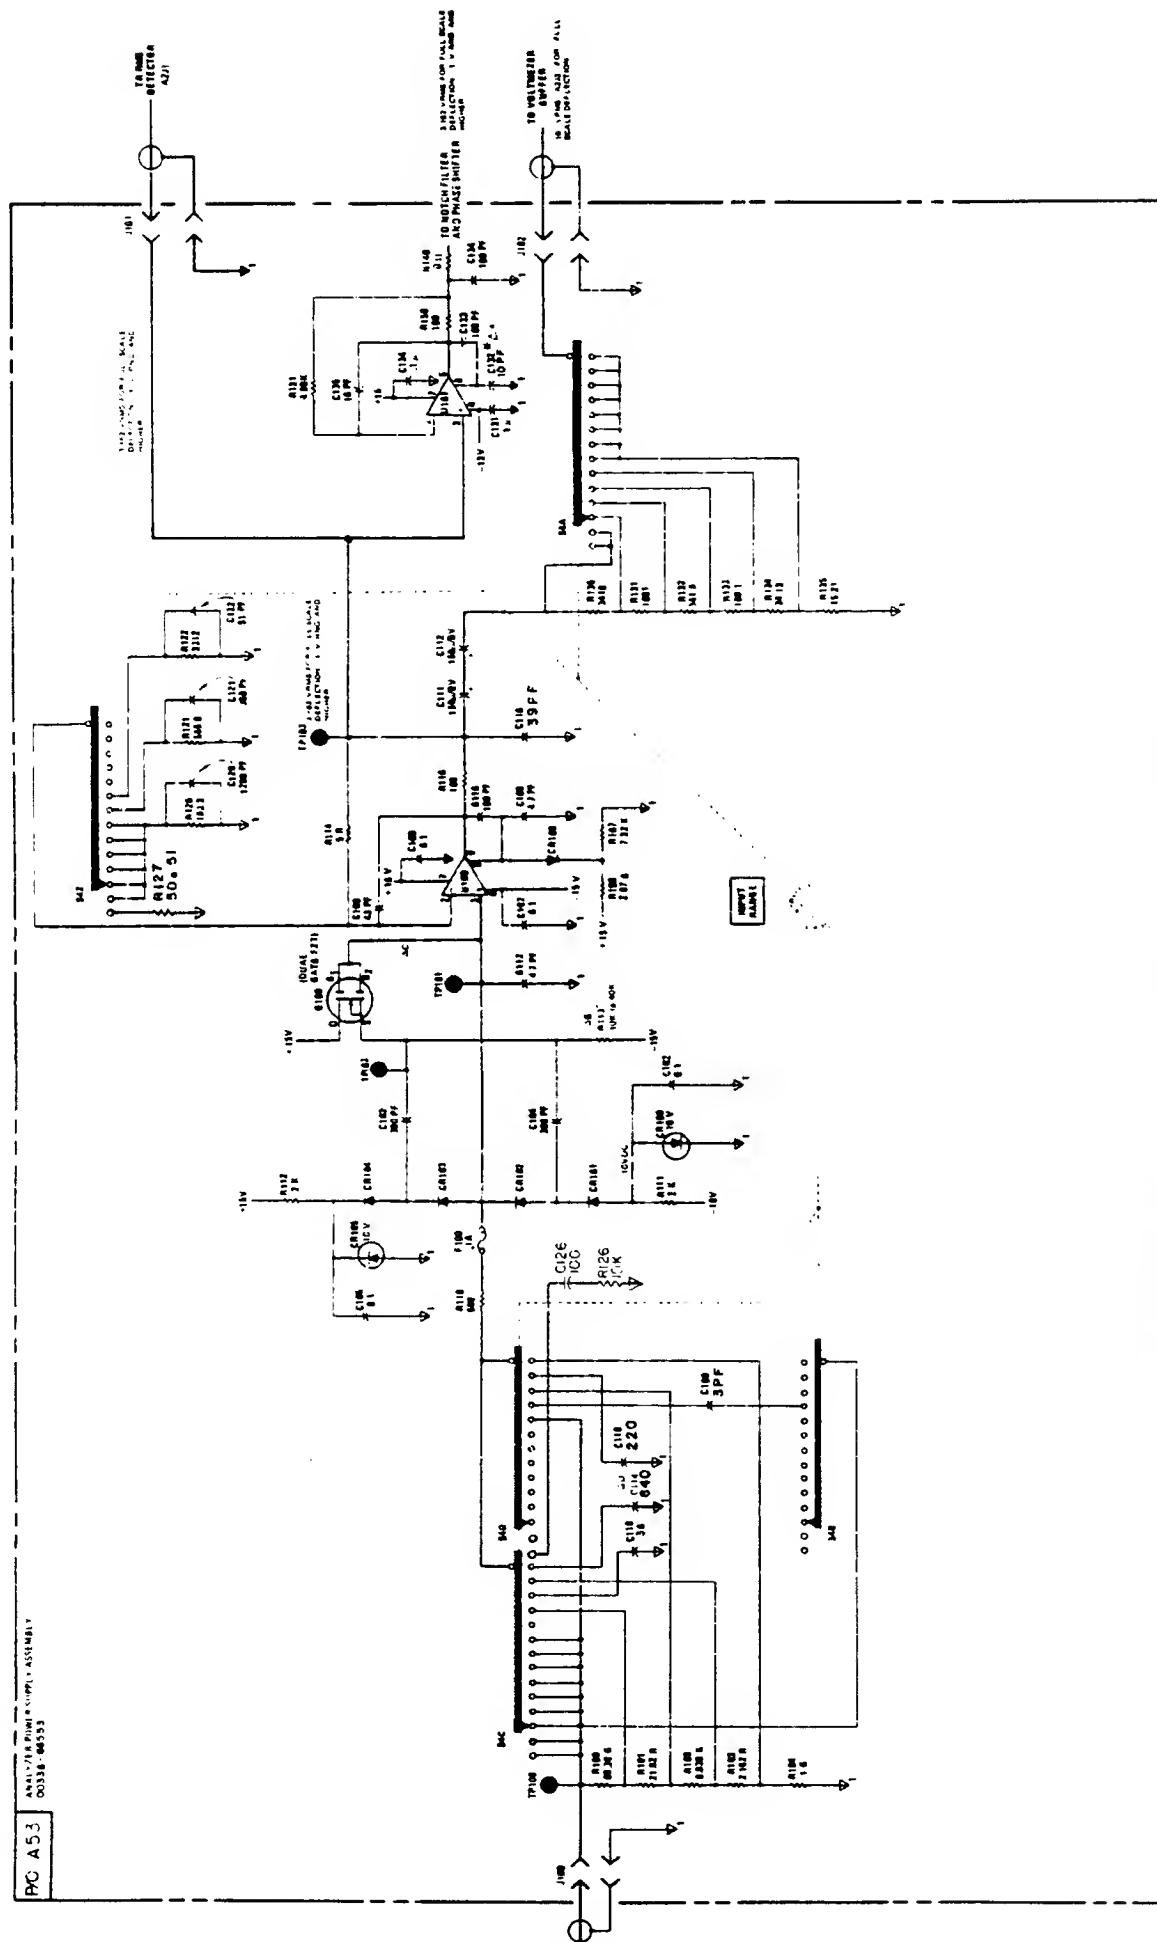

p/o Figure 8-13. Input Attenuator and Input Amplifier Option 001 Instruments.

K4XL's BAMA

This manual is provided **FREE OF CHARGE** from the “BoatAnchor Manual Archive” as a service to the Boatanchor community.

It was uploaded by someone who wanted to help you repair and maintain your equipment.

If you paid anyone other than BAMA for this manual, you paid someone who is making a profit from the free labor of others without asking their permission.

You may pass on copies of this manual to anyone who needs it. But do it without charge.

Thousands of files are available without charge from BAMA. Visit us at <http://bama.sbc.edu>